

Deceleration sensor 0 Point Calibration

Function Description:


Use this function after replacing the transmission or the ECU or transmission related parts.


Attention:


Keep the vehicle level and stable during the calibration, Gear Selector is in PARK.


Instruction:

1).comprises the following steps:

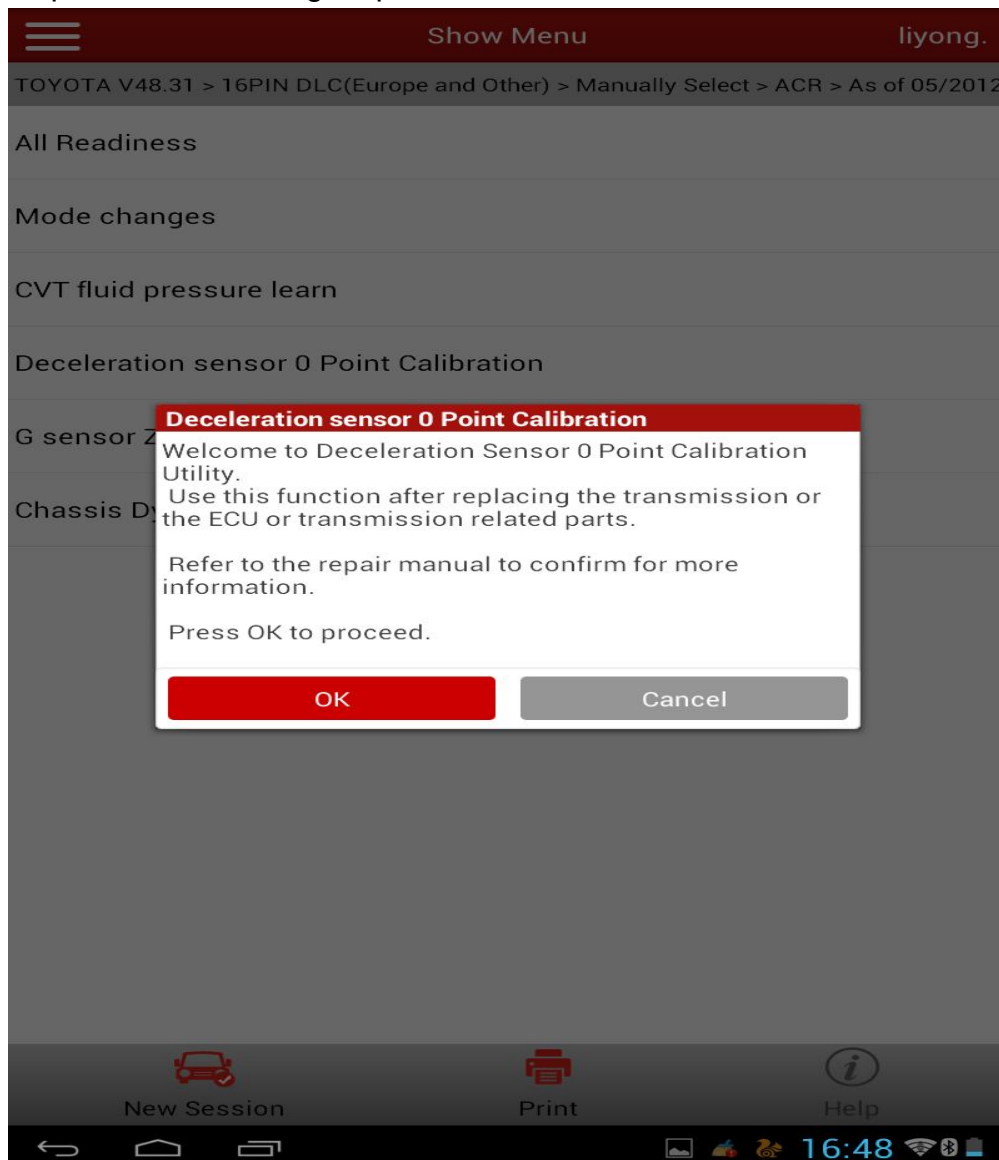

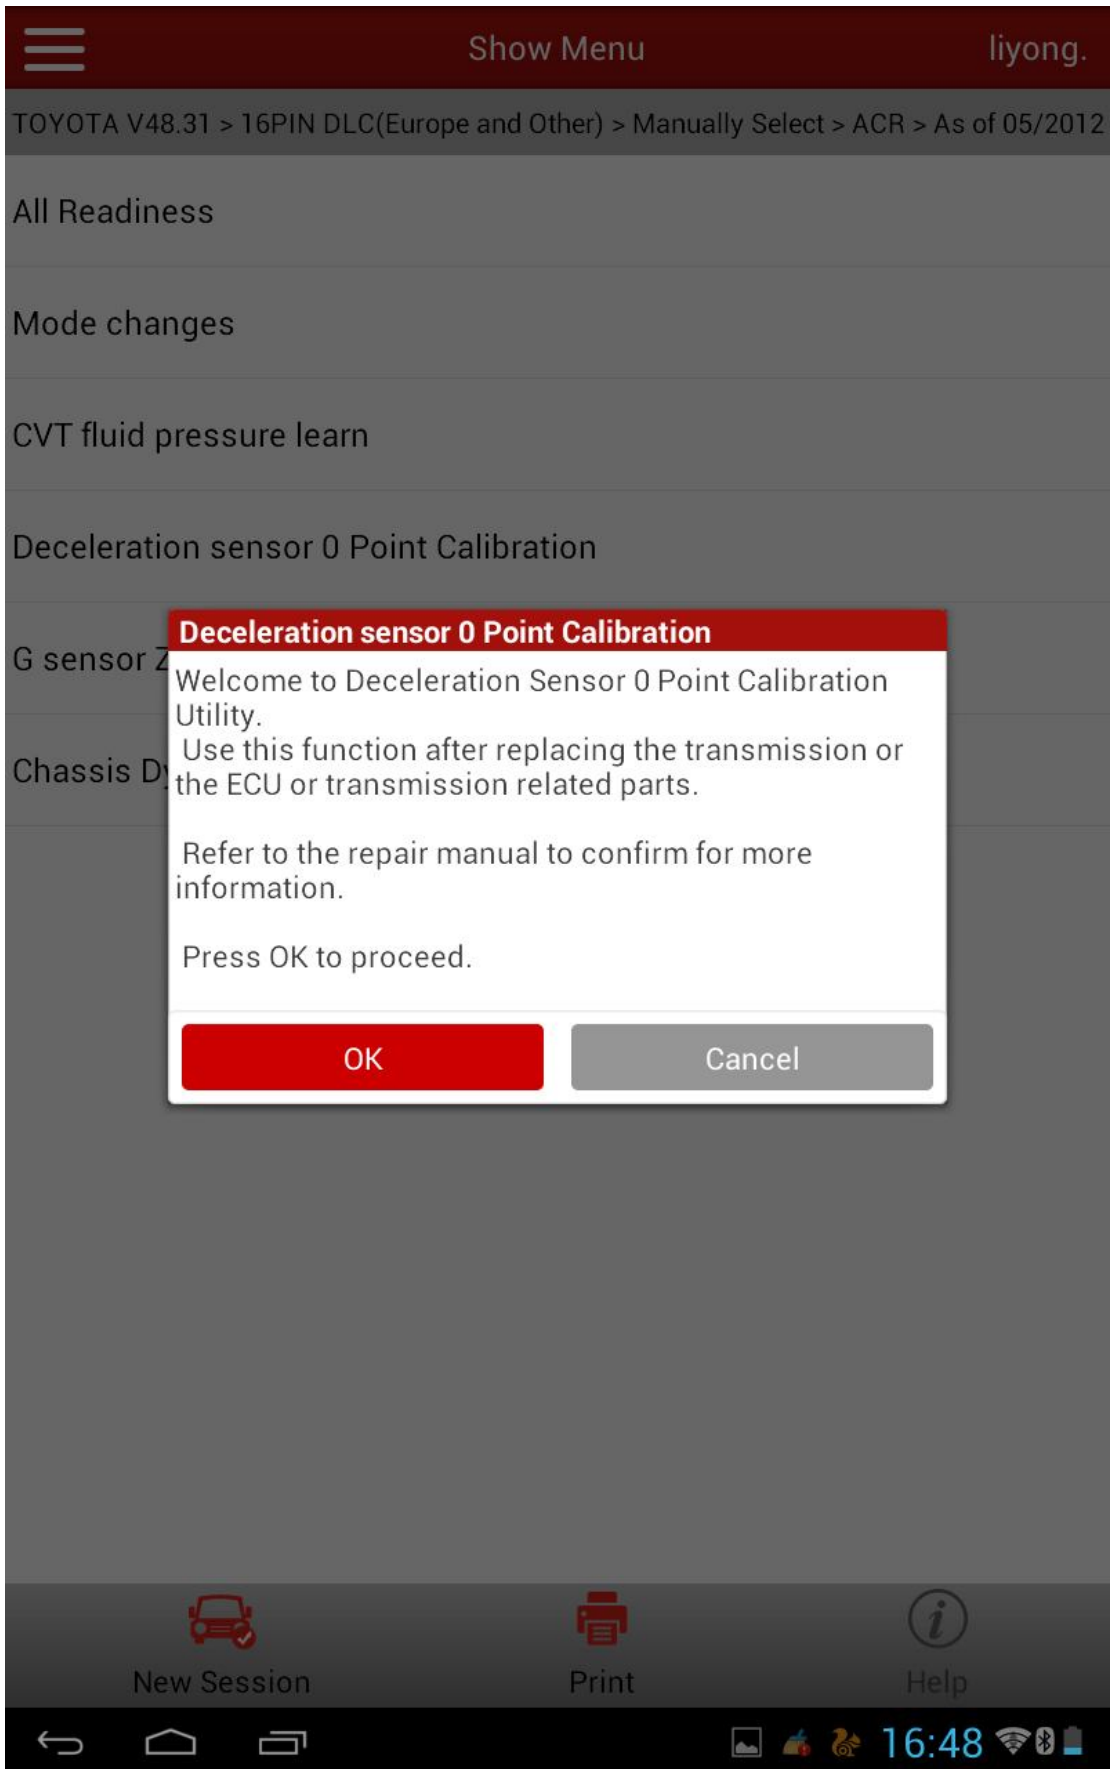

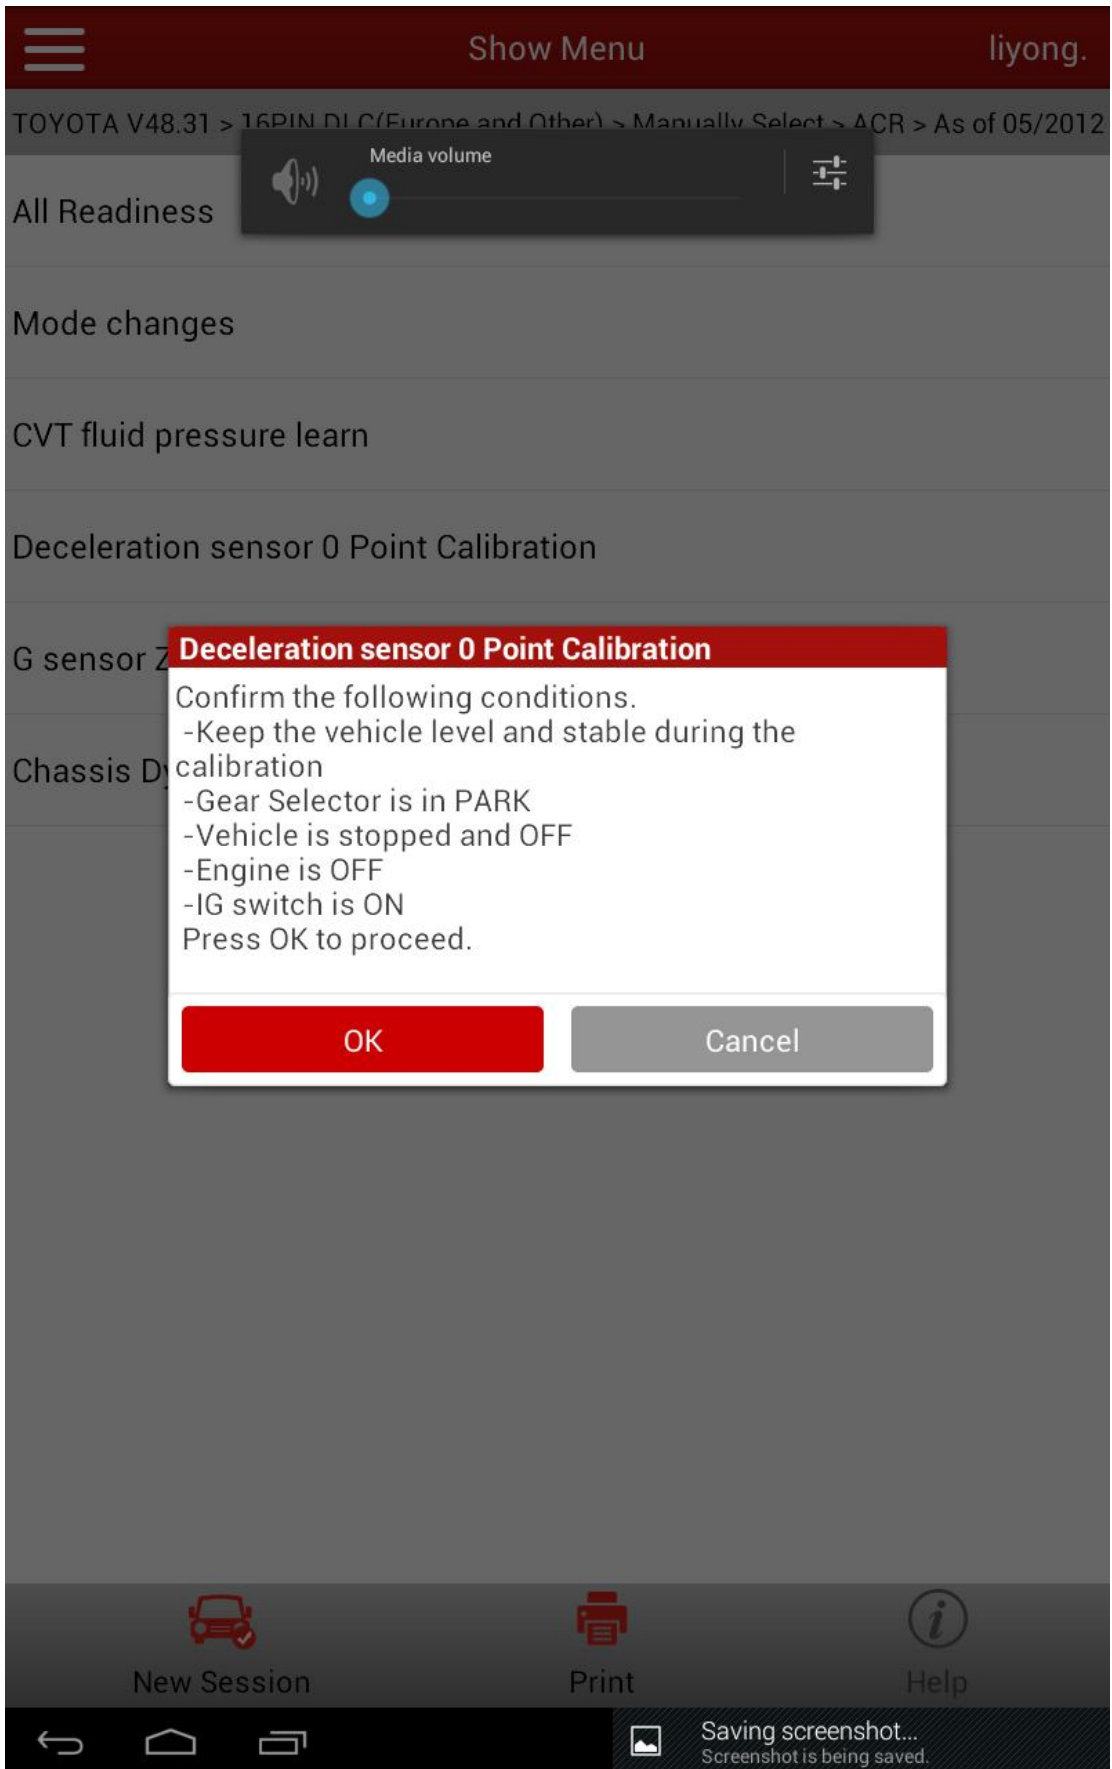

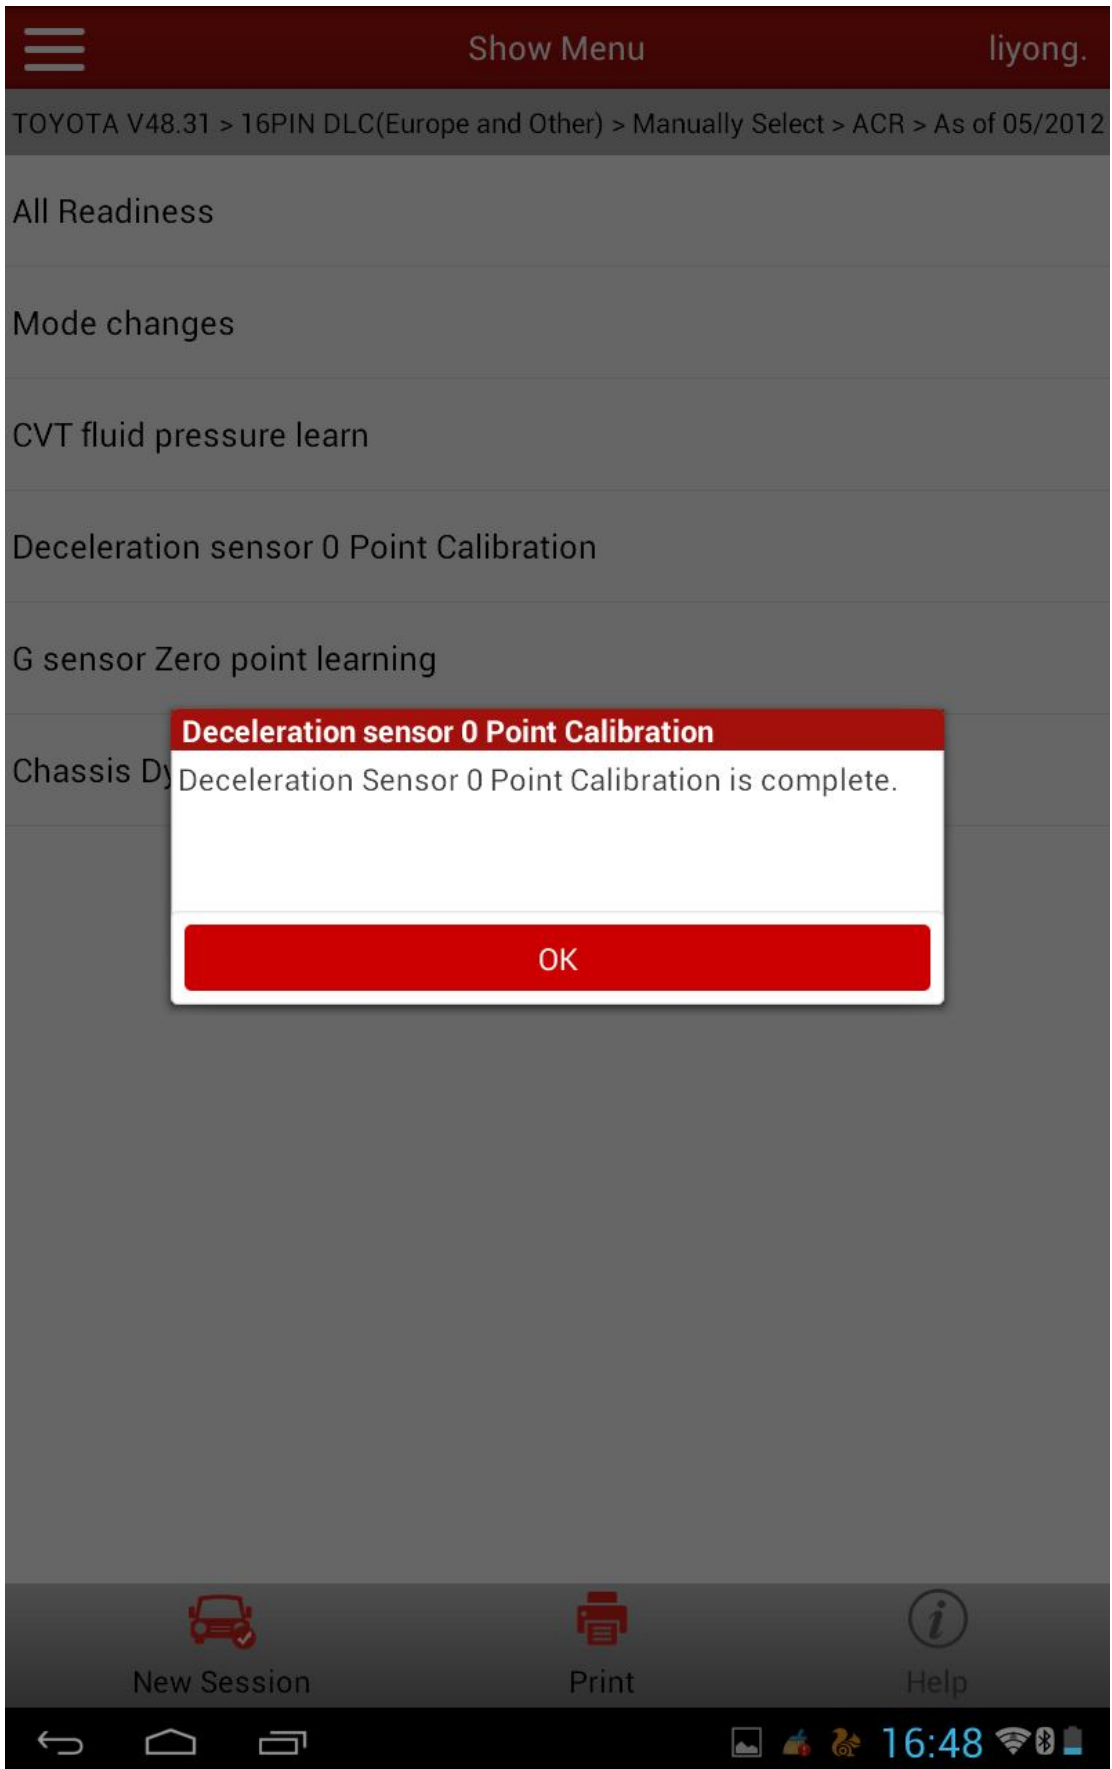

Declare:

The document is owned by the Shenzhen City, the copyright of the LAUNCH Technologies Inc, and no individual or entity shall be quoted or reproduced without consent.

LAUNCH