On how to update the system of X-431 PRO3

Why to update:


To fix the bug of poor touch via system update.

Note:


The size of the system update file is about 525MB and the update may take a long time to finish. To perform a successful update, please make sure the X-431 PRO3 has a strong and stable Wi-Fi signal.

How to update:


- 1). Follow the steps below to proceed:
- 2). Locate the [Settings] on the home screen.
- 3). Tap it to enter the system setting screen.

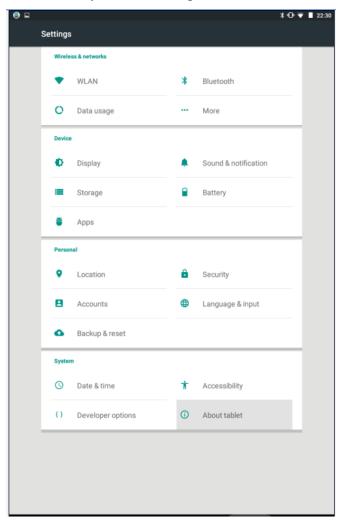


4). Tap "About tablet" -> "Software version" to confirm if it is TB2-X30F-160111. If yes, it is older than TB2-X30F-160331, a system update is required. In version number TB2-X30F-160111, the last six numbers stand for the software release date, namely 11th, Jan, 2016.

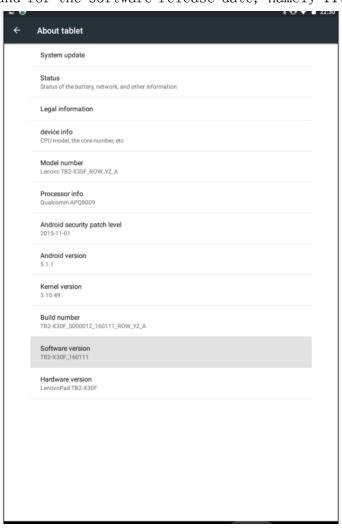

5). Tap the "System update" on the top of the screen;

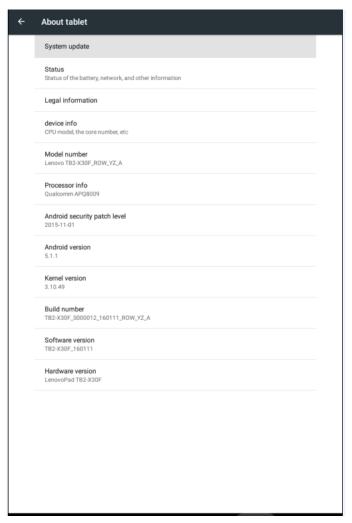


6). The screen displays as below. Carefully read the warning items.

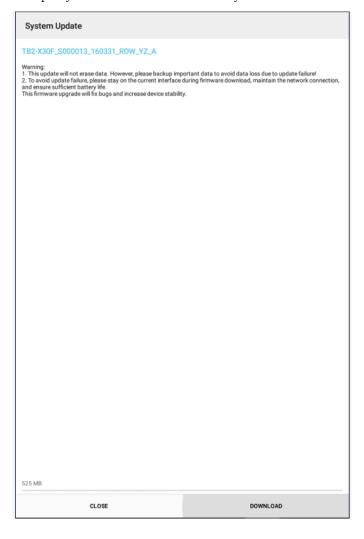

7). After reading, tap "DOWNLOAD" to start downloading.

 This update will not erase data. However, please backup important data to avoid data loss due to 2. To avoid update failure, please stay on the current interface during firmware download, maintain and ensure sufficient battery life. 	the network connection,
This firmware upgrade will fix bugs and increase device stability.	
525 MB	99%


8). A message prompting "your device will reboot to install the new software" appears, tap "OK" to continue.

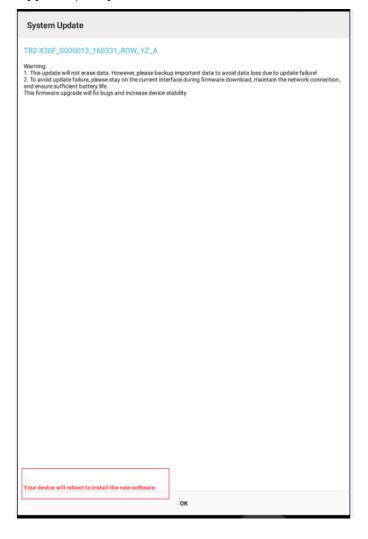

9). After rebooting, a screen similar to the following will appear:



10). After the system is updated, the tablet will automatically reboot. Repeat Steps 1-3. Go to "Settings" -> "About tablet" -> "Software version" to check whether the system version is TB2-X30F-160331. If yes, the update is complete now.

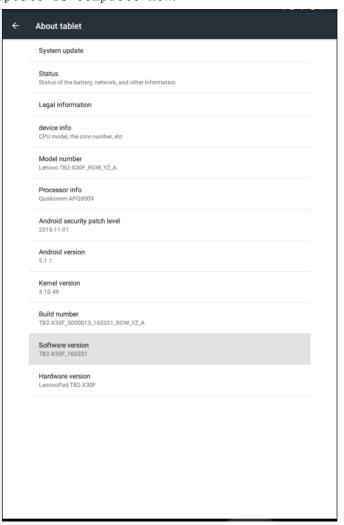

Disclaimer:

Copyright © 2016 by LAUNCH TECH. CO., LTD. All rights reserved. No part of this file may be reproduced, or transmitted in any form or by any means without the prior written permission of LAUNCH.