

LAUNCH

Honda GAC_Replacement_Brake_Pad_Operation_Guide VEZEL_2017

Software Version:


V47.61

Vehicle:


Honda VEZEL 2017

Operation guide:

1. Enter the "Electronic Parking Brake" system and select "Special Function", as shown below:

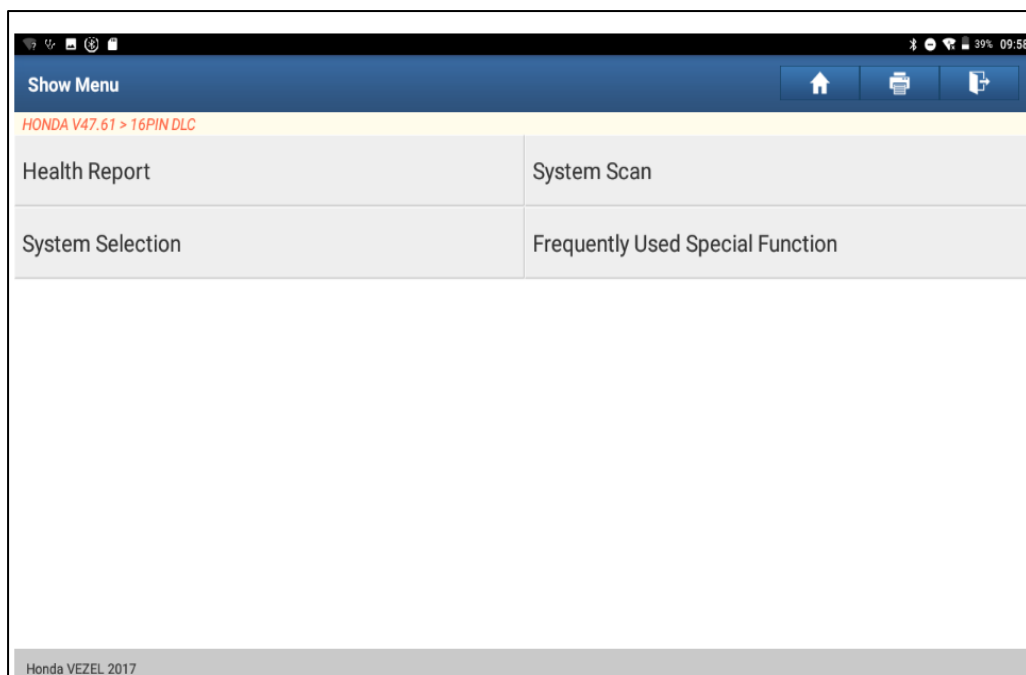


2. Select "Brake Pad Maintenance Mode", as shown below.

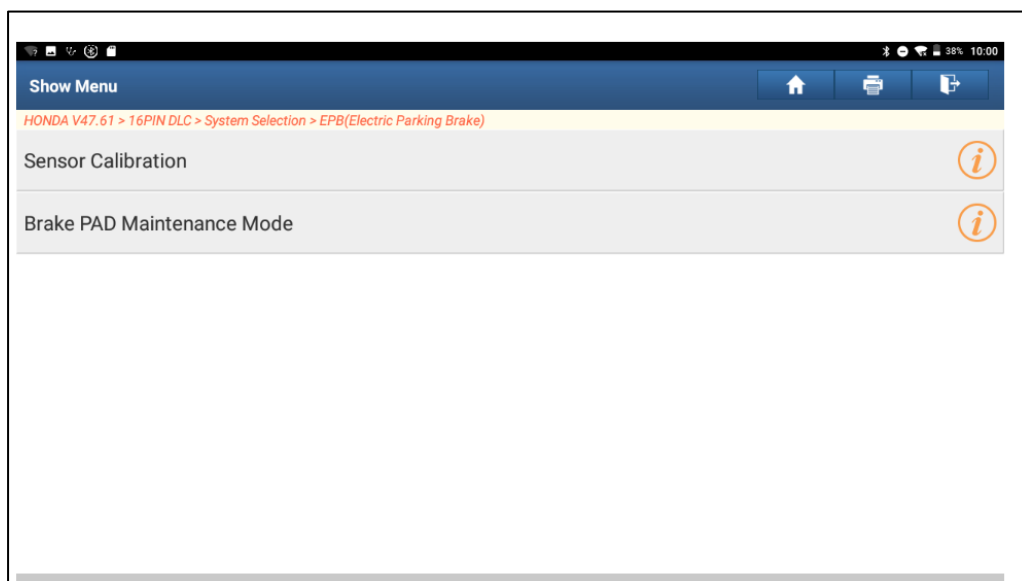


LAUNCH

3. Release the parking brake, confirm that all conditions are met, and click "OK", as shown below:

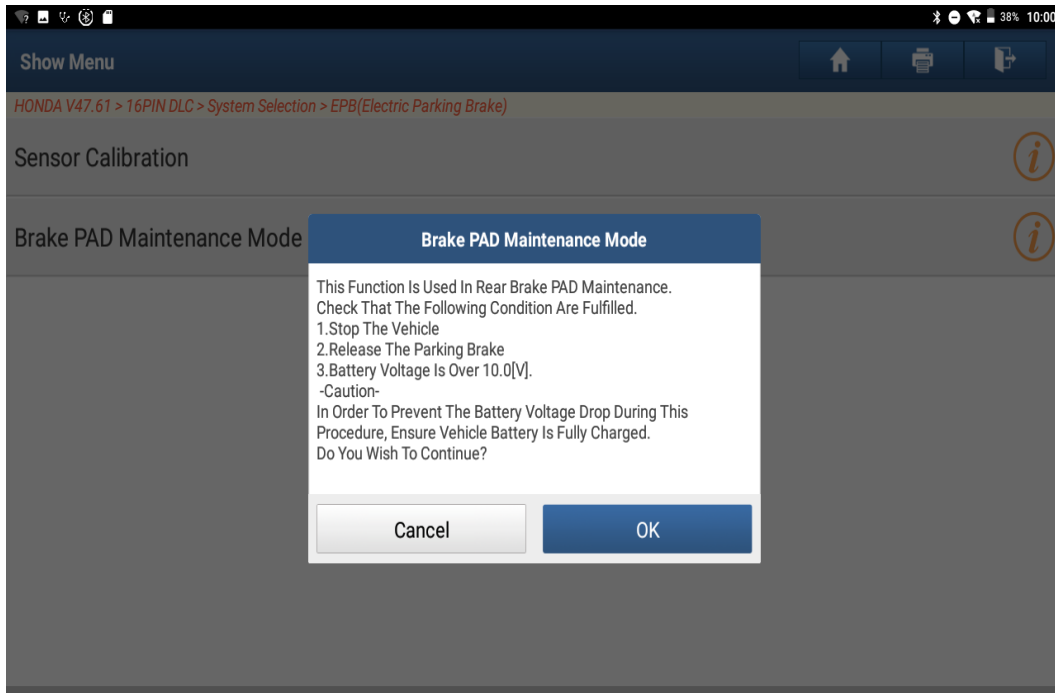


4. Click "OK" to execute the brake pad replacement mode, as shown below:

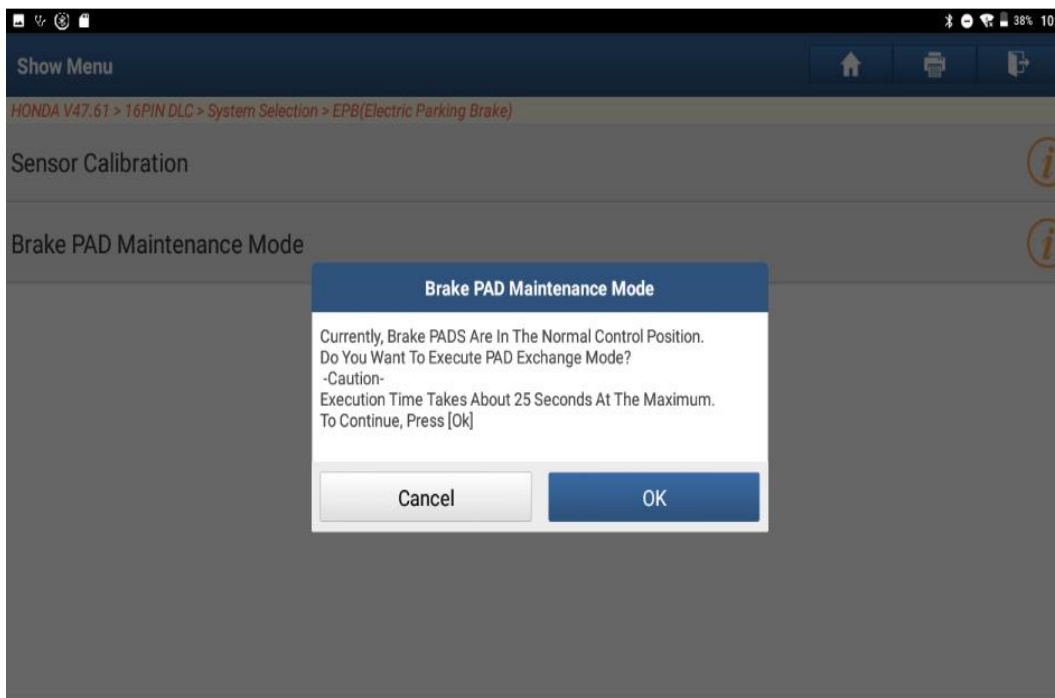


LAUNCH

5. During the transition to the friction plate replacement mode point, as shown below:

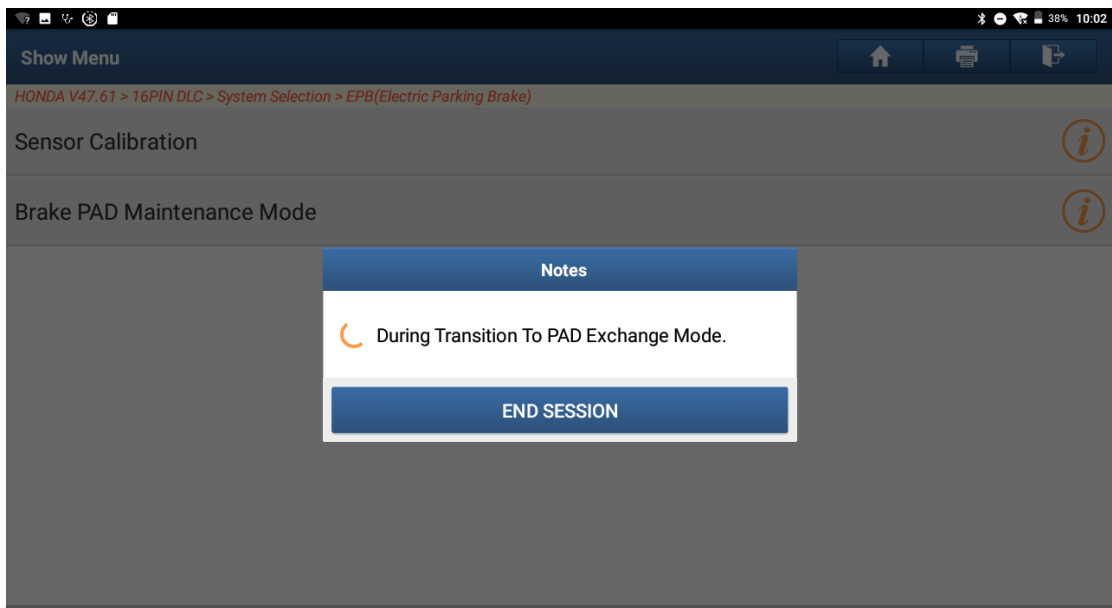


6. After the maintenance of the rear friction plate is completed, click "OK", as shown below:

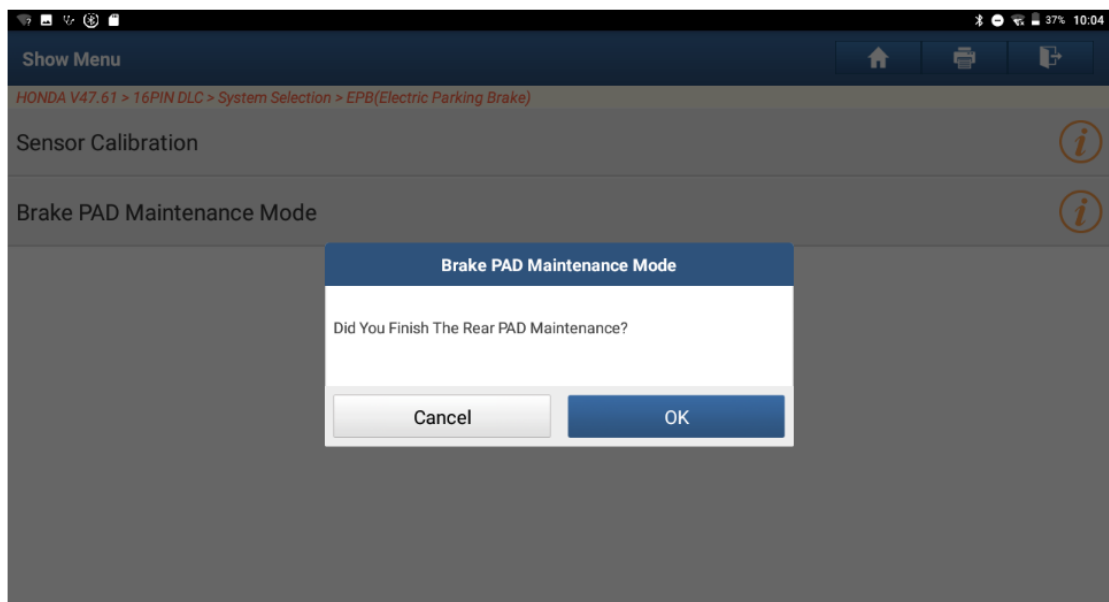


LAUNCH

7. Click "OK", the brake pad position returns to the normal brake pad position, as follows
Figure:

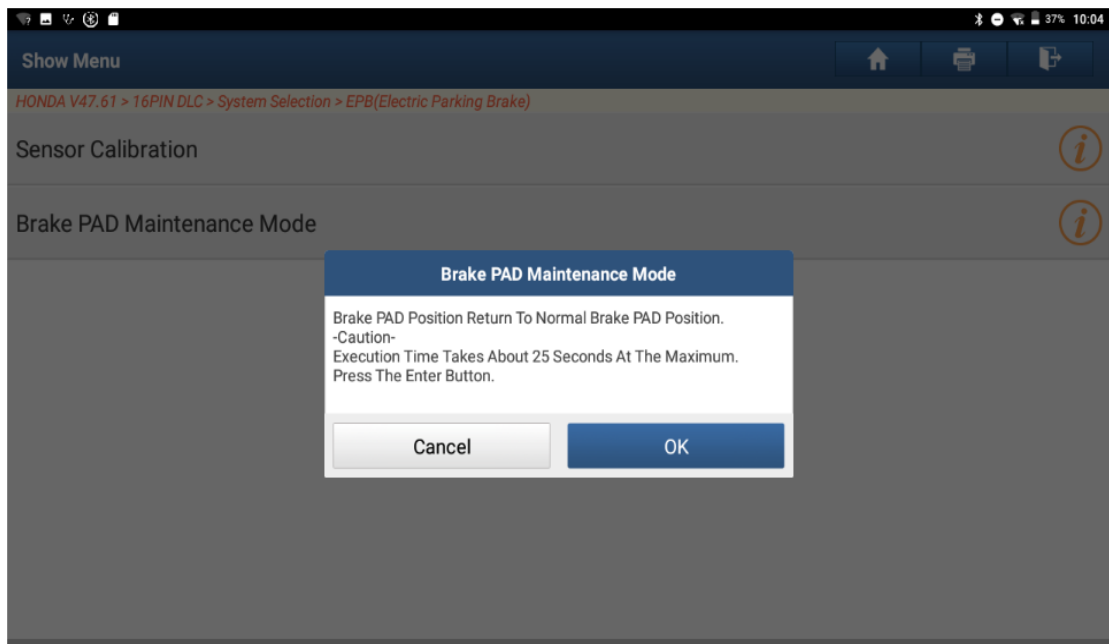


8. In the process of switching to the normal friction plate position, as shown below:

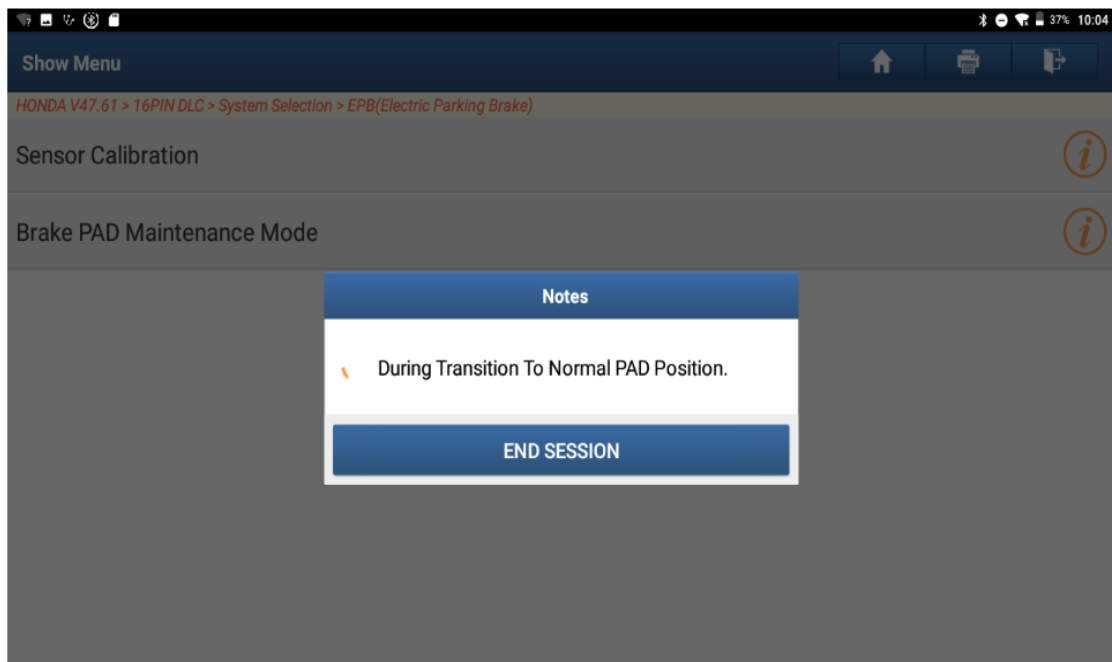

LAUNCH

9. The EPB (Electronic Parking Brake) system is switched to the normal brake pad position, the function is completed, click "OK", as shown below:

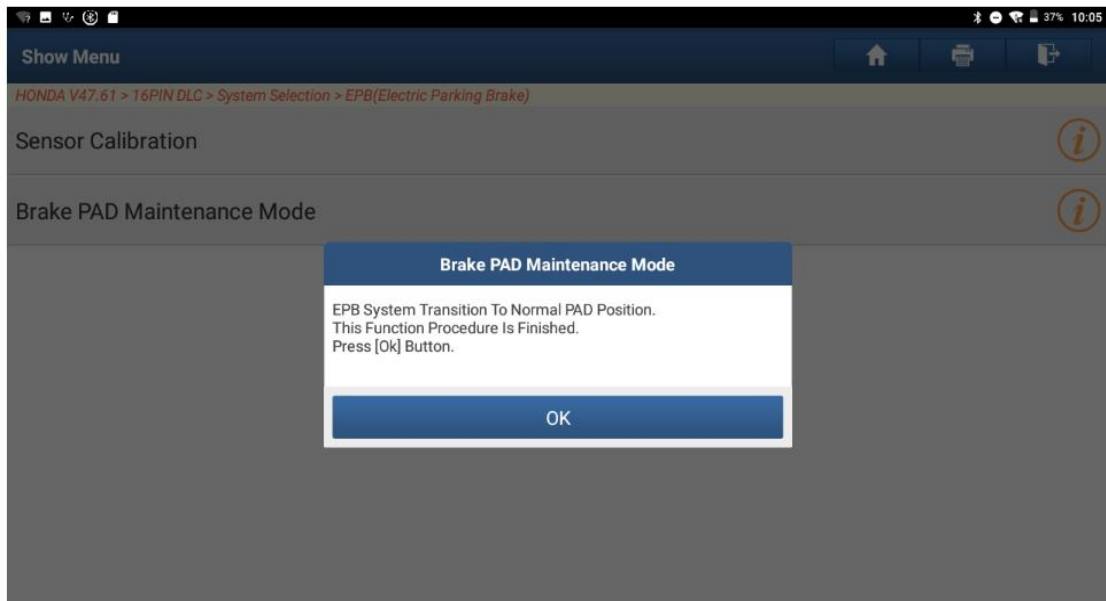

10. The operation steps are completed.