

BMW driver Seat_Calibration


After you change the driver seat spare part or there is fault code about Seat, You need to perform the Seat Calibration.




LAUNCH

Steps:


1. Enter Seat Calibration.

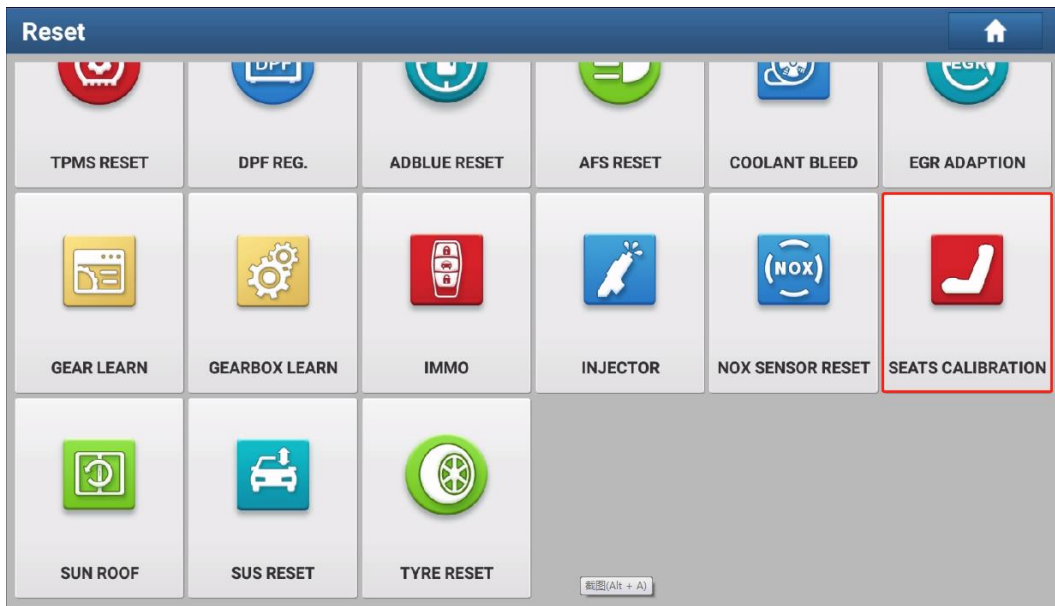


2. Start diagnosing.

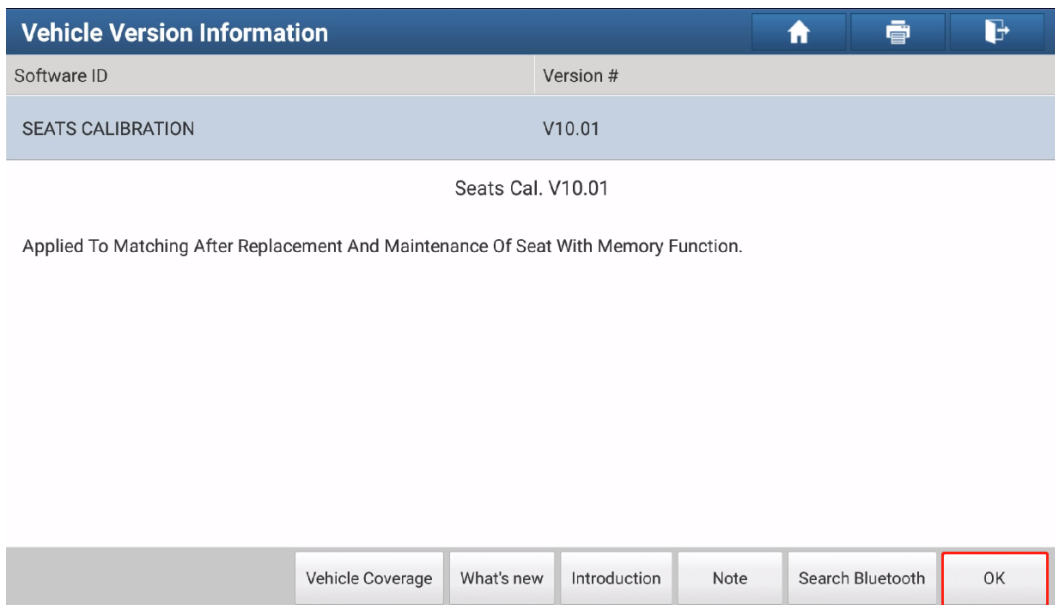


3. Select "Seat Standardization, Driver's Seat".

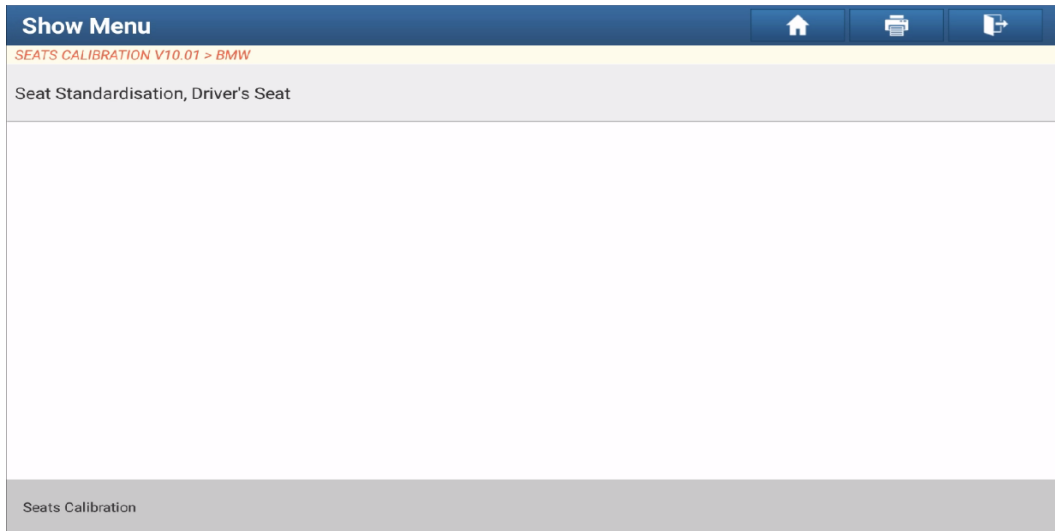


4. After read system info, please click F1 to continue.

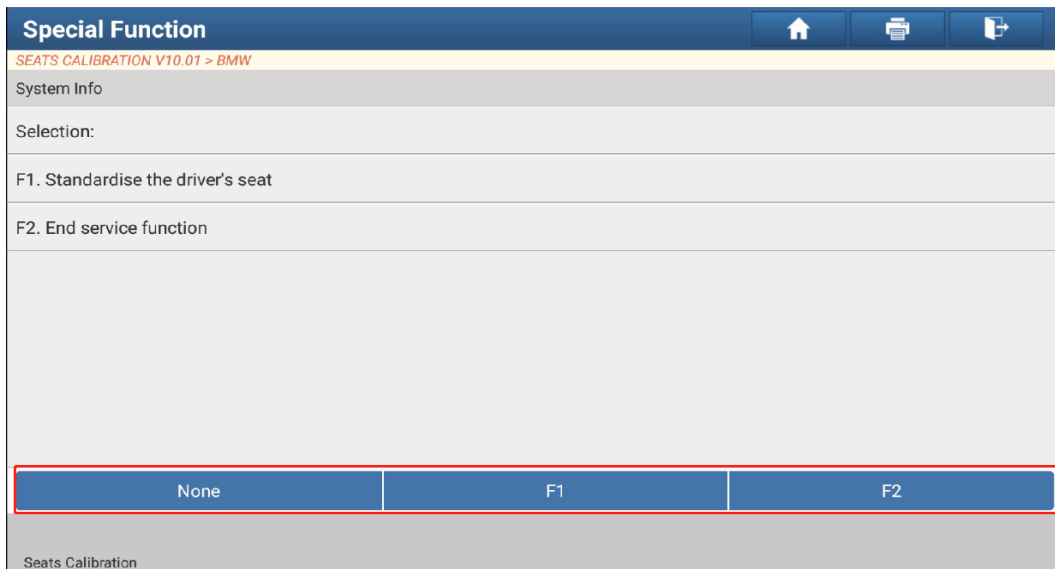


5. Read the text carefully, and click "continue" .

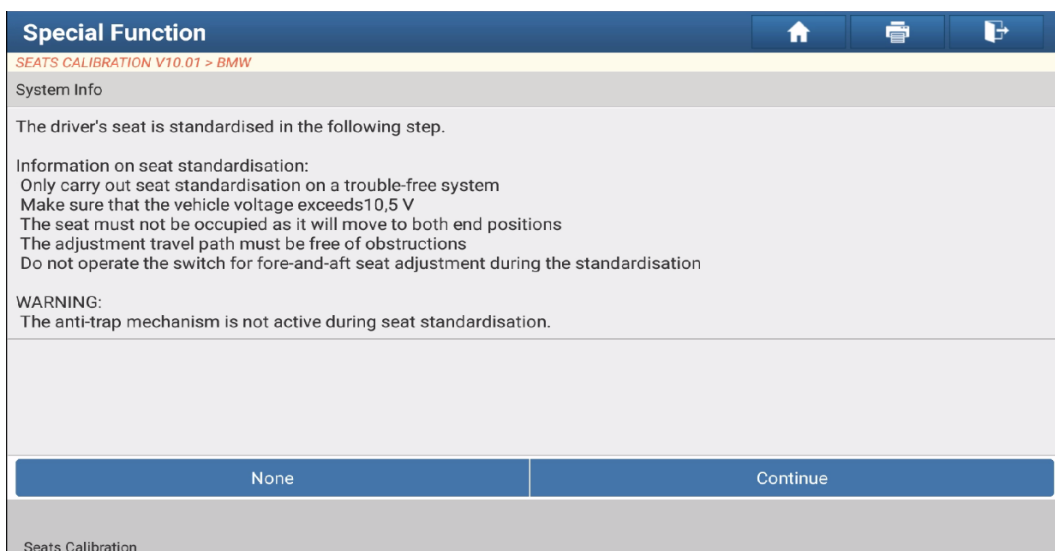


6. Read the text carefully, do as the guide, and click “continue” .

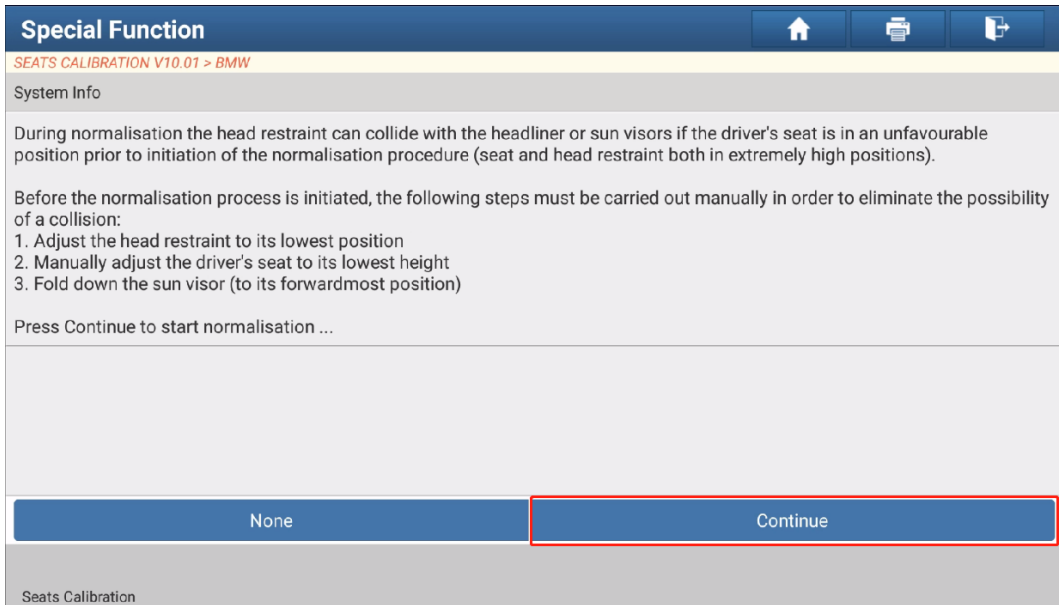

7. It is calibrated, and the seat will move automatically, toward to back or forward.

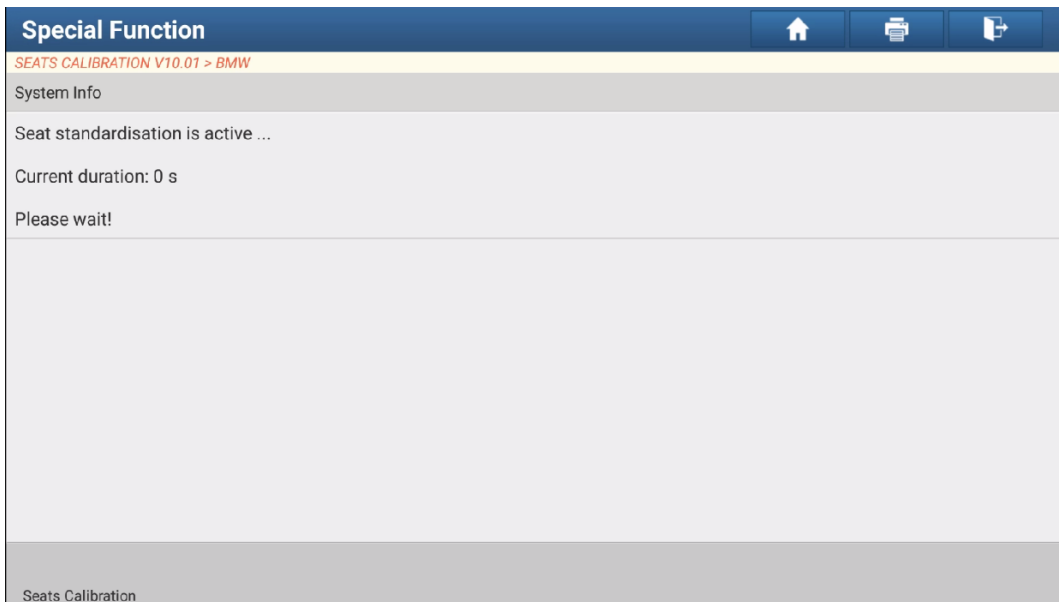

8. Calibration Succeed.

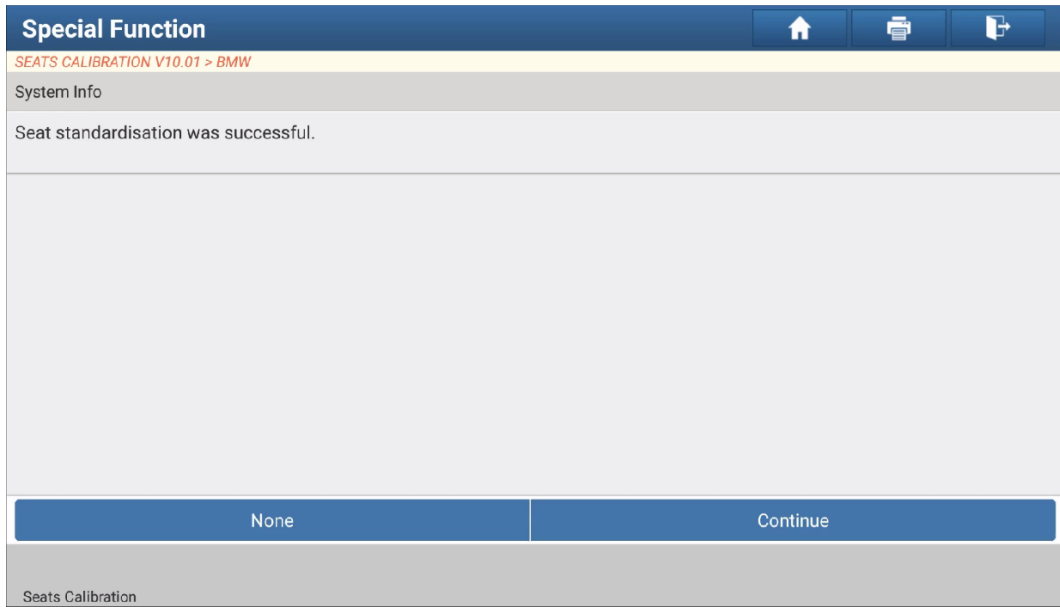

The end.