

## Honda Electronic Throttle Position Learning


### Description:

After we clean the throttle or replace the throttle, we need to do the throttle position learning.




### Steps:

1. Enter Honda software.

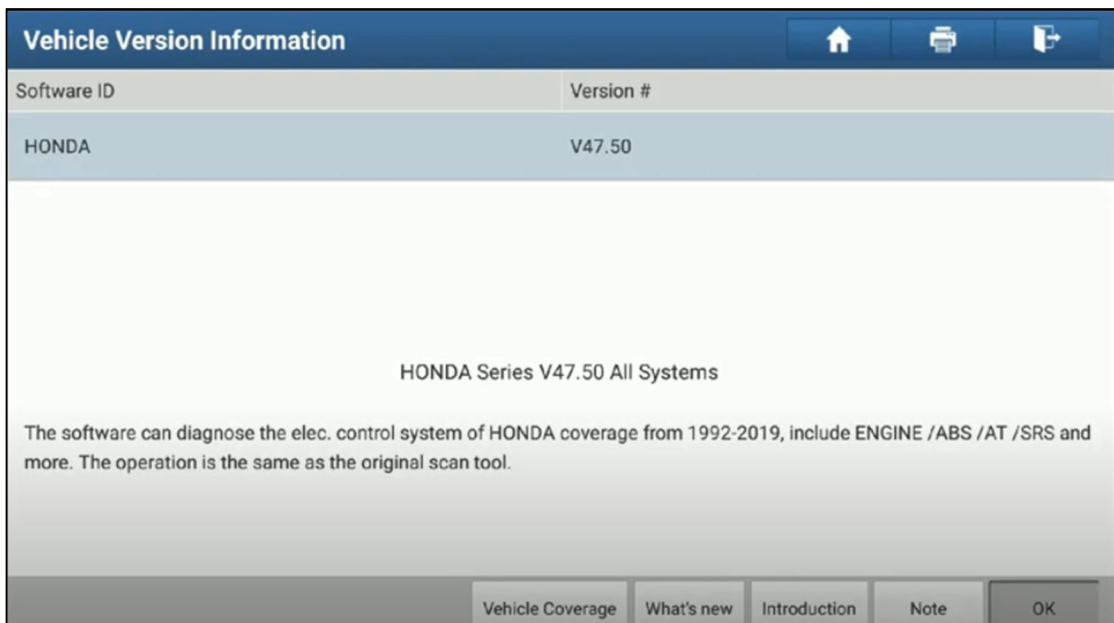


# LAUNCH

- Choose the right DLC and confirm the vehicle info.

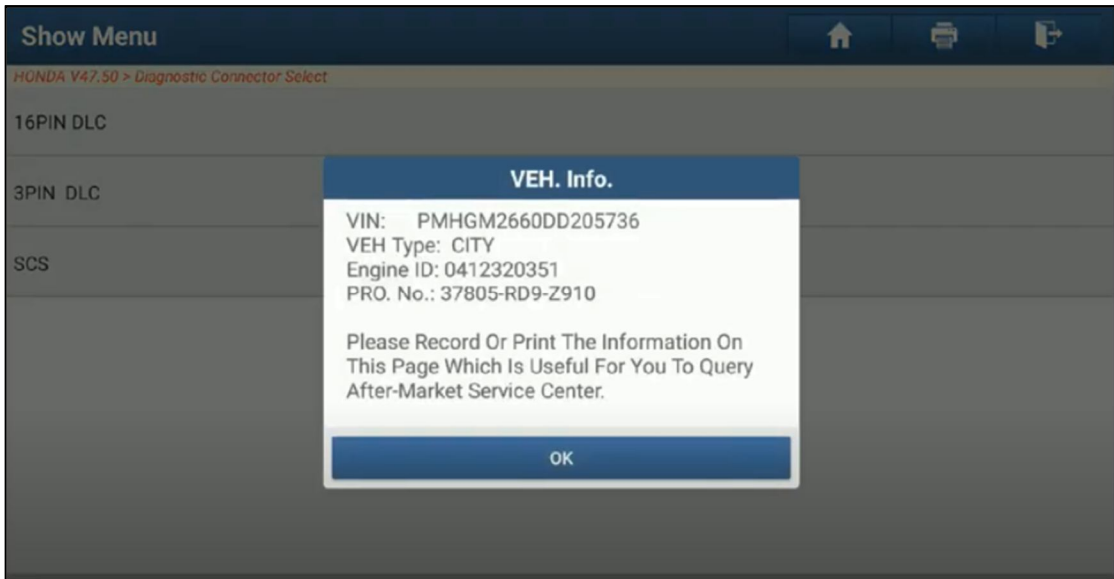

- Choose "System Selection">>"PGM-FI/Diesel(Engine System)".

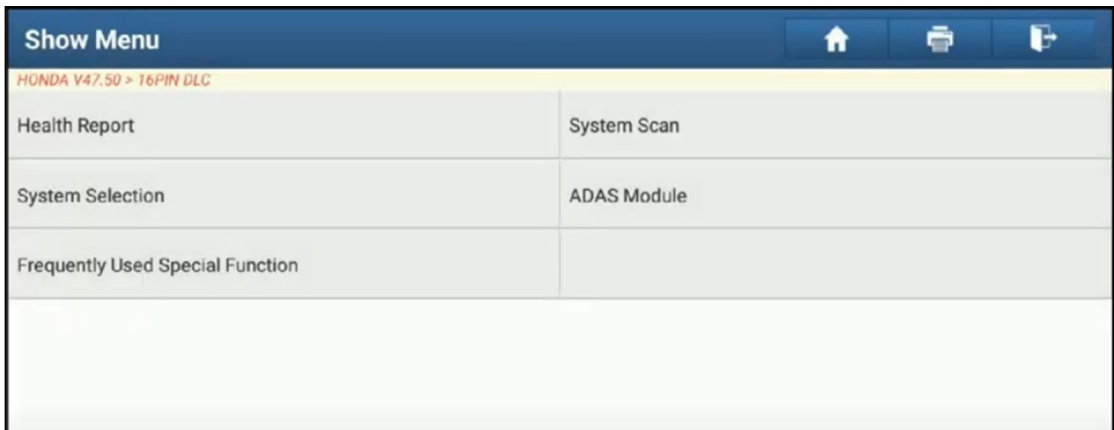

# LAUNCH

4. Read DTC and make sure there is no trouble code.


Fault Report	
<i>HONDA V47.50 &gt; 16PIN DLC &gt; System Selection &gt; PGM-FI/Diesel(Engine System)</i>	
System Name	Test Result
PGM-FI/Diesel(Engine System)	No Trouble Code
Exit	

5. Then enter "special function" and select "Throttle Learning".


Show Menu	
<i>HONDA V47.50 &gt; 16PIN DLC &gt; System Selection &gt; PGM-FI/Diesel(Engine System)</i>	
Write VIN	Replace ECM/PCM ⓘ
Crank (CKP) Pattern	Throttle Learning
Readiness Codes	Shipping Mode Release

# LAUNCH

6. Follow the tips stop engine, ensure the gear shift is in neutral, set the parking brake. And select "OK" after all is done.


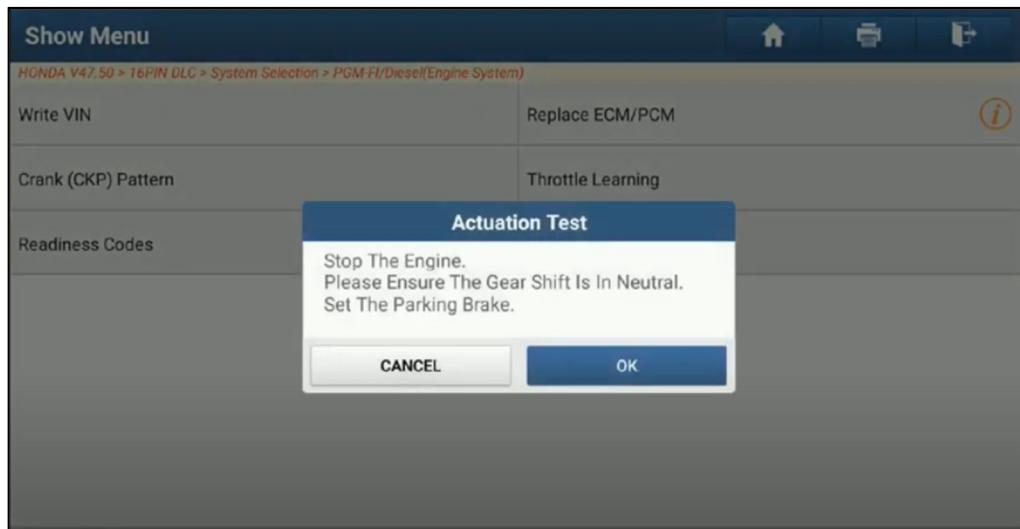


7. please clicks "OK" to continue.

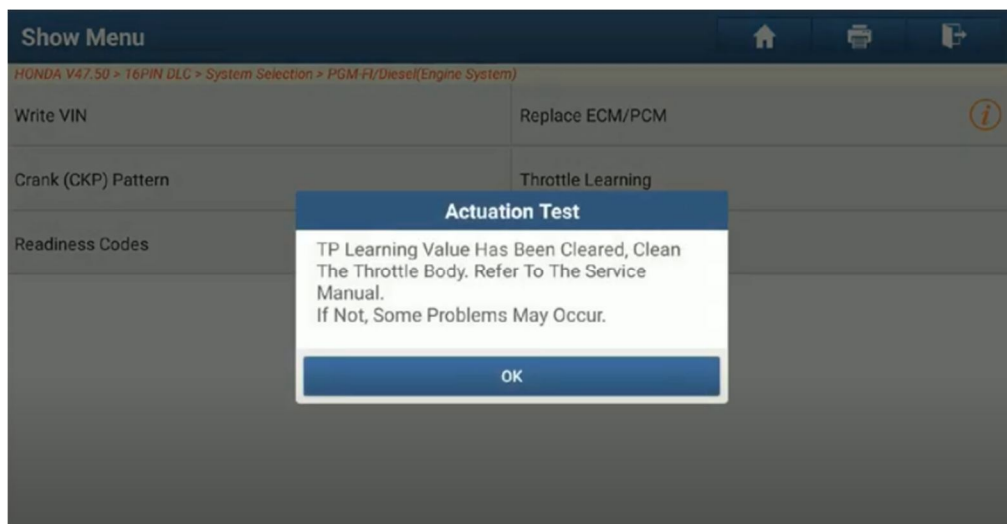


# LAUNCH

8. Then do as the tips.

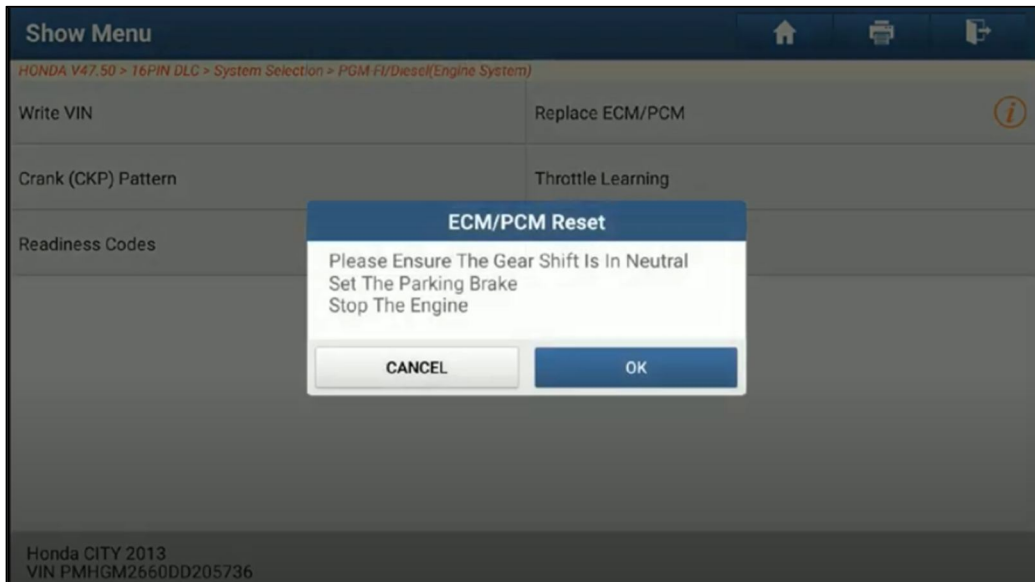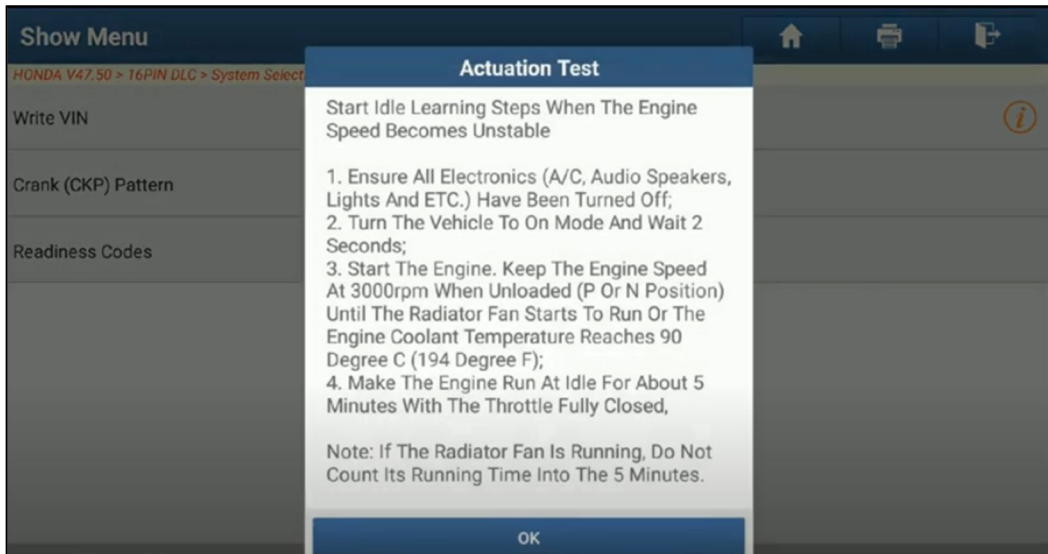

# LAUNCH

9. After ensure the gear shift is in neutral, set the parking brake and stop the engine, click ok. The ECM/PCM will be reset. Click ok to go on.

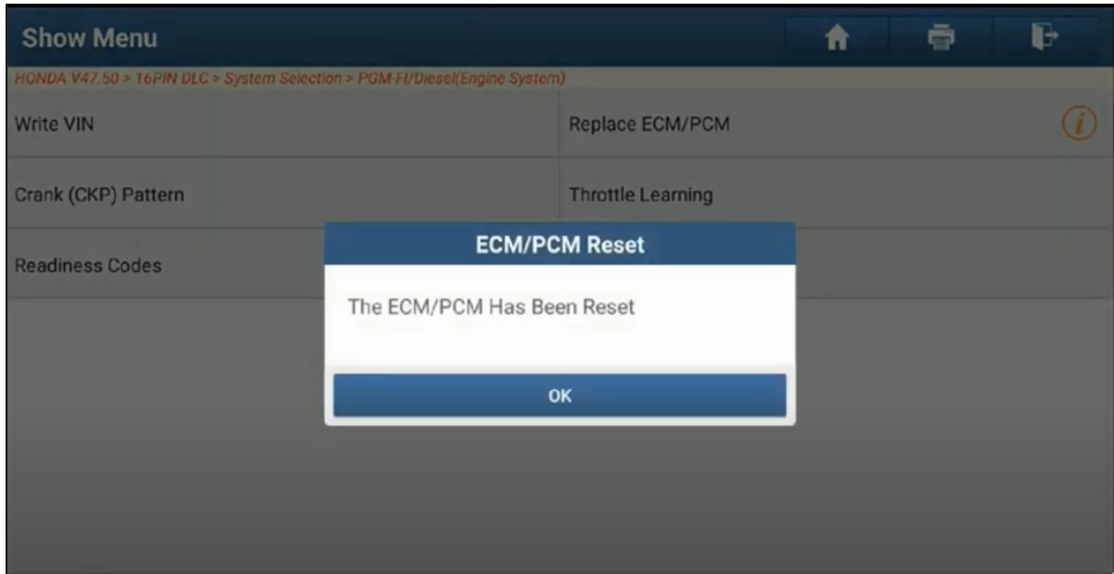

10. Then showed below tips. Watch out that: you allow the engine to idle for 10 mins at normal operating temperature. Do as it say, idle the car for 10mins, then the learning will be done.

