

Operation instructions for Toyota Anti-Theft function

Features: Add smart key

Requirements:

Required devices: PRO and other Android devices of 431 products

Required software: Toyota V10.01

Steps:

For Toyota Immobilizer, the following is a detailed introduction to the method of adding smart keys (take 09 Highlander as an example).

1. Enter Toyota Immobilizer software, select **【Vehicle mode】**, as shown in Figure 1;

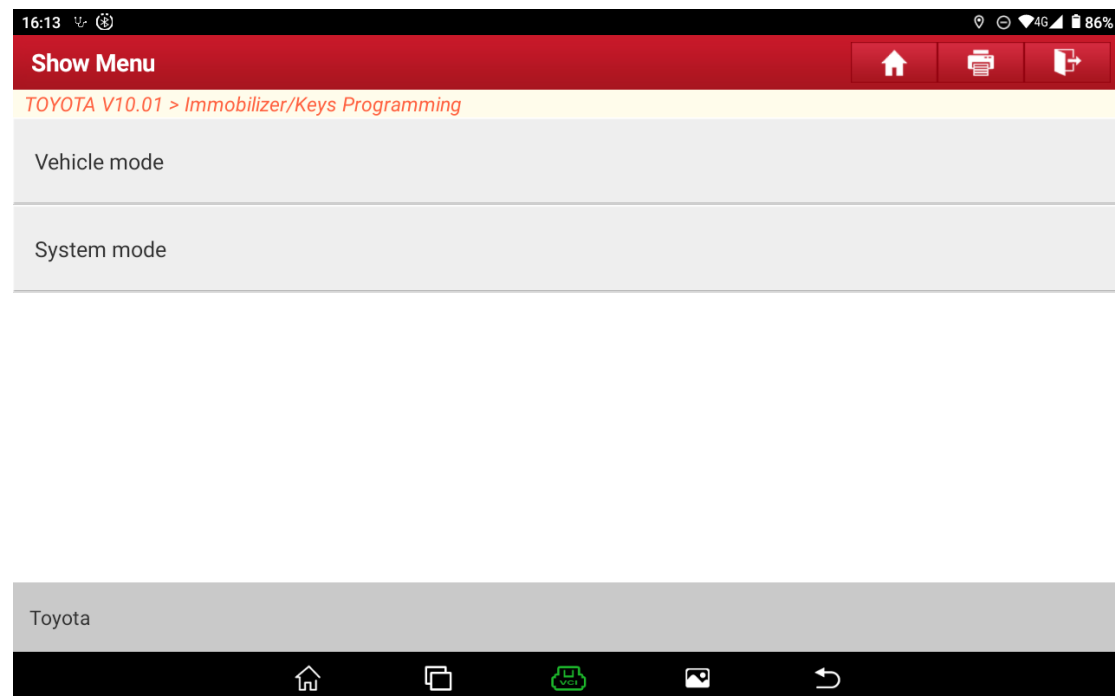


Figure 1

2. Select the region according to your location, as shown in Figure 2

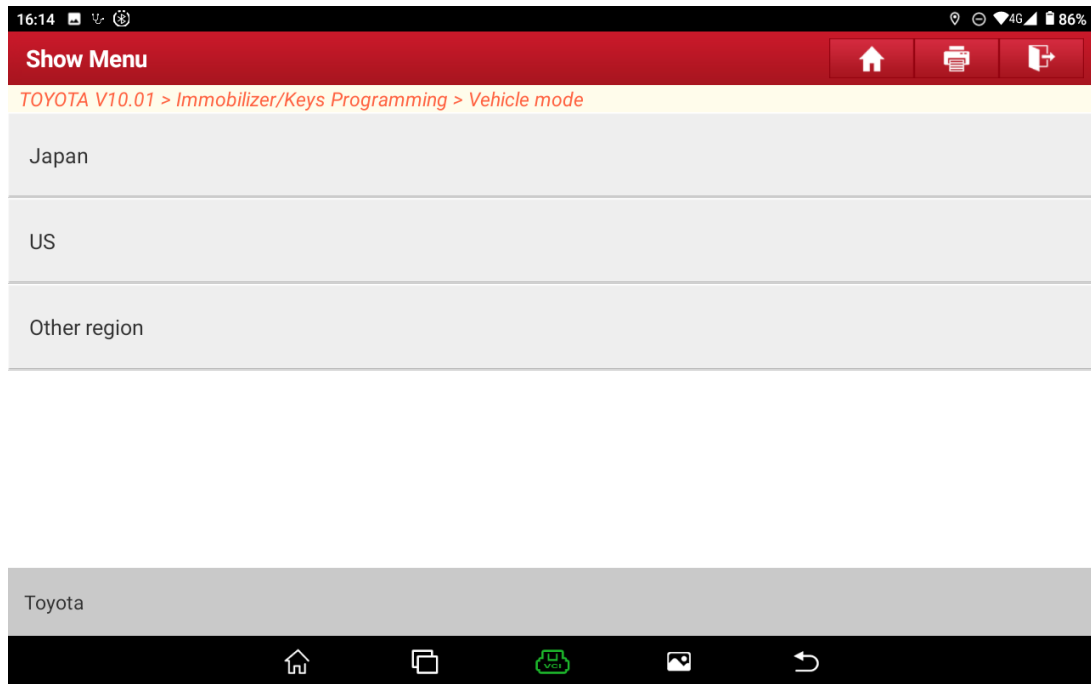


Figure 2

3. Select the Highlander model, as shown in Figure 3;

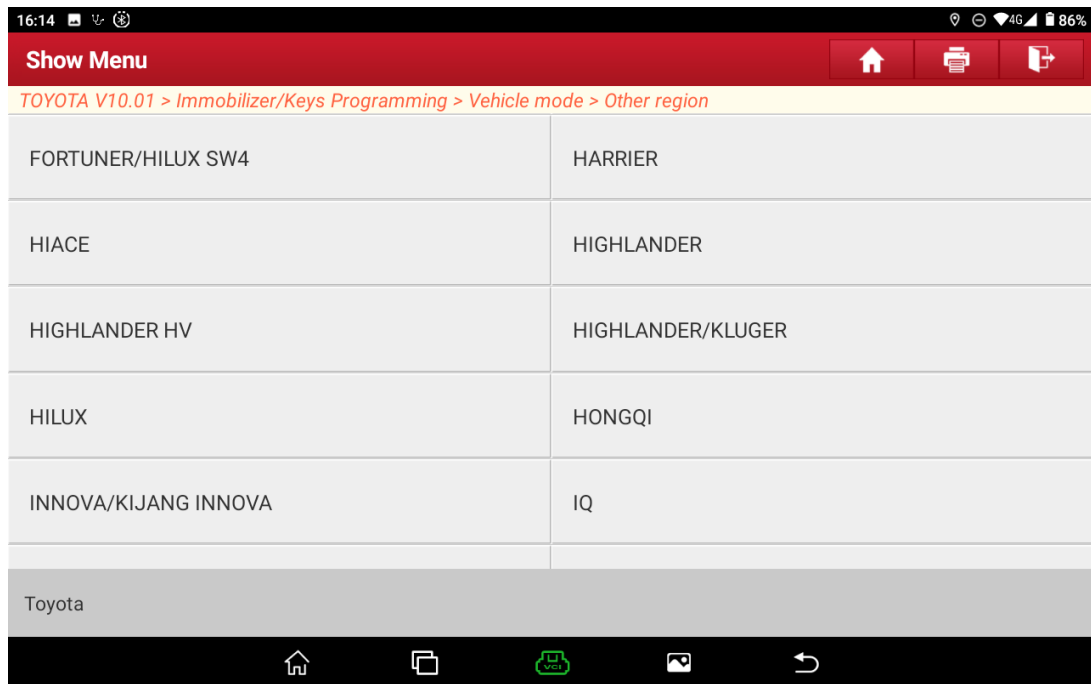


Figure 3

4. Select **【Smart Key】** , as shown in Figure 4;

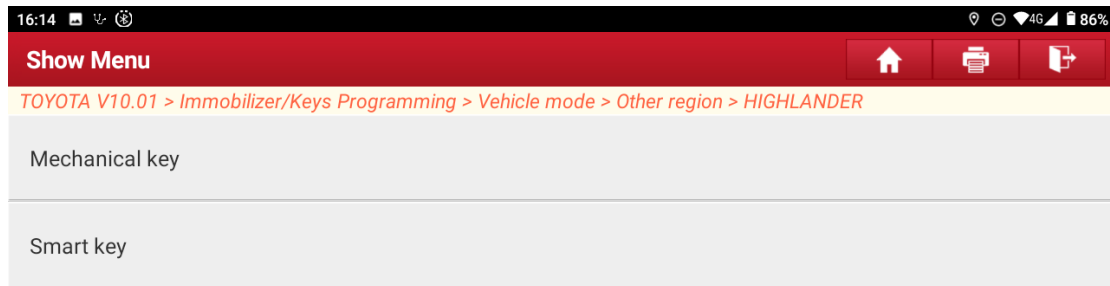


Figure 4

5. After selecting **【Type 1】** , as shown in Figure 5;

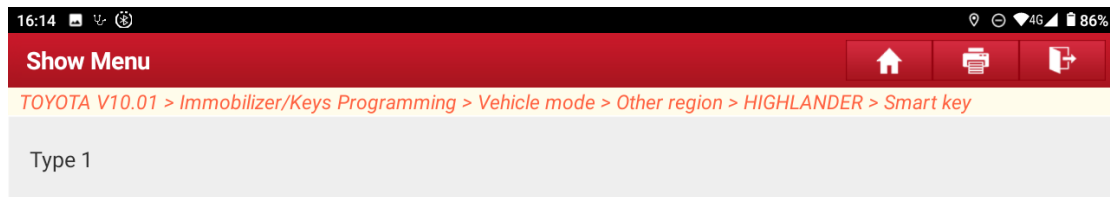


Figure 5

6. Select **【Add Smart Key】** , as shown in Figure 6;

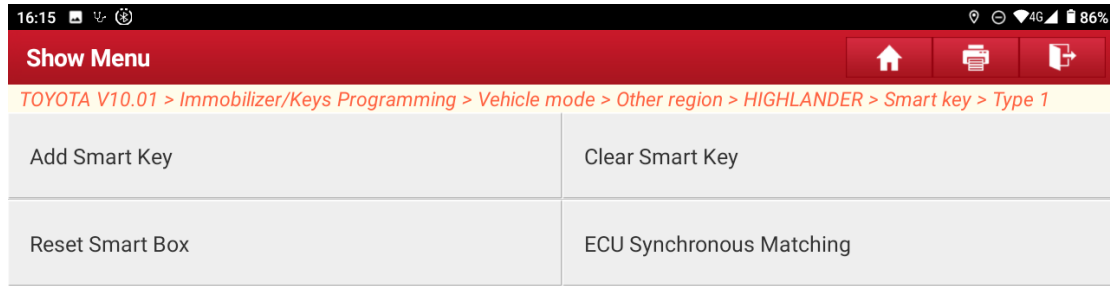


Figure 6

7. Start the process of key matching;

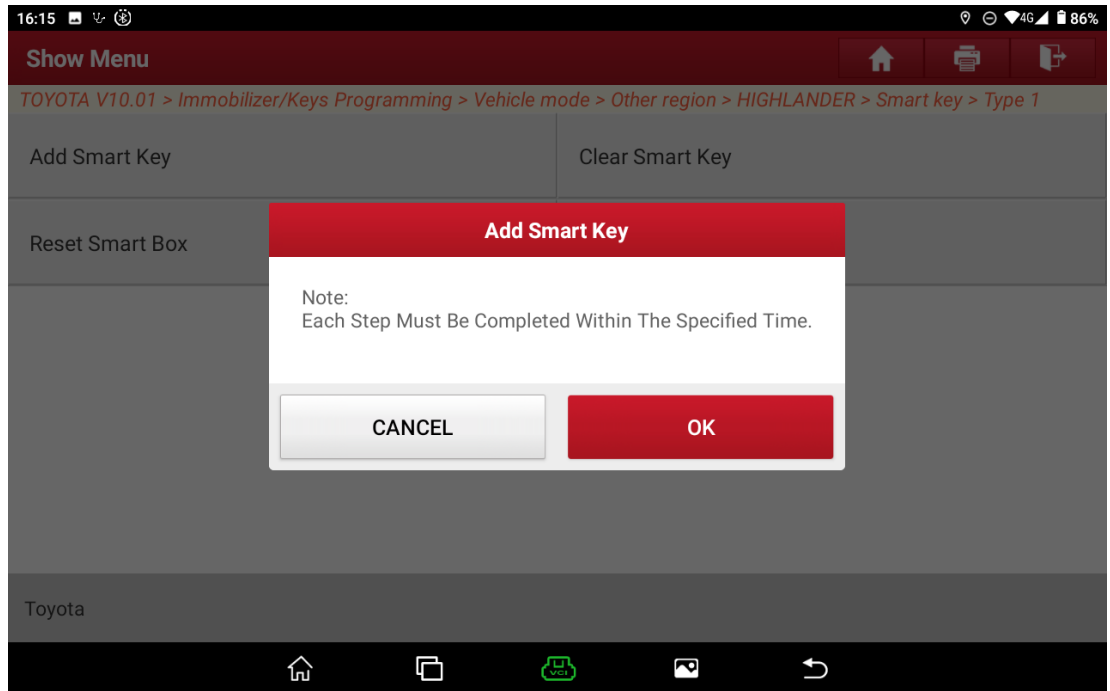


Figure 7

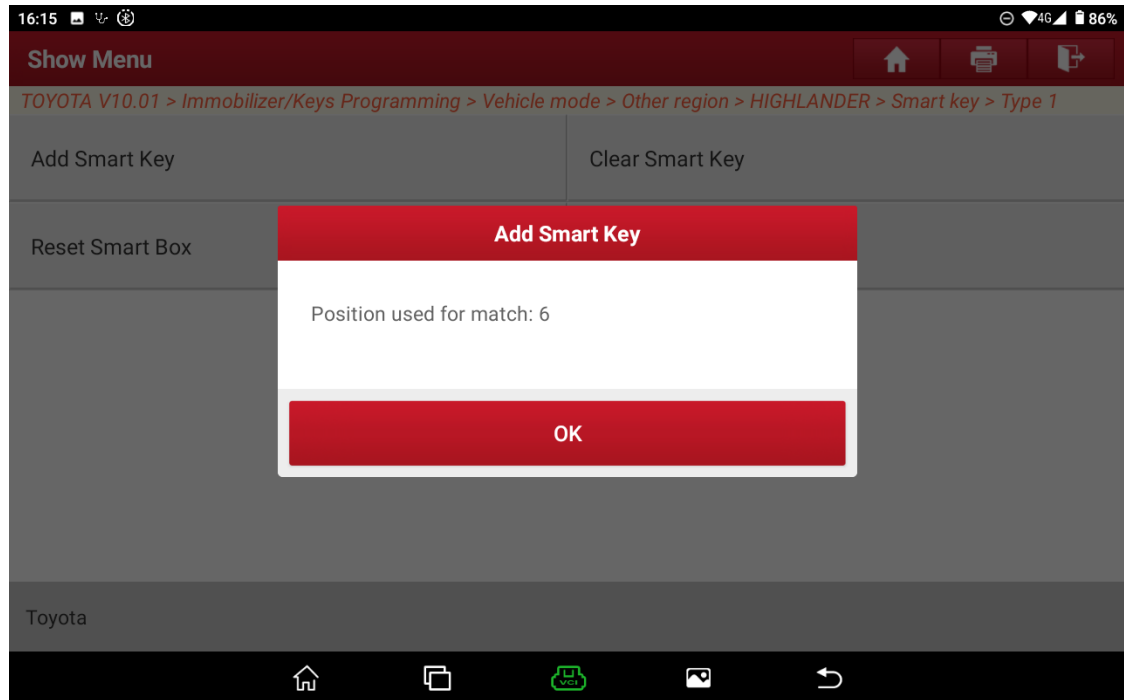


Figure 8

8. Please complete the following operations within 30 seconds;

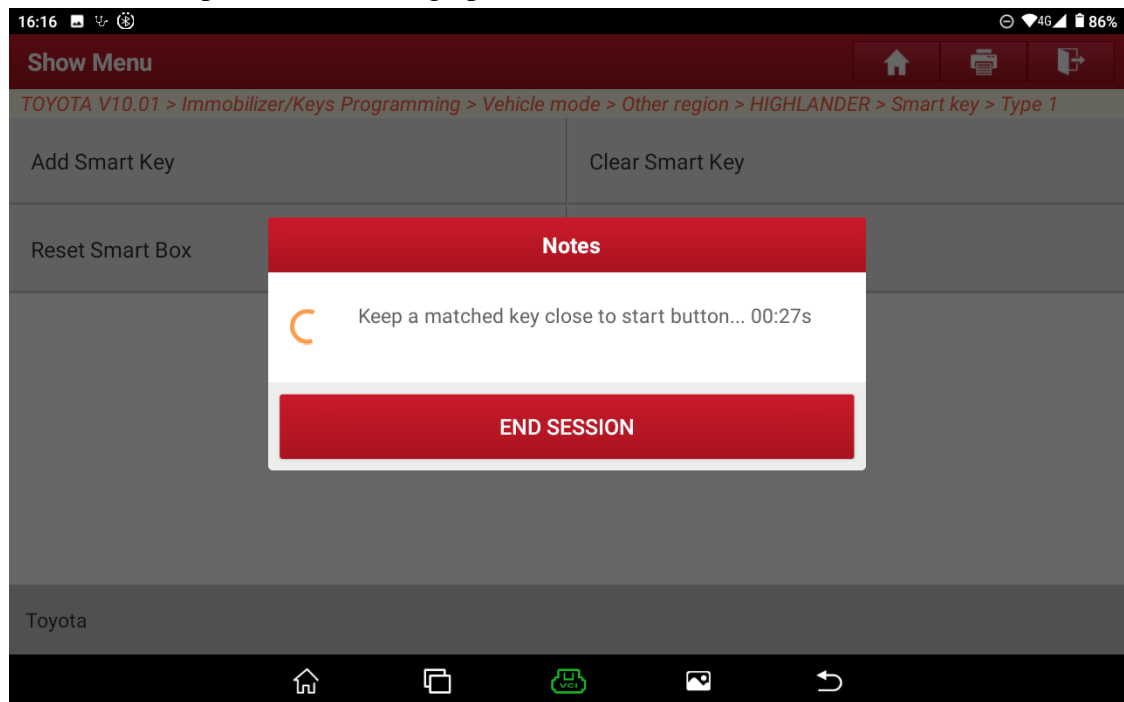


Figure 9

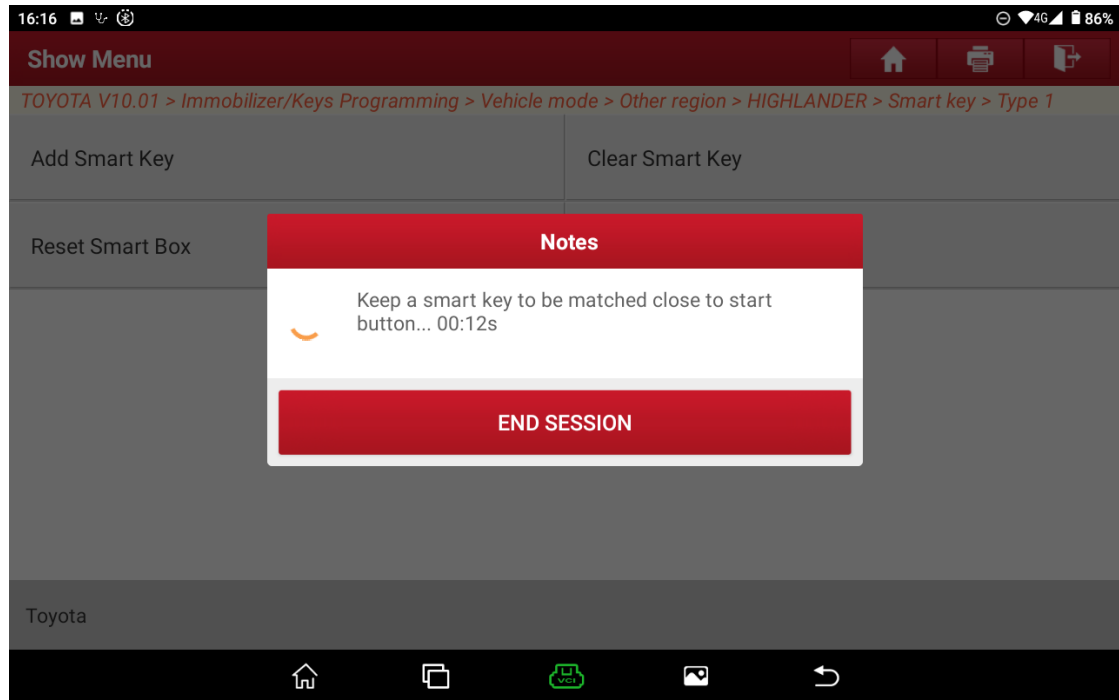


Figure 10

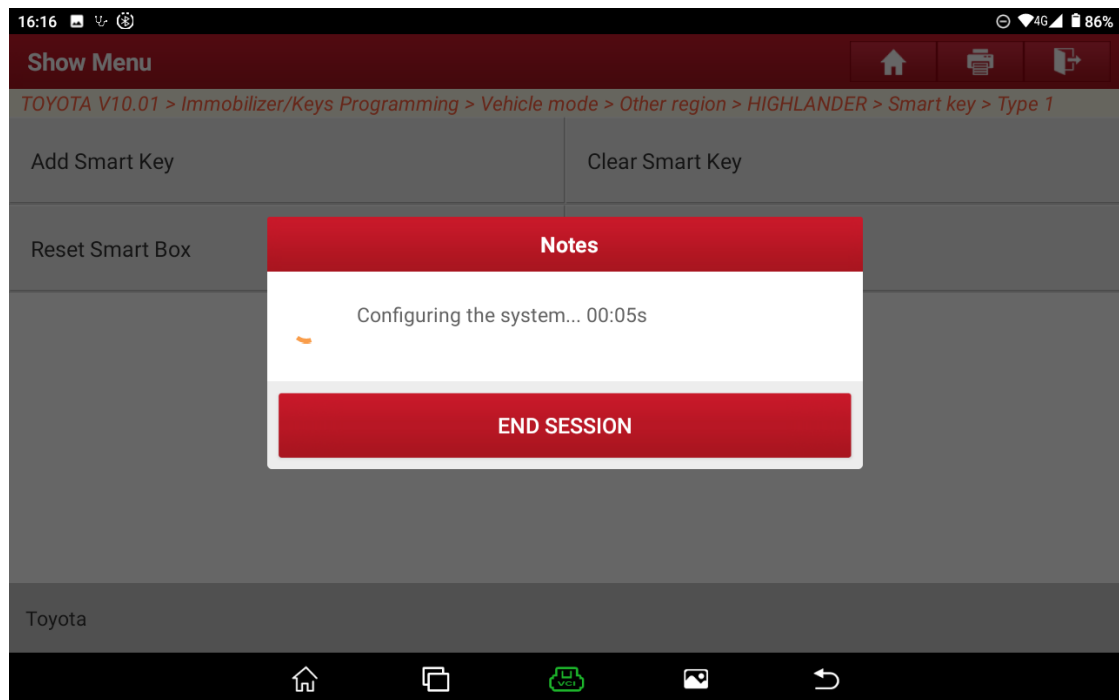


Figure 11

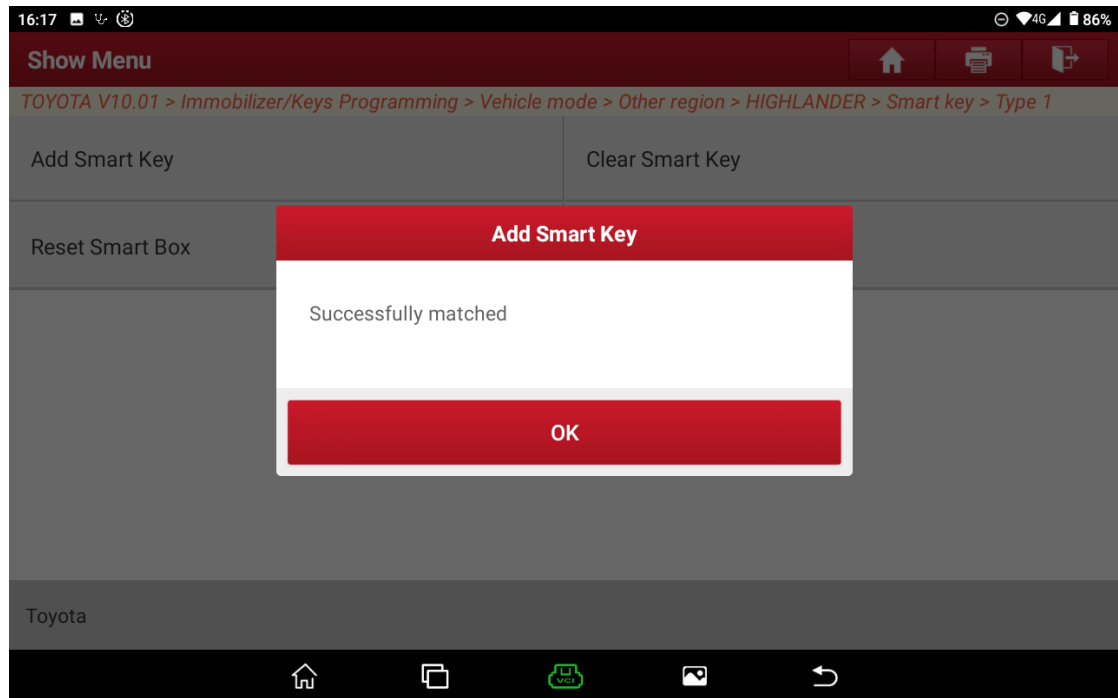


Figure 12

9. Finally, you can test whether the key is normal by starting the vehicle.

Statement:

The content of this document belongs to Shenzhen Launch Tech Co., Ltd. All rights reserved. Any individual or unit shall not quote or reprint without consent.