

# Toyota Corolla HV CVT Oil Pressure Calibration


**Function Description:** This function is used to recalibrate the CVT oil pressure after replacing related parts.

**Supported Products:** Launch PRO or PAD series comprehensive diagnostic equipment


**Tested Model:** Toyota Corolla Hybrid 2023

## Procedure:


1. Click [ECM (Engine Control Module)] to access it. (See the following figure.)

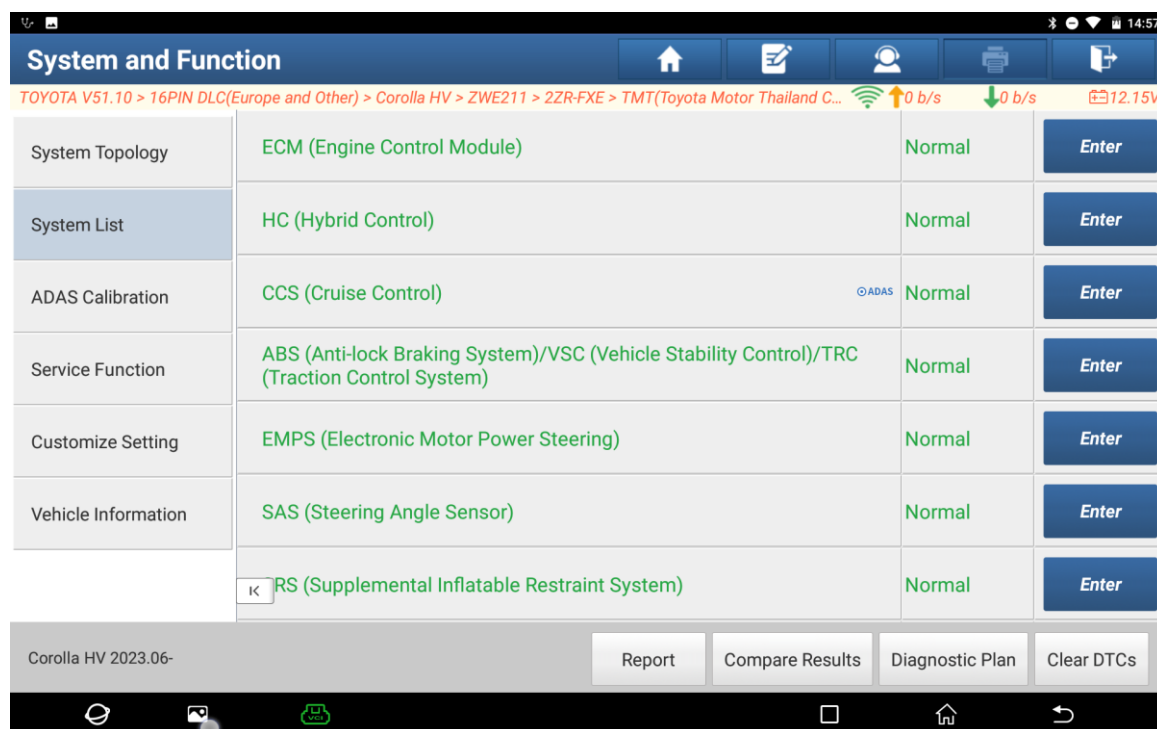


2. Choose "Special Function". (See the following figure.)

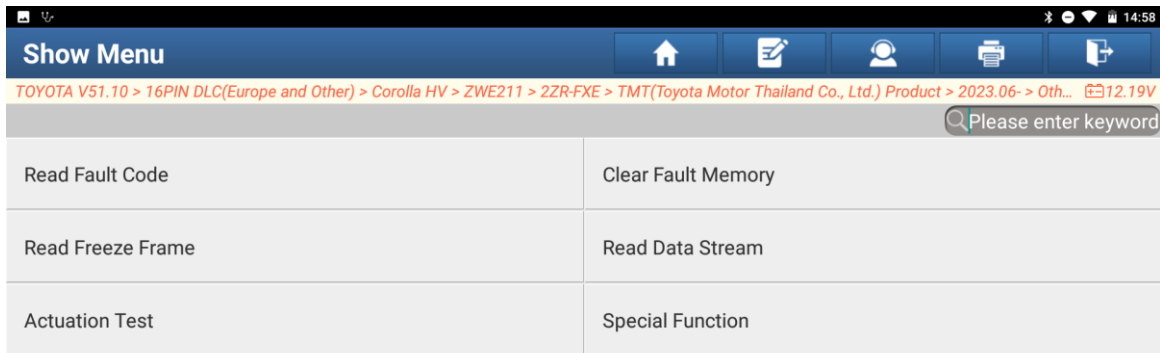


3. Choose "CVT Oil Pressure Calibration". (See the following figure.)

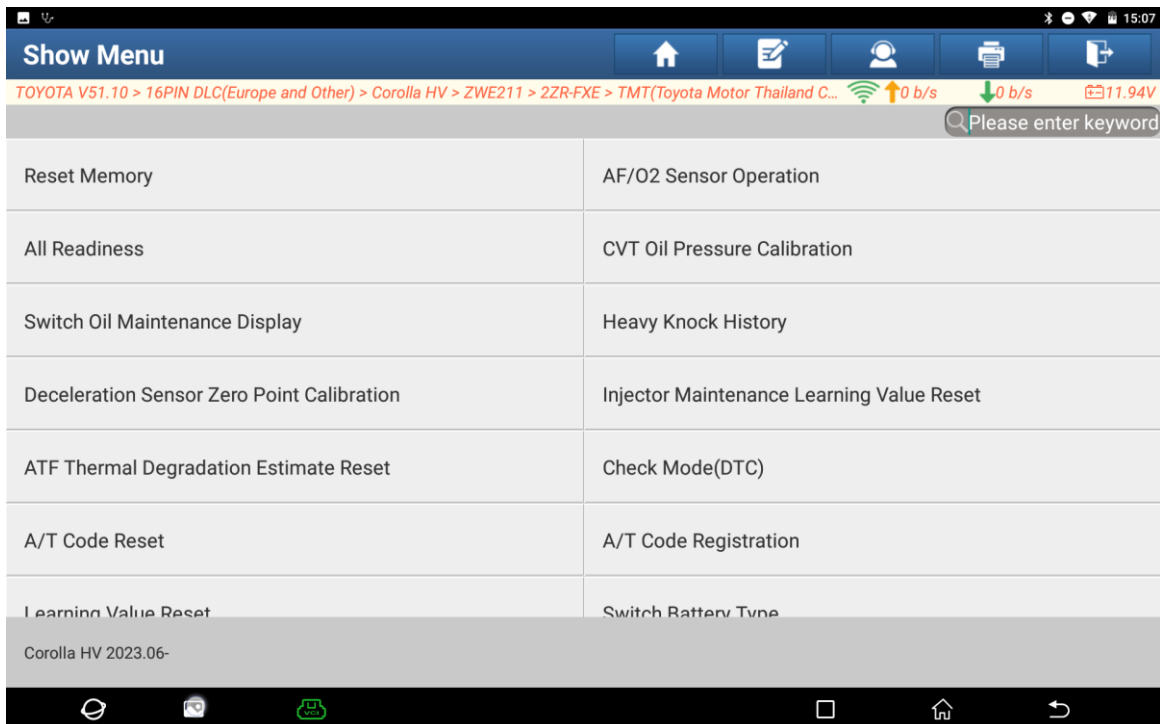


4. Recalibrate the CVT oil pressure after replacing related parts. Click OK. (See the following figure.)

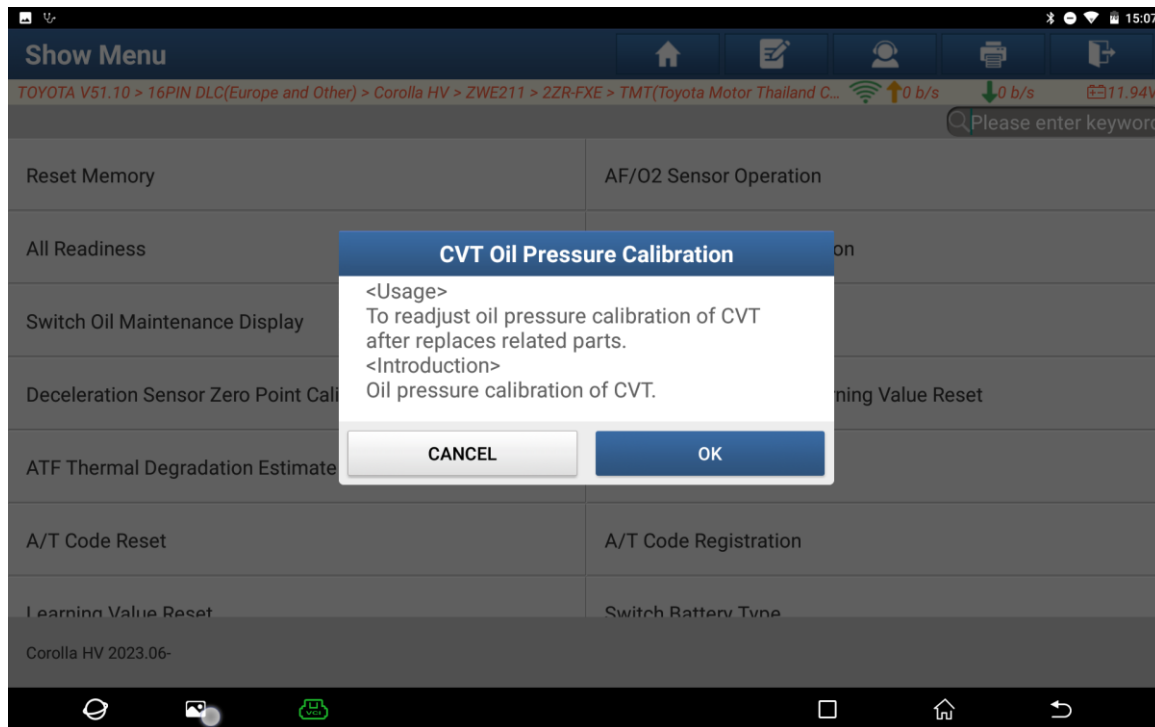


5. Click OK. (See the following figure.)

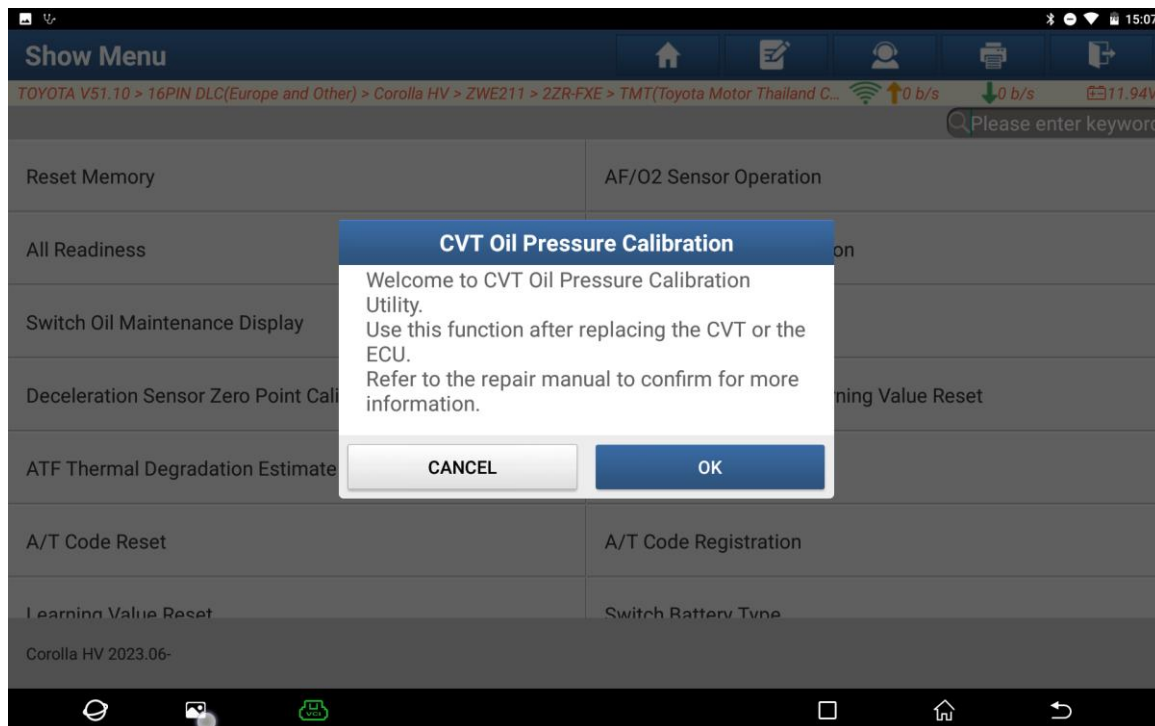


6. Confirm the following conditions and click OK. (See the following figure.)

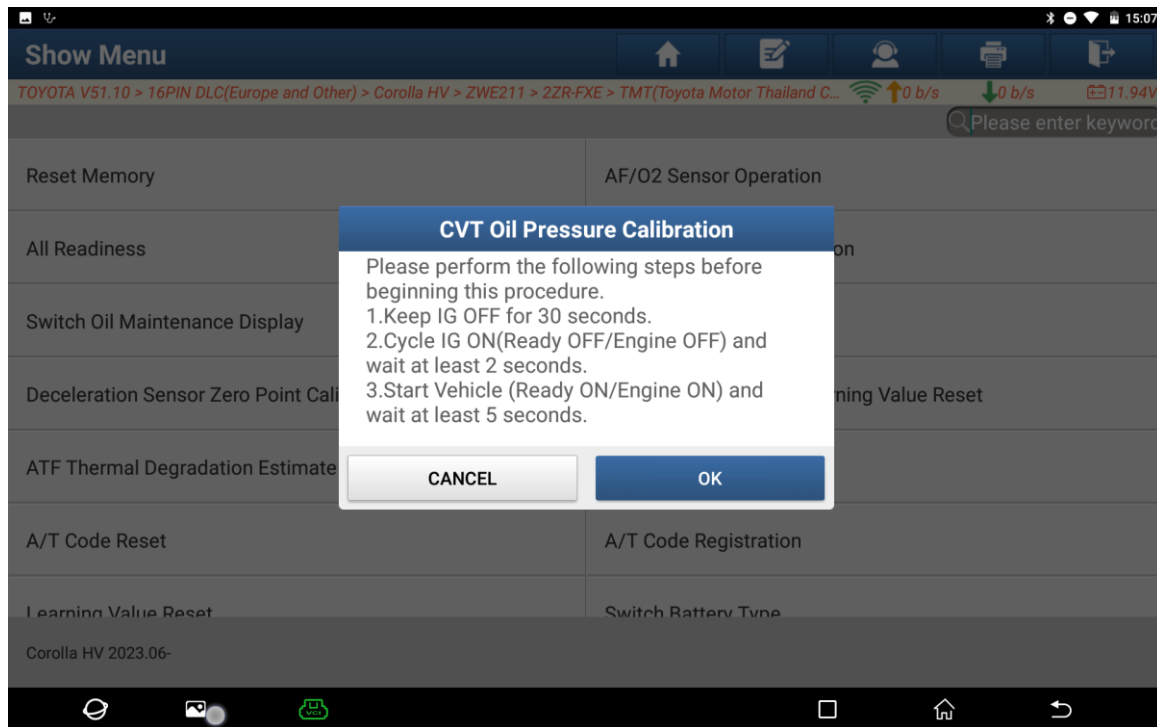

7. Calibration in process. Please wait.

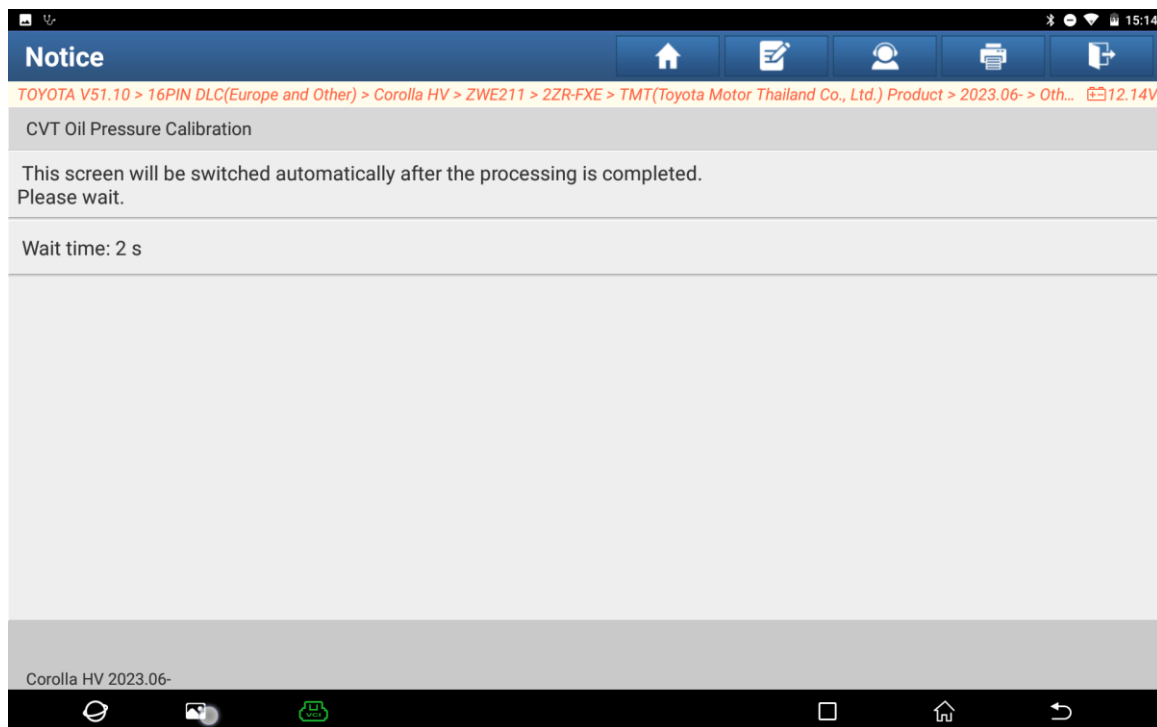

8. Calibration is completed. Click OK to exit the function. (See the following figure.)

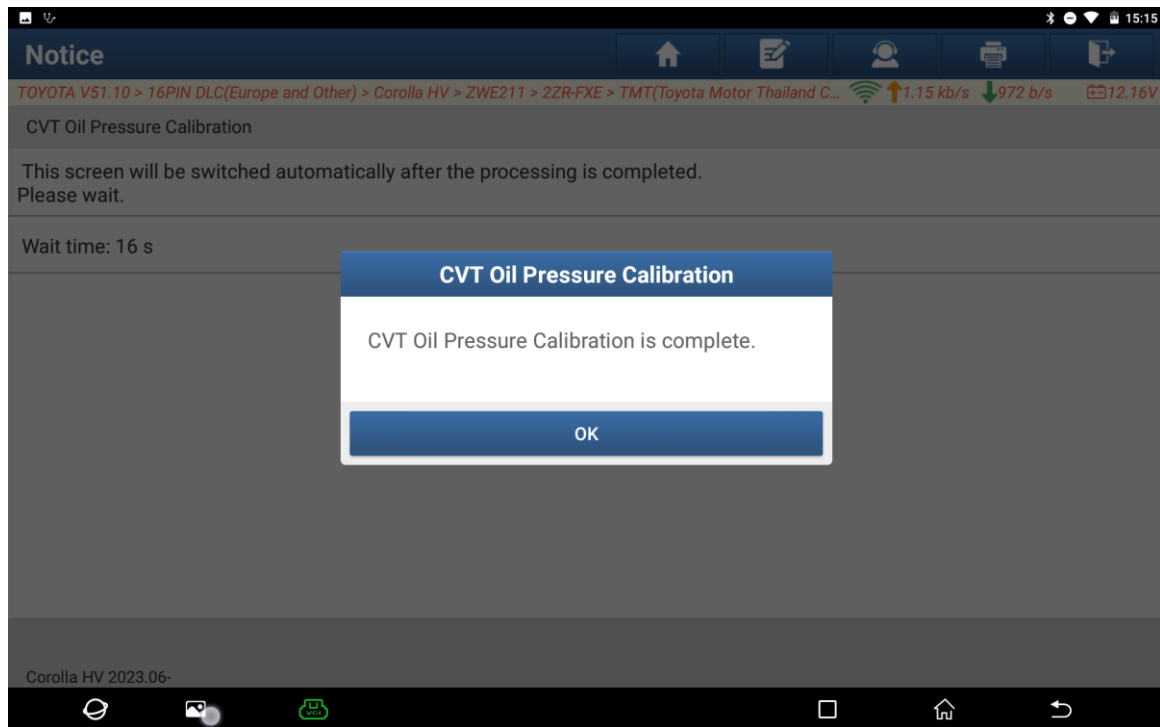

## Statement:

The content of this document is copyrighted by Shenzhen Launch Tech Co., Ltd., and no individual or organization may quote or reprint it without consent.