

Auto Detected Configuration Reset Operation Instruction

[Function Description]


1. The automatically detected configuration into engine management system from assembly factory such as automatic transmission, TCS, vehicle speed, air conditioner, map sensor, auto cruise and battery management configuration can be reset by this function.
2. If wrong configuration has been recognized or if you want to set up used engine management system from other vehicles, you must be use this function.

[Attention]


1. Before configuration reset, all the controllers and sensors have been set up properly.
2. Ignition key ON & engine stopped.
3. When the reset procedure is finished, you need to turn ignition key off, and then when ignition key is on, new auto detected configuration will be set up into the engine management system.

[Procedure]


1. Click [Auto Detected Configuration Reset].

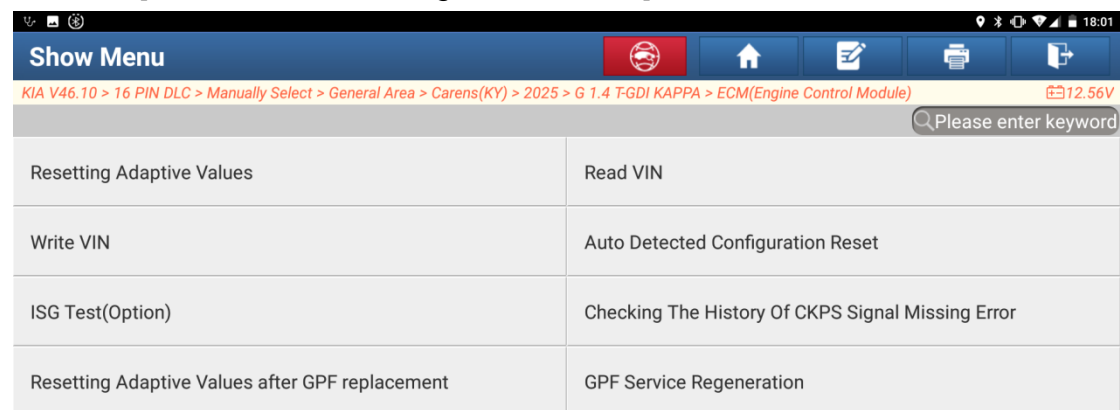


2. Follow the text prompts and click OK after completing all conditions.

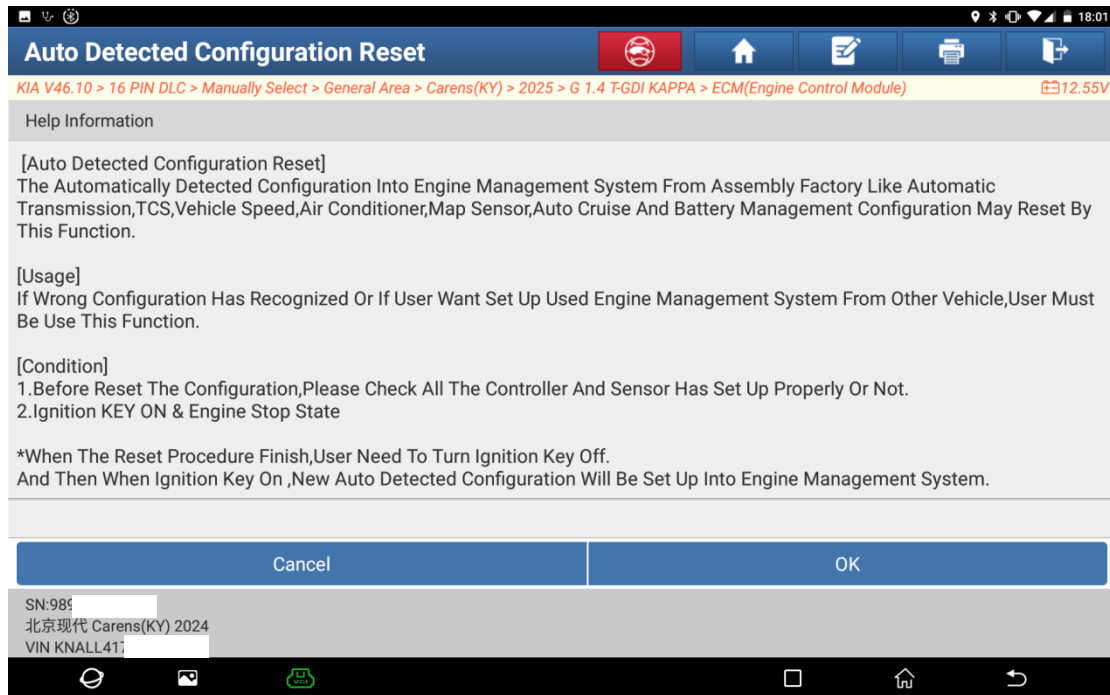

3. Turn on the ignition switch, turn off the engine, and click OK.

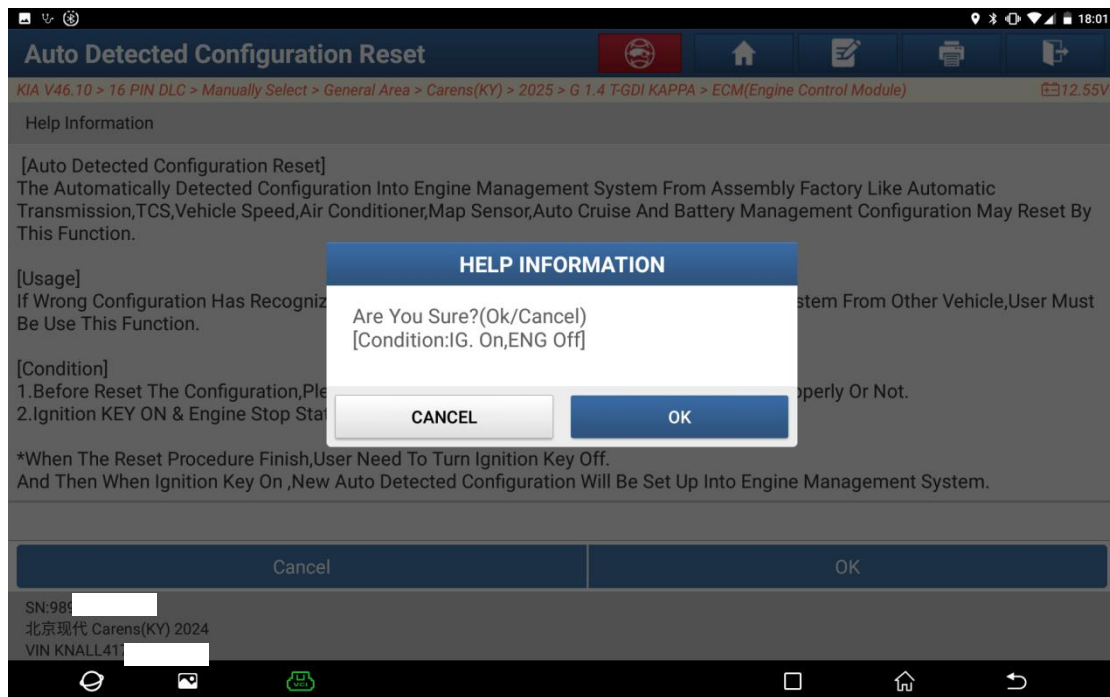

4. The function is completed.

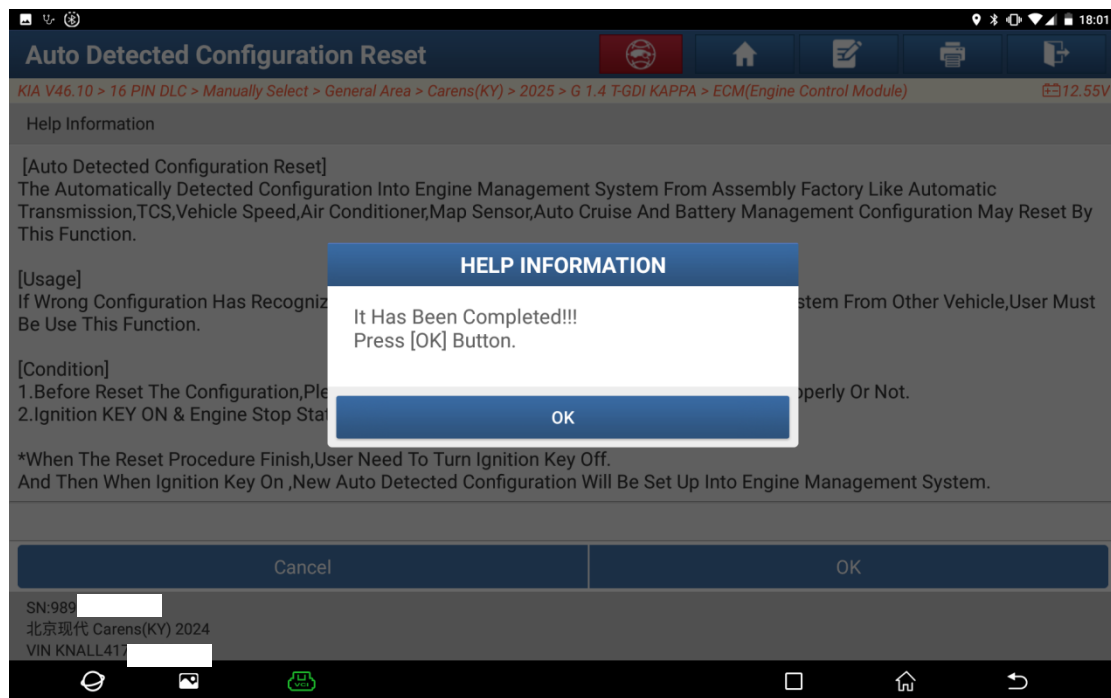

[Statement]

The content of this document is copyrighted by Shenzhen Launch Tech Co., Ltd., and no individual or organization may quote or reprint it without consent.