

Ford Nautilus Driver Power Door Window Initialization


Supported equipment: Launch's full range of comprehensive diagnostic equipment

Current equipment: PAD 5



Function description: This program will perform a full up and down travel of the window to learn the upper and lower stop positions and soft stop positions to initialize the driver power window.

Tested model: Ford/2023/ Nautilus, VIN: LVSHNCAC1PH*****



1. On a PAD 5, choose [Local Diagnose].

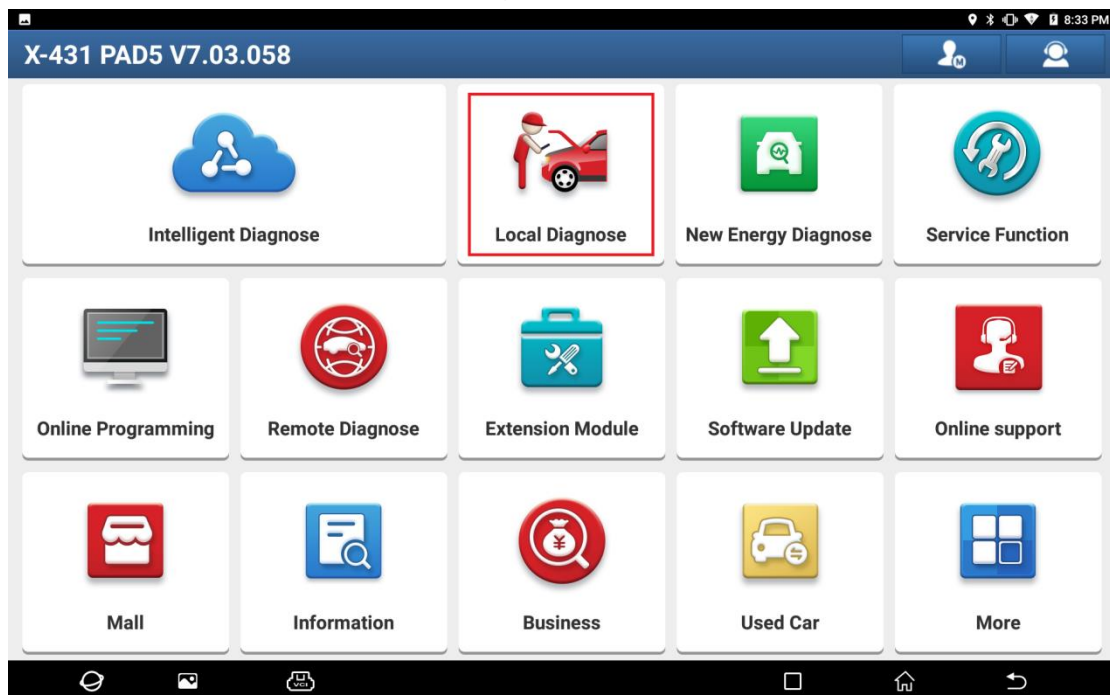


2. Choose [Ford] to test.

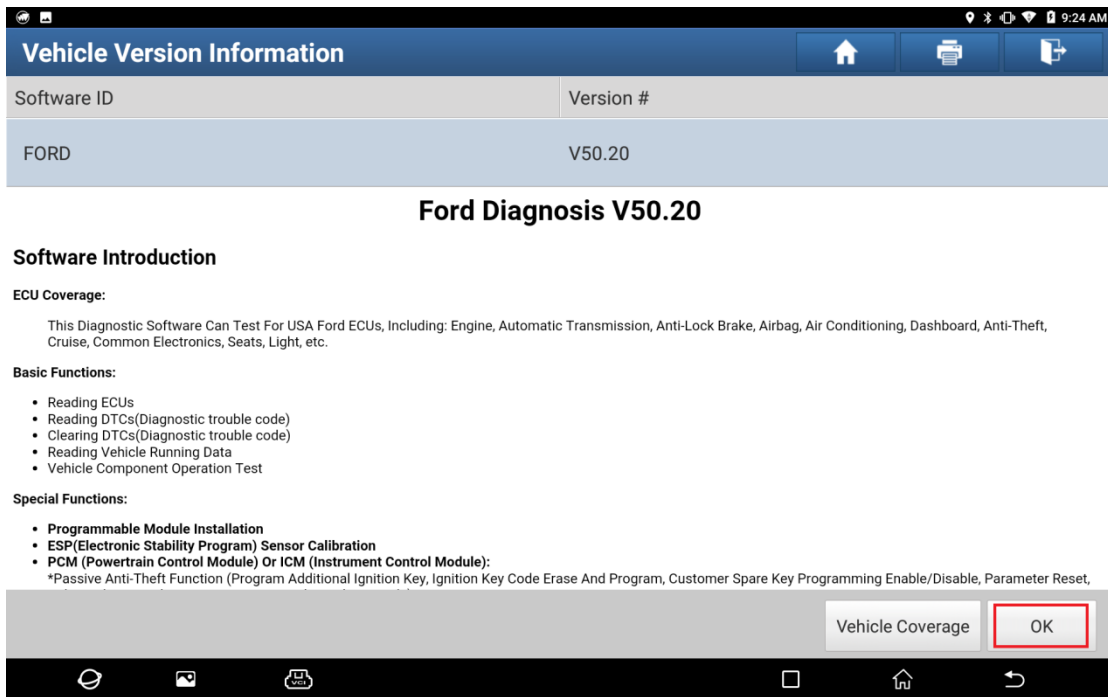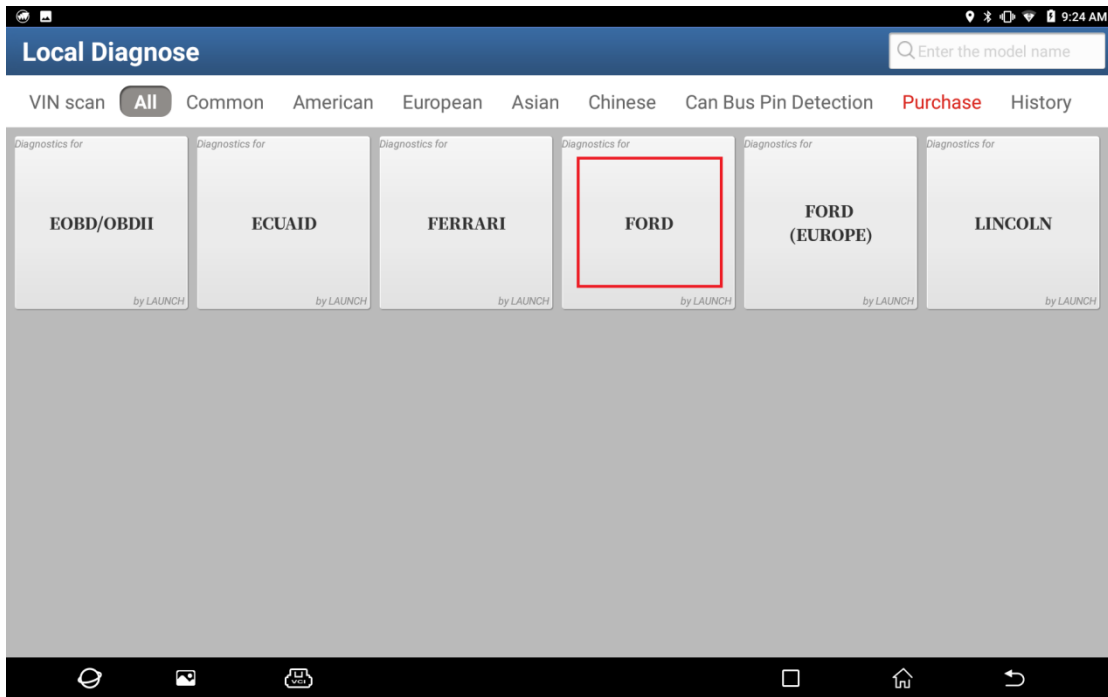


3. Choose [Automatically Search] to identify car models automatically.

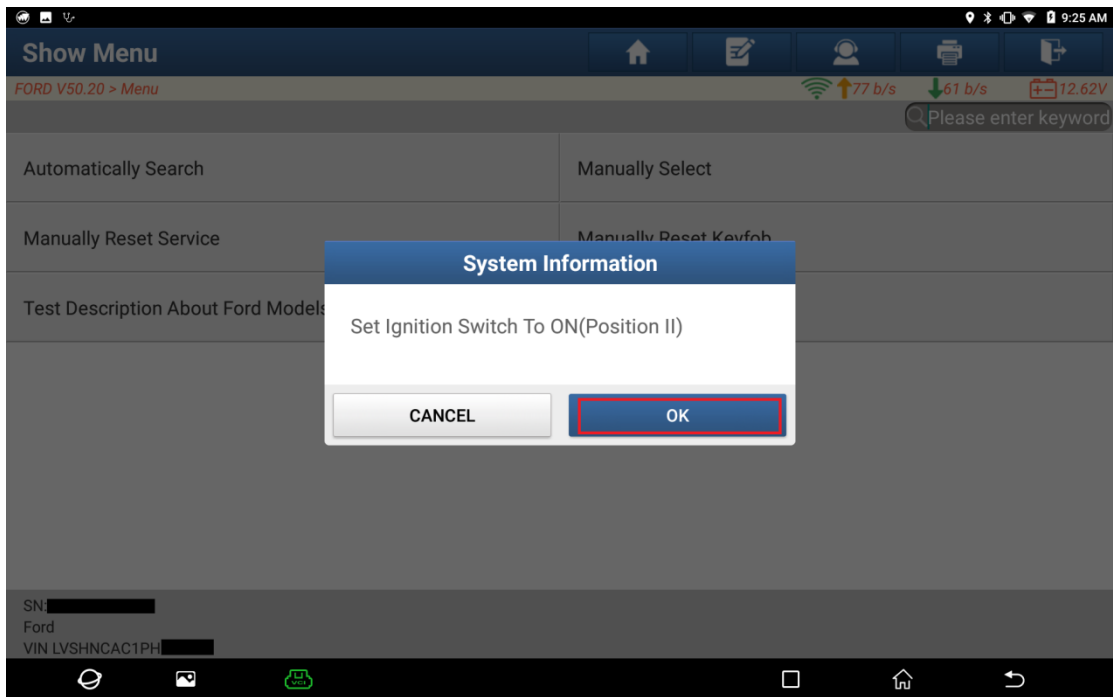
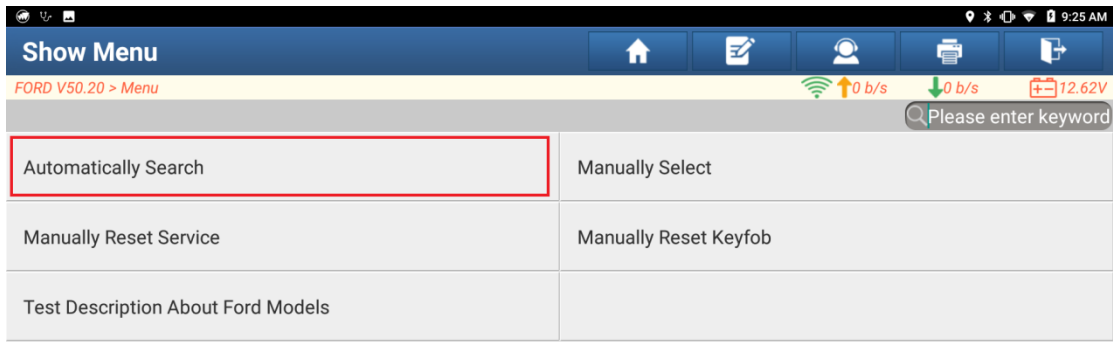


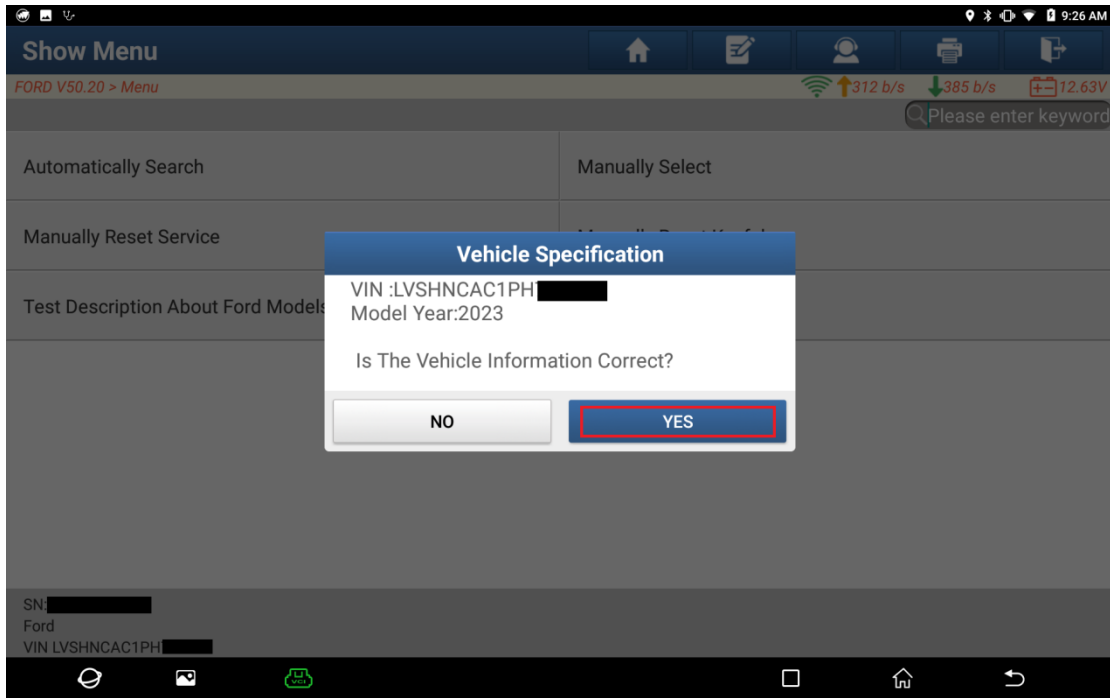


4. Click [System Scan] to scan the entire vehicle systems.

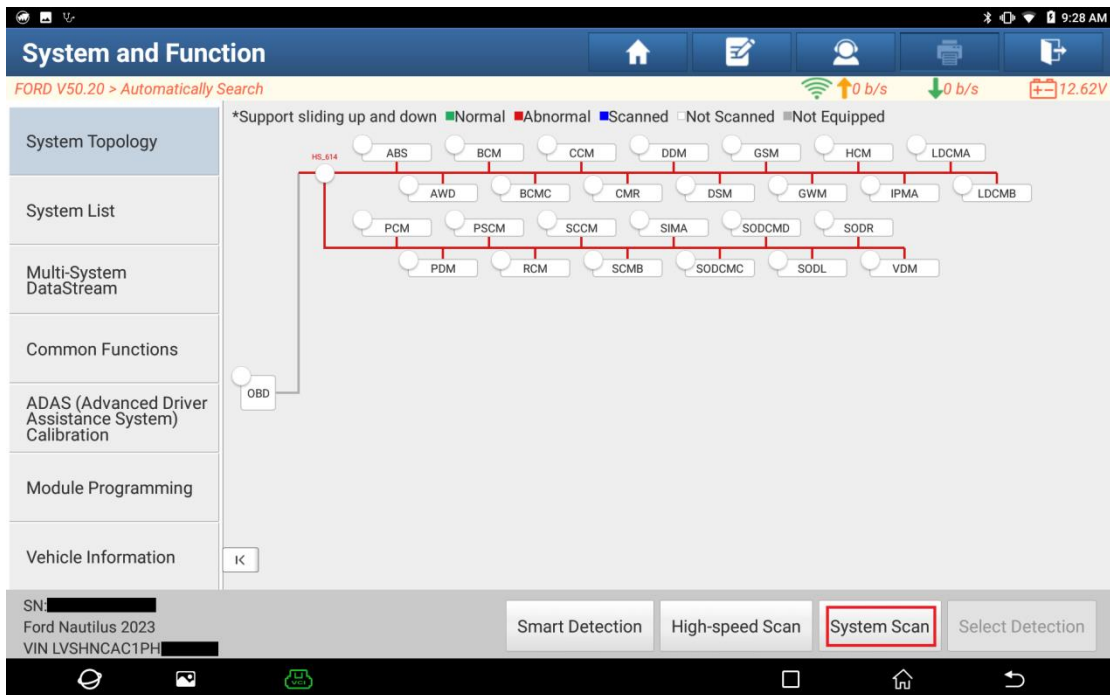


5. Click [DDM (Driver Door Module)] to access the system.

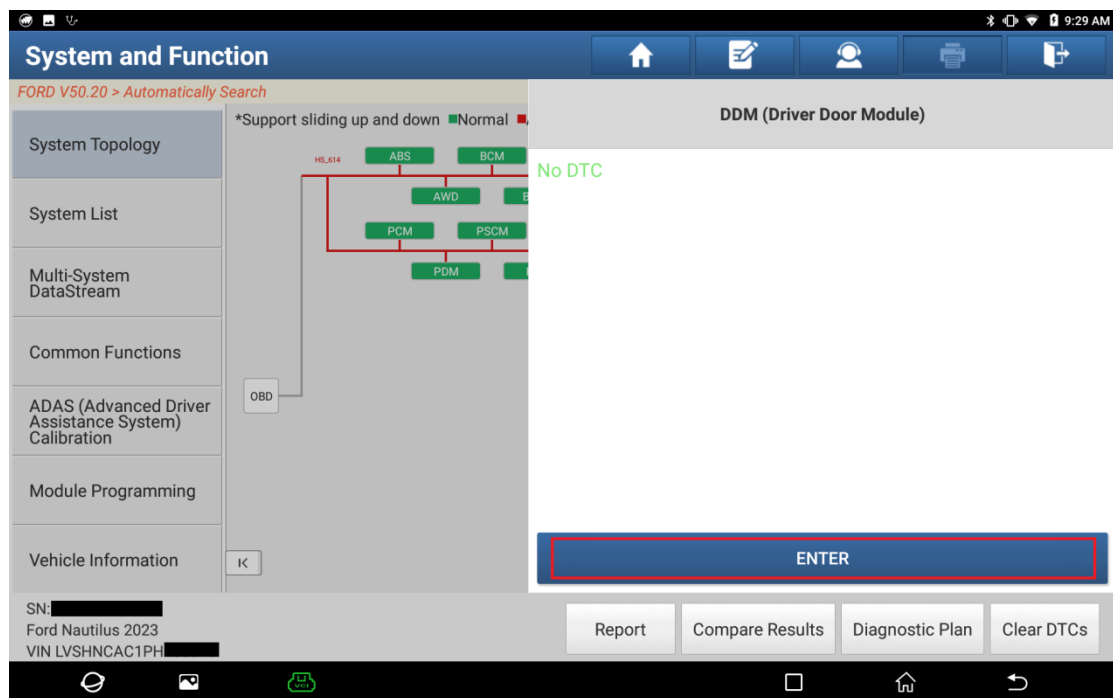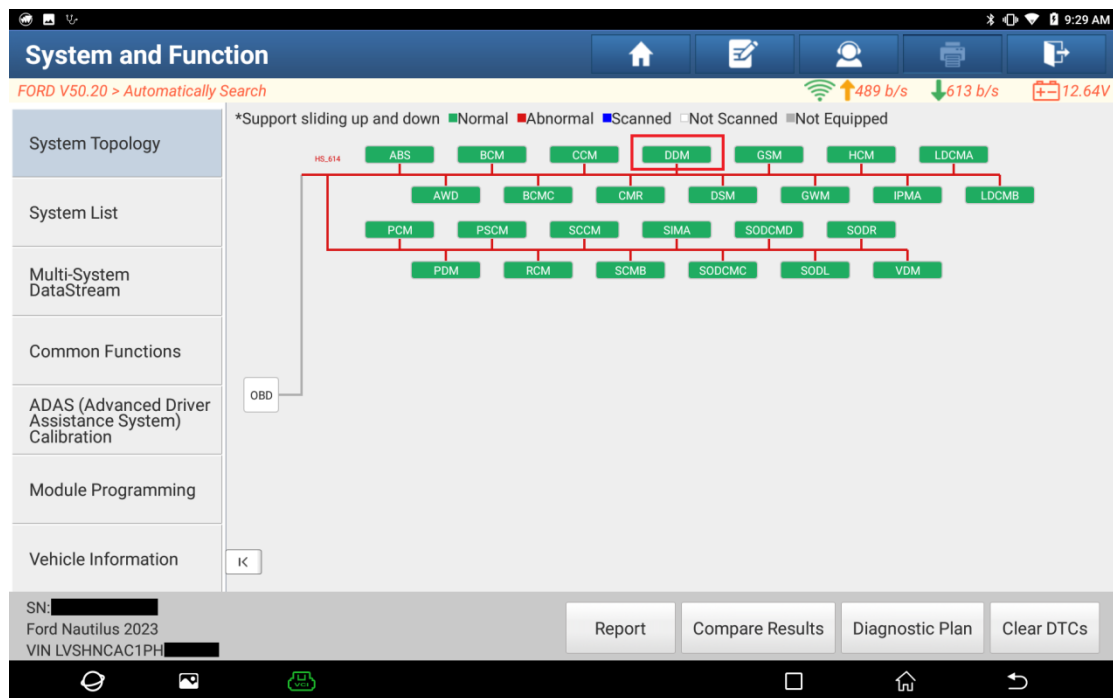



6. Click [Special Functions].

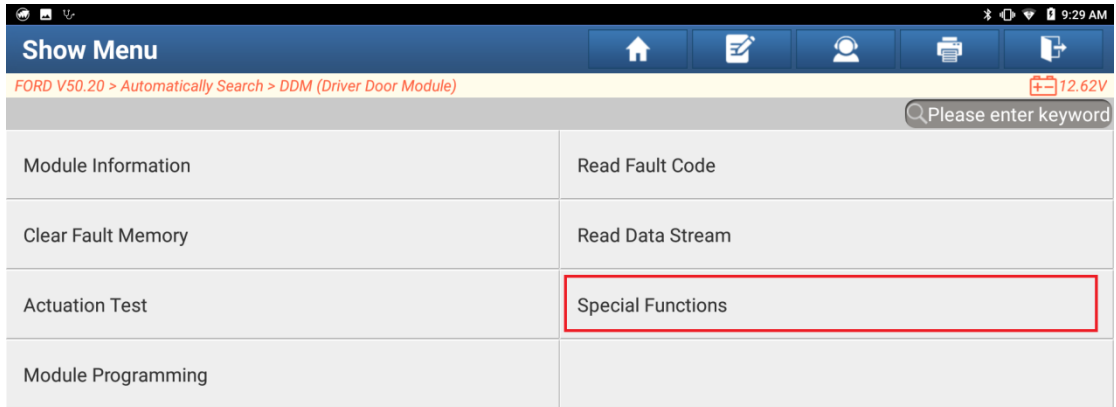

7. Click [Driver Power Door Window Initialization].

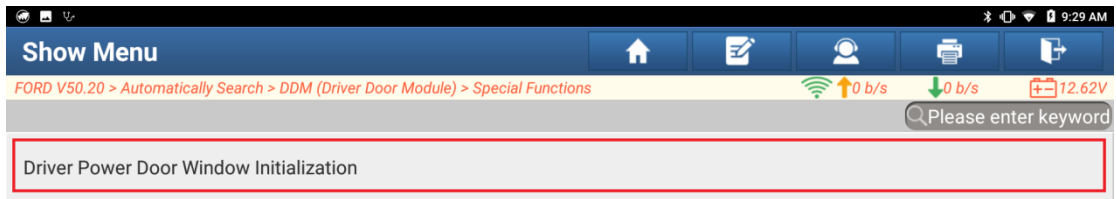

8. Click OK. The driver power door window initialization program is completed.

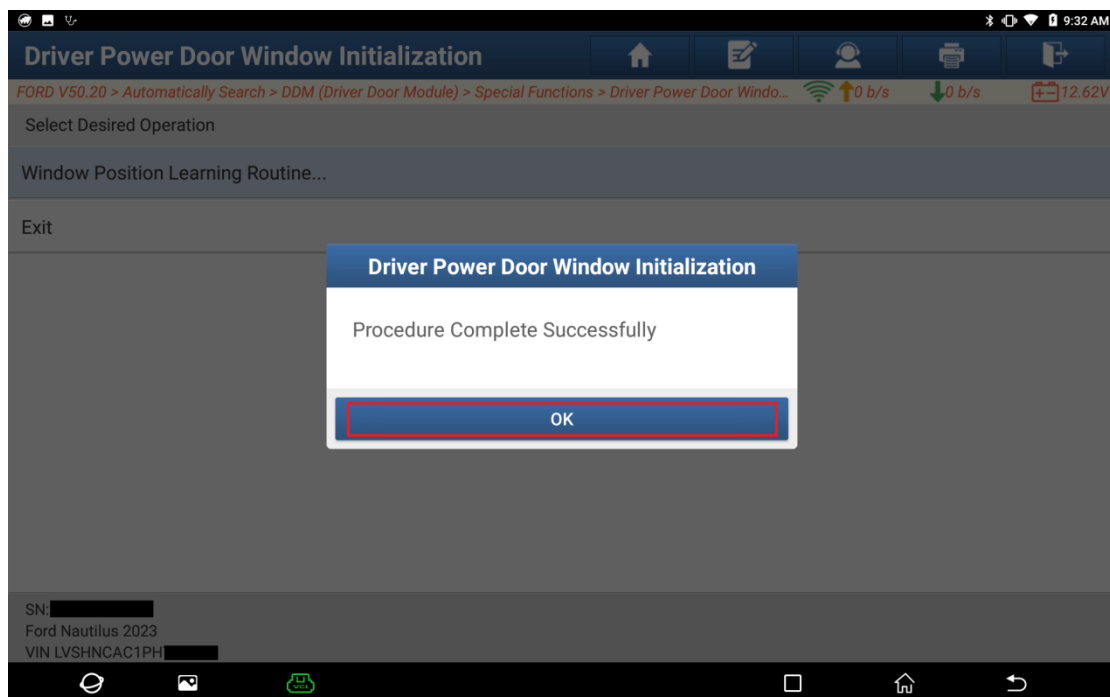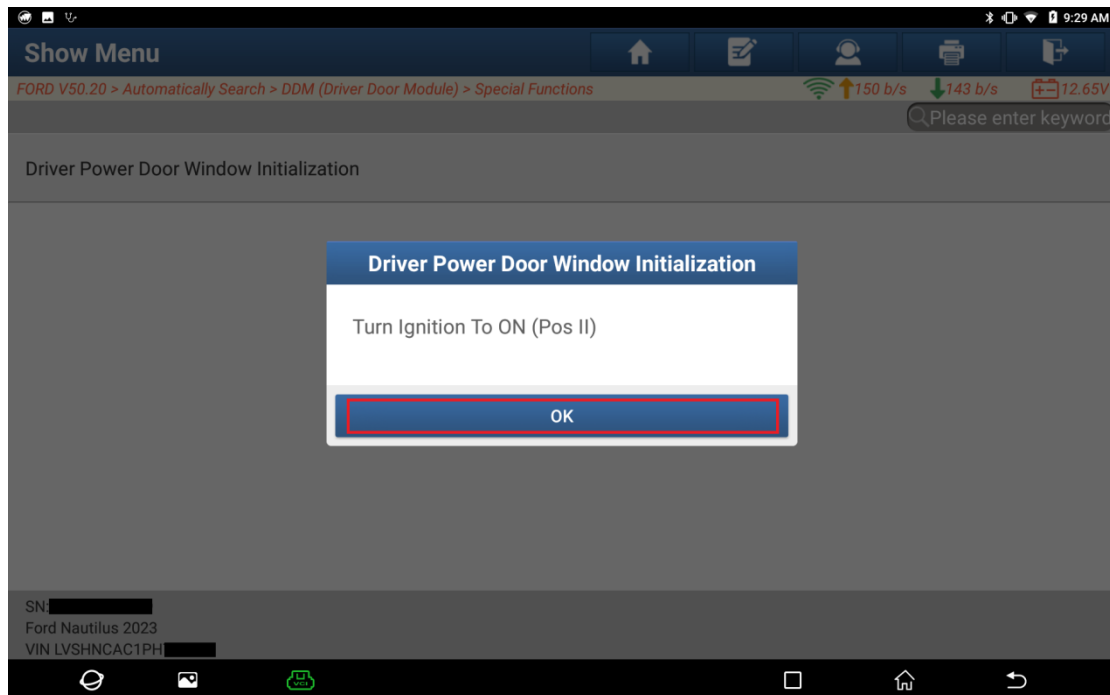

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.