Ford Edge/Galaxy/s-MAX Tire Size Configuration

Supported equipment: Launch's full range of comprehensive diagnostic equipment


Current equipment: PAD 5

Function description: This program is used to update the vehicle tire size.


Tested model: Ford/2017/Edge/Galaxy/s-MAX, VIN:


WF0JXXWPCJHG****

1. On a PAD 5, choose [Local Diagnose].

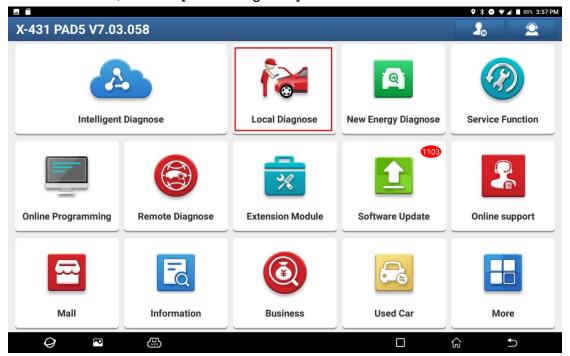

2. Choose [FORD] to test.

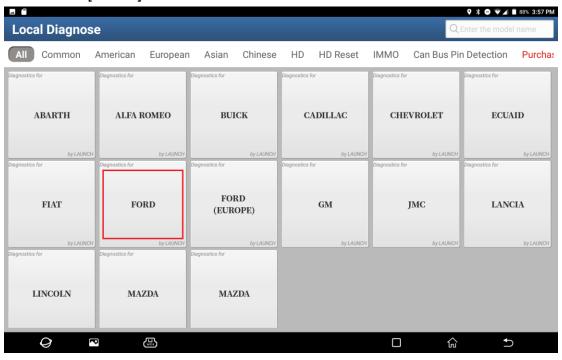

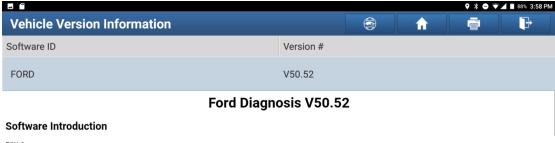

ECU Coverage:

This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.


- Reading ECUs
 Reading DTCs(Diagnostic trouble code)
 Clearing DTCs(Diagnostic trouble code)
 Reading Vehicle Running Data
 Vehicle Component Operation Test


- Programmable Module Installation
 ESP(Electronic Stability Program) Sensor Calibration
 PCM (Powertrain Control Module) or ICM (Instrument Control Module):
 *Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset,




3. Choose [Automatically Search] to identify car models automatically.



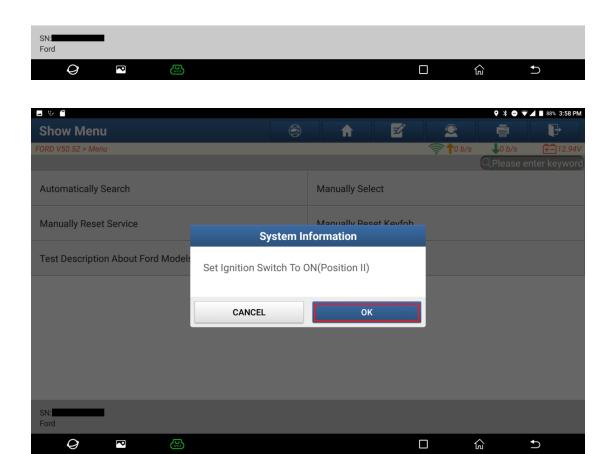


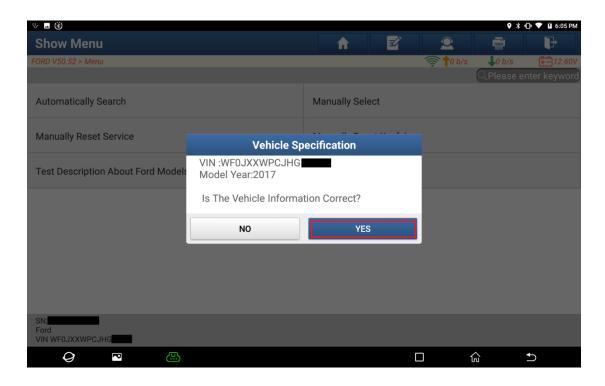


4. Click [High-speed Scan] to scan the entire vehicle systems.

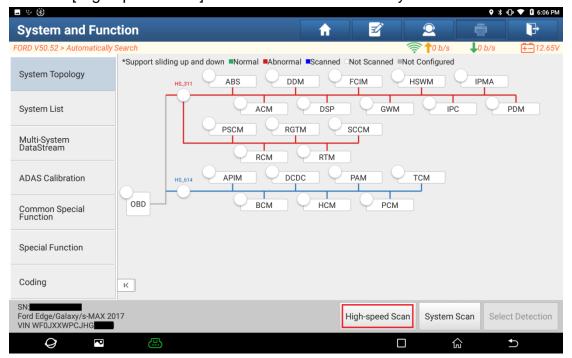

5. Click [PCM (Powertrain Control Module)] to access the system.

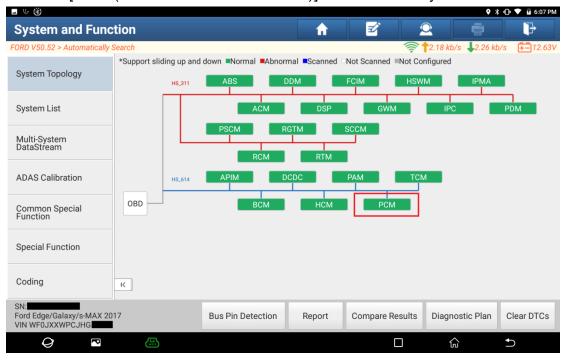

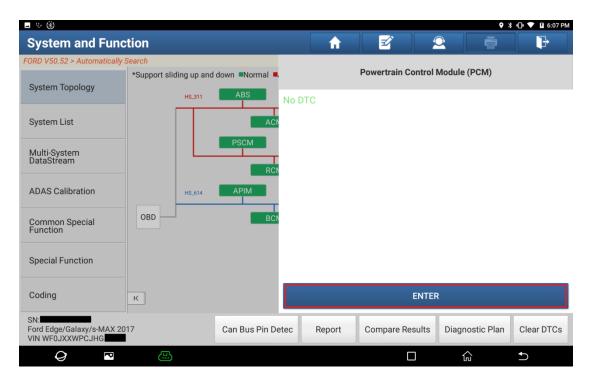


6. Click [Special Functions].







7. Click [Tire Size Configuration].

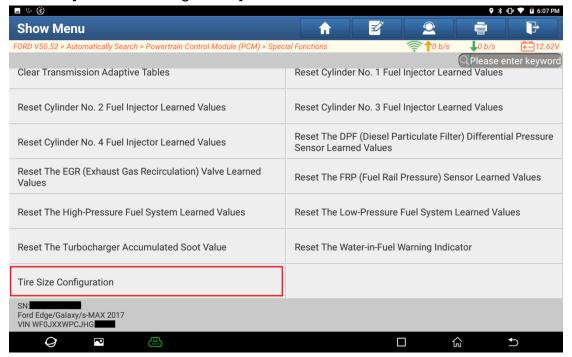

8. Program function introduction.

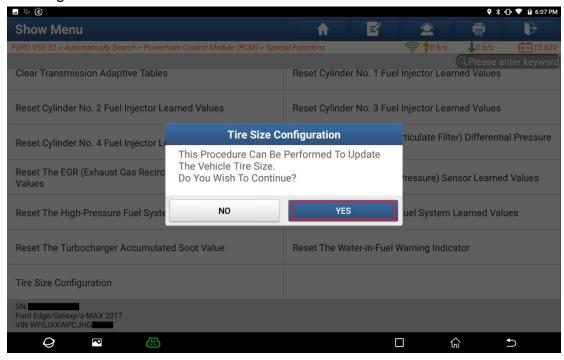


9. Ignition status: Ignition on, engine off

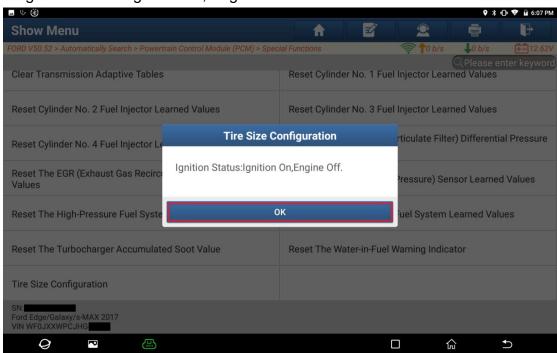


10. Enter the main menu and take selecting the [215/60 R16] option as an example; the steps for other options are the same as this example.




11. Downloading data...Wait for a moment.

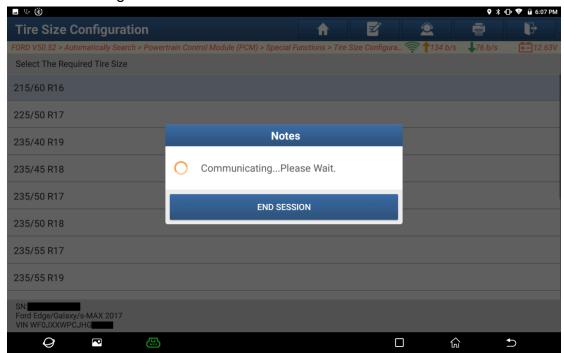


12. Ignition status: Ignition off

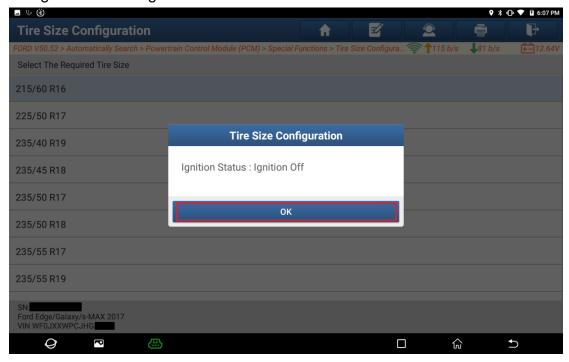


13. Wait for 120s.

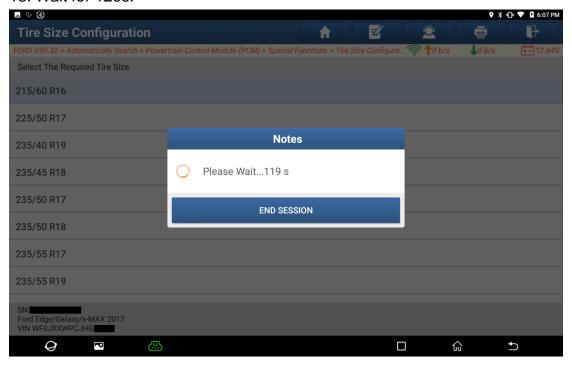


14. Ignition status: Ignition on, engine off

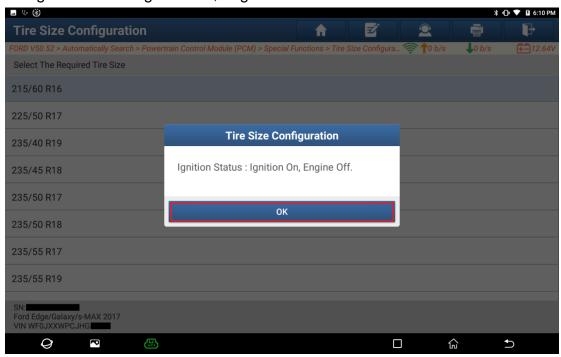


15. Ignition status: Ignition off

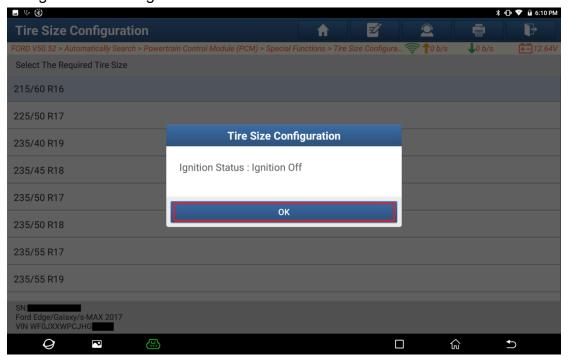

16. Module configuration is completed.

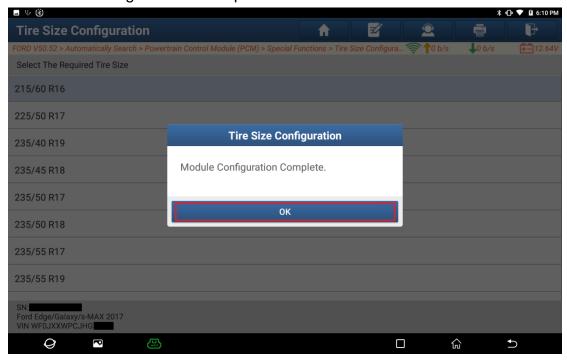


17. Ignition status: Ignition on, engine off

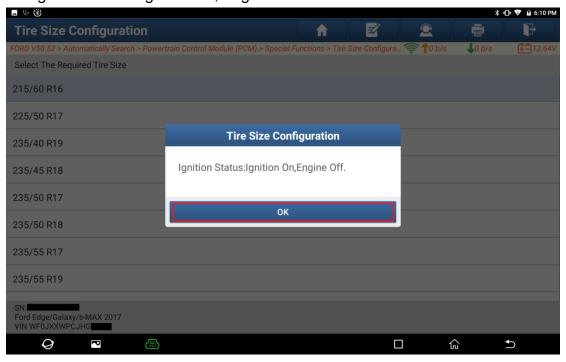

18. Enter the main menu and choose [Exit].



19. The program is completed. Exit the program.

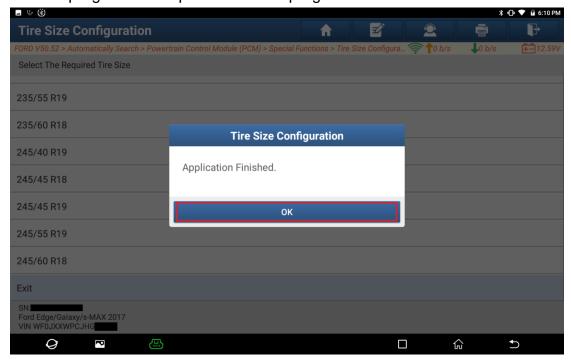

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.