

# Ford EcoSport Power Window Initialization


**Supported equipment:** Launch's full range of comprehensive diagnostic equipment

**Current equipment:** PAD 5


**Function description:** This function is used to set the top and bottom positions of the windows and the one-touch up function.

**Tested model:** Ford/2022/EcoSport, VIN: WF01XXERK1NA \*\*\*\*\*

1. On a PAD 5, choose [Local Diagnose].

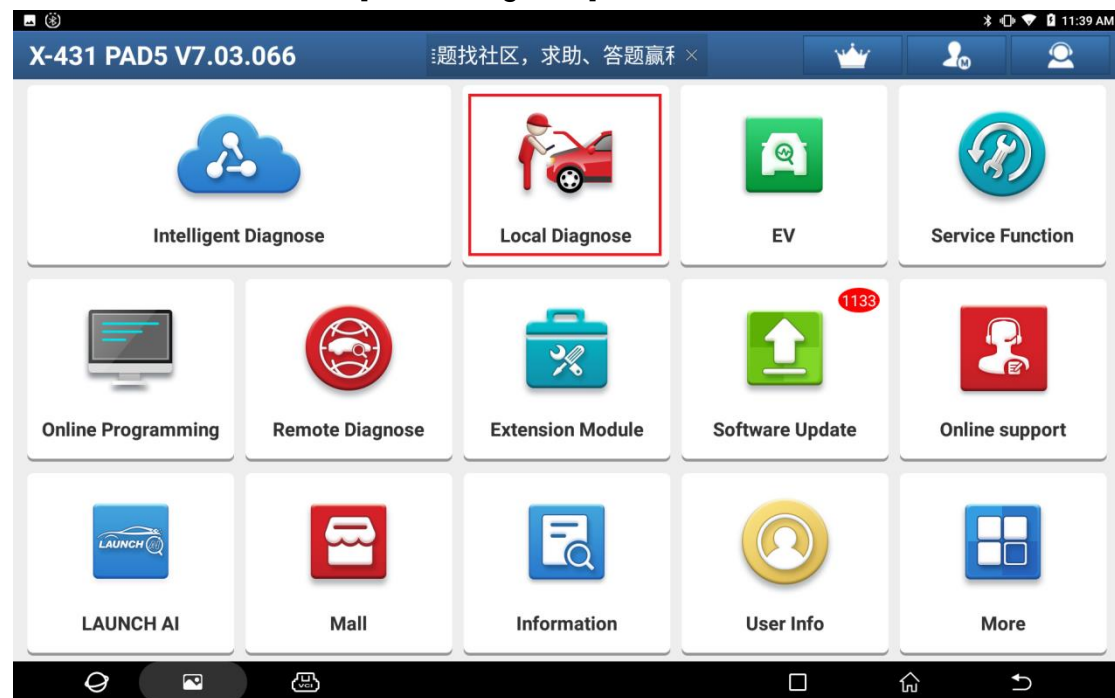

## 2. Choose [FORD] to test.

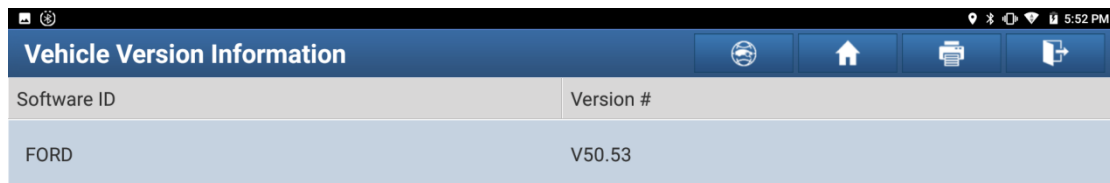**Ford Diagnosis V50.53****Software Introduction****ECU Coverage:**

This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.

**Basic Functions:**

- Reading ECUs
- Reading DTCs(Diagnostic trouble code)
- Clearing DTCs(Diagnostic trouble code)
- Reading Vehicle Running Data
- Vehicle Component Operation Test



**Special Functions:**


- Programmable Module Installation
- ESP(Electronic Stability Program) Sensor Calibration
- PCM (Powertrain Control Module) Or ICM (Instrument Control Module):

\*Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset, Unlimited Key Made ON/OFF Program, Unlimited Key Code)




3. Choose [Automatically Search] to identify car models automatically.

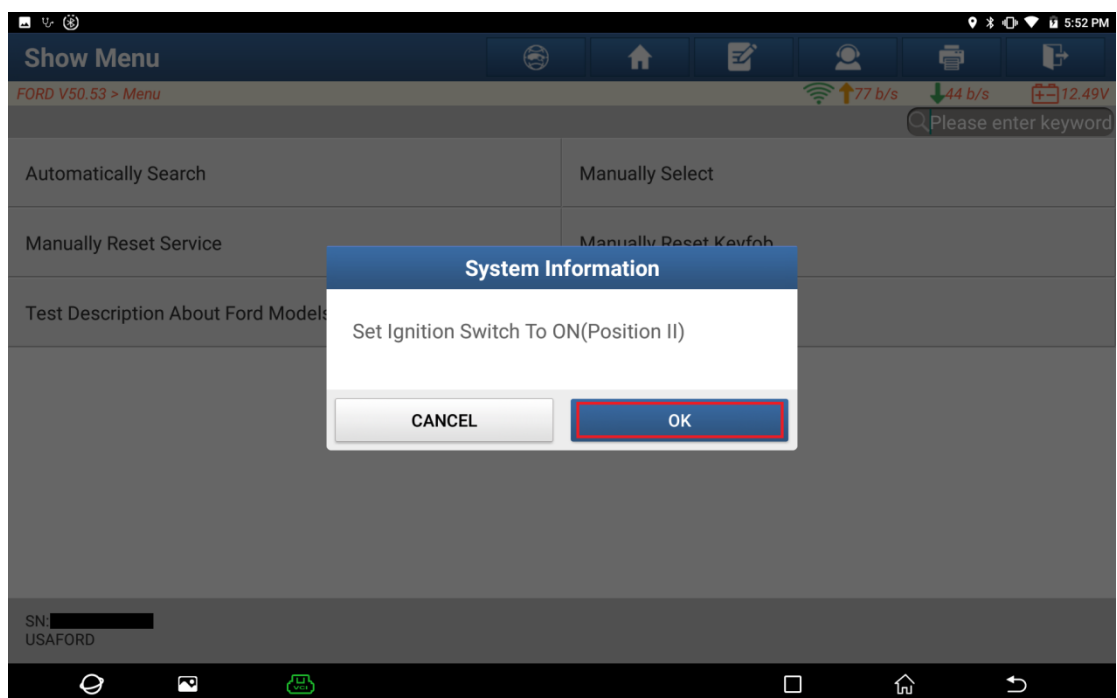
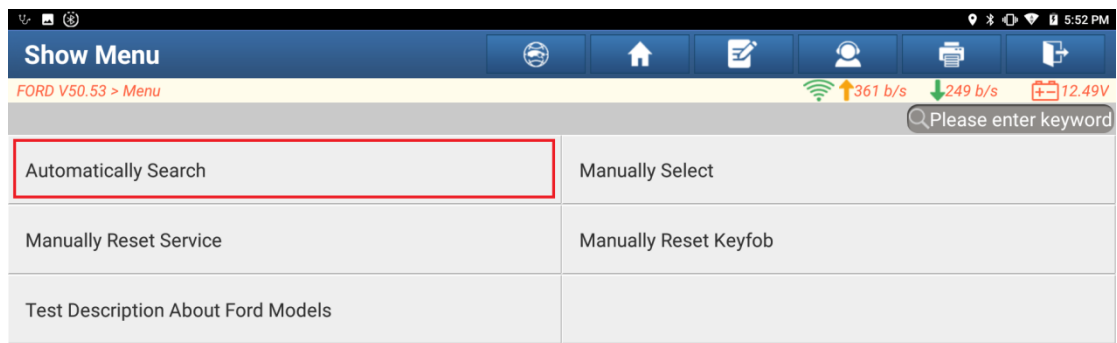



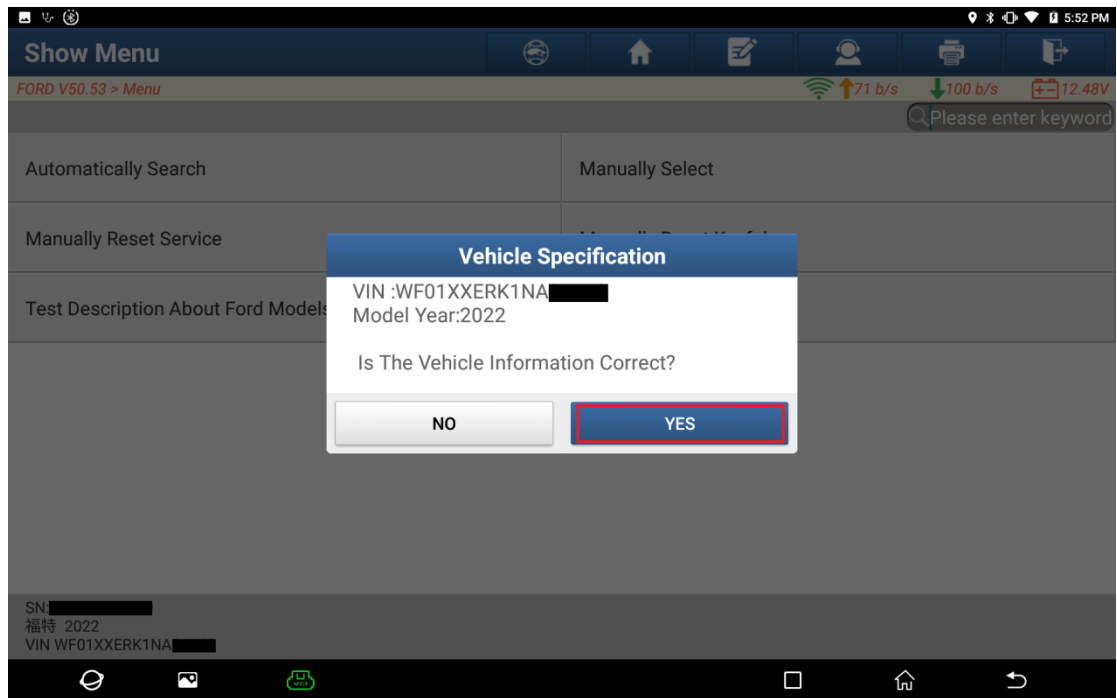


4. Click [Smart Detection] to scan the entire vehicle systems.

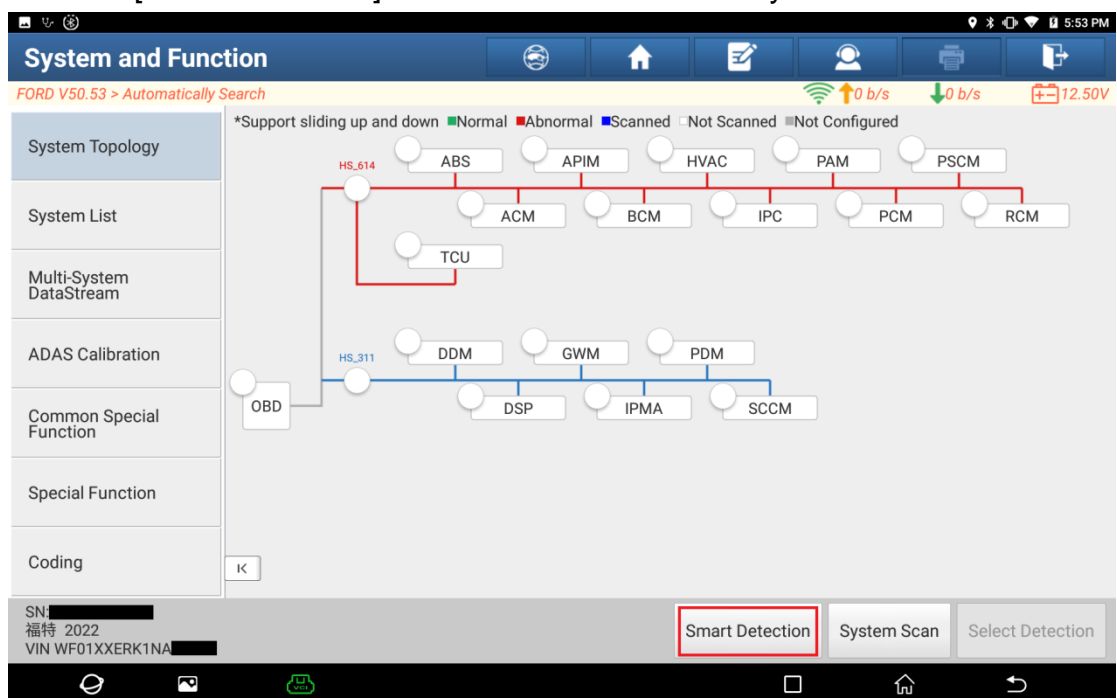


5. Click [DDM (Driver Door Module)] or [PDM (Passenger Door Module)] to access the system.  
(Both modules have this function and the process is the same; take the DDM module as an example.)

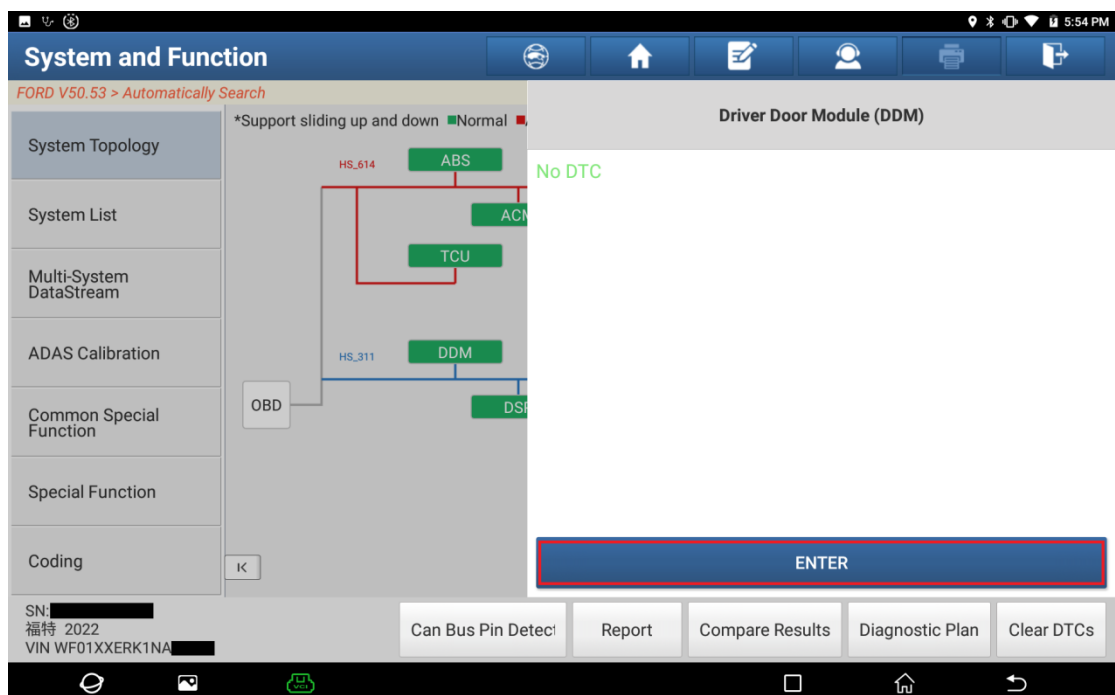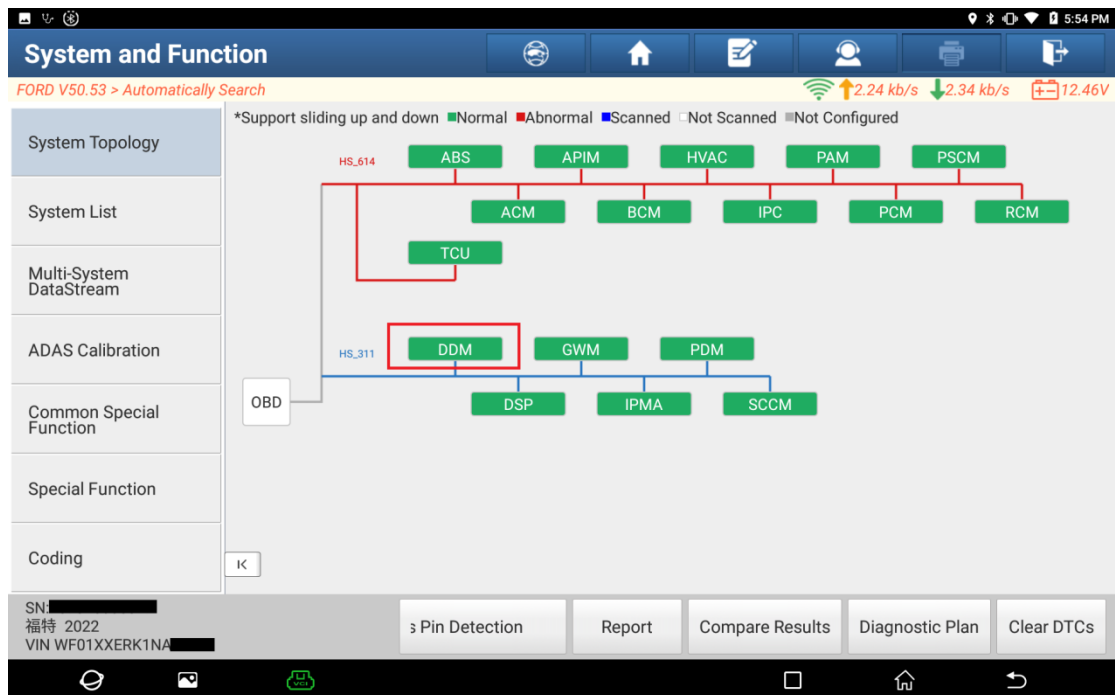


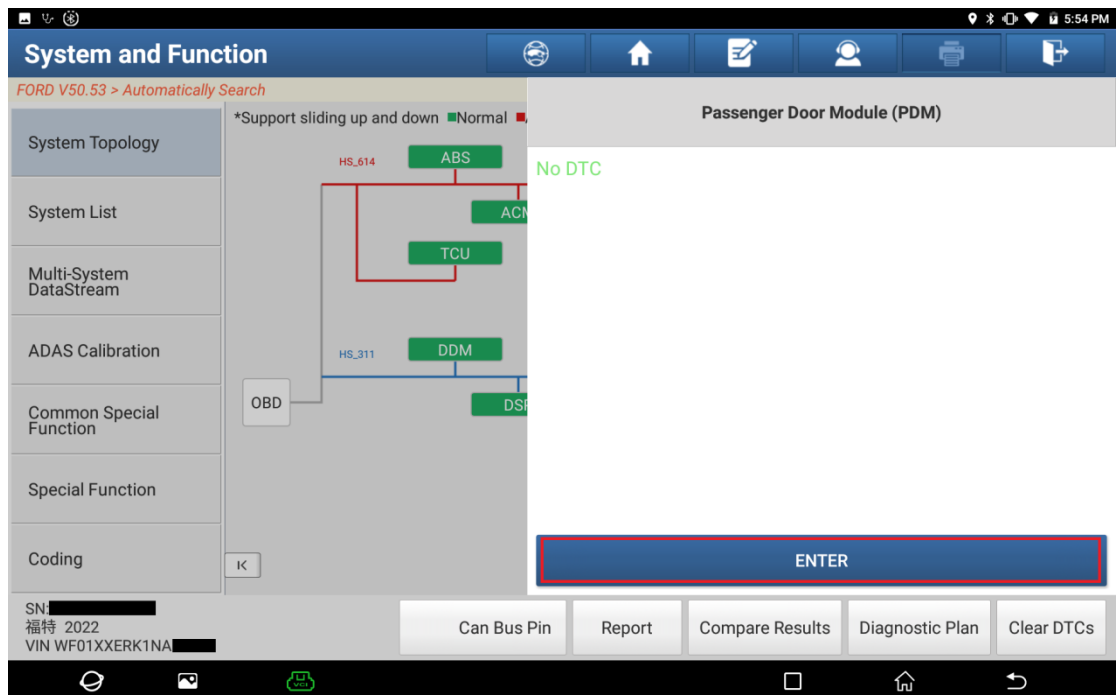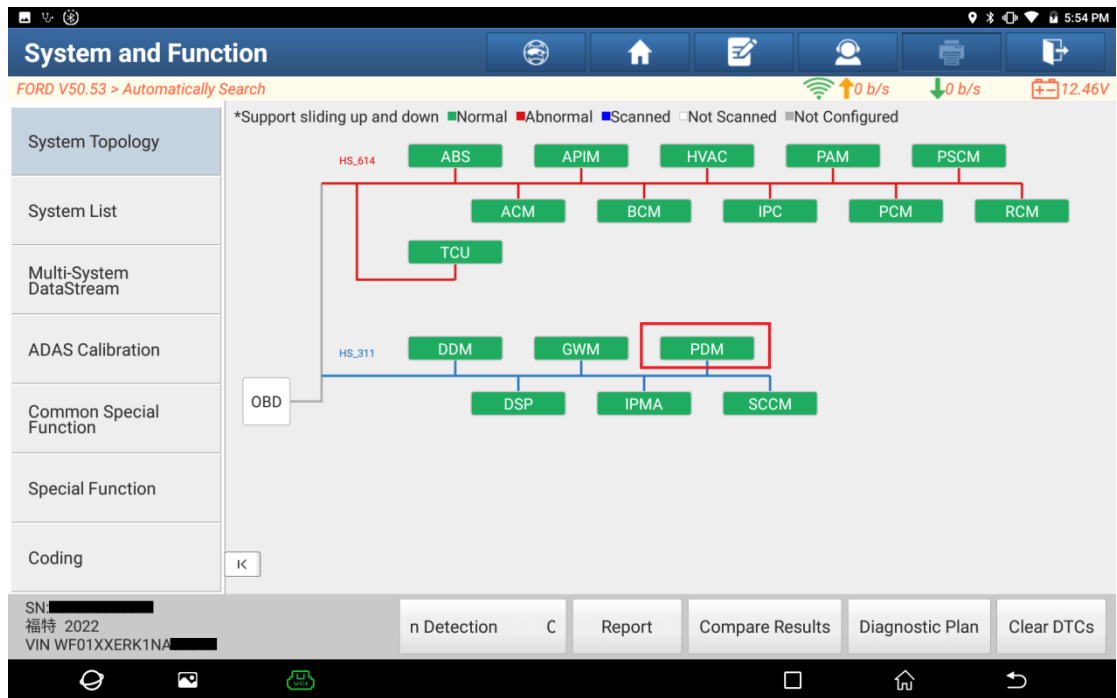


## 6. Click [Special Functions].

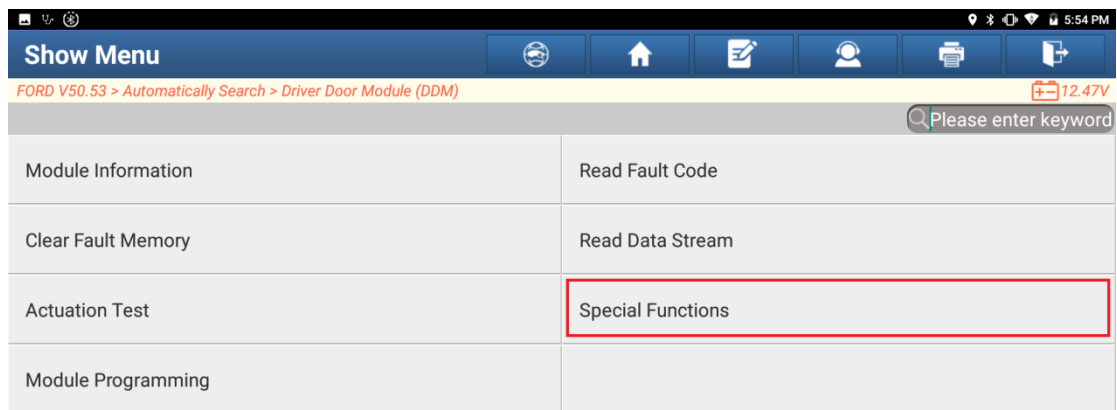


## 7. Click [Power Window Initialization].

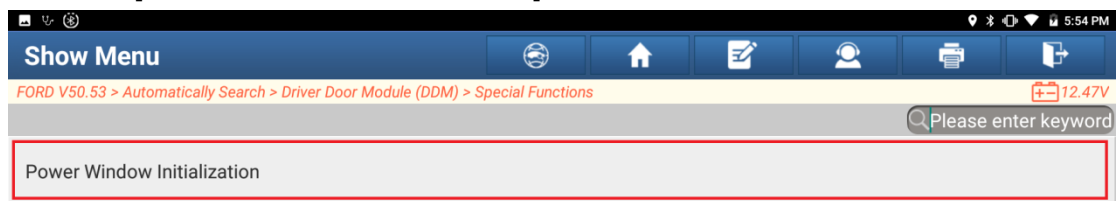


8. Connect a suitable battery support unit to the vehicle.

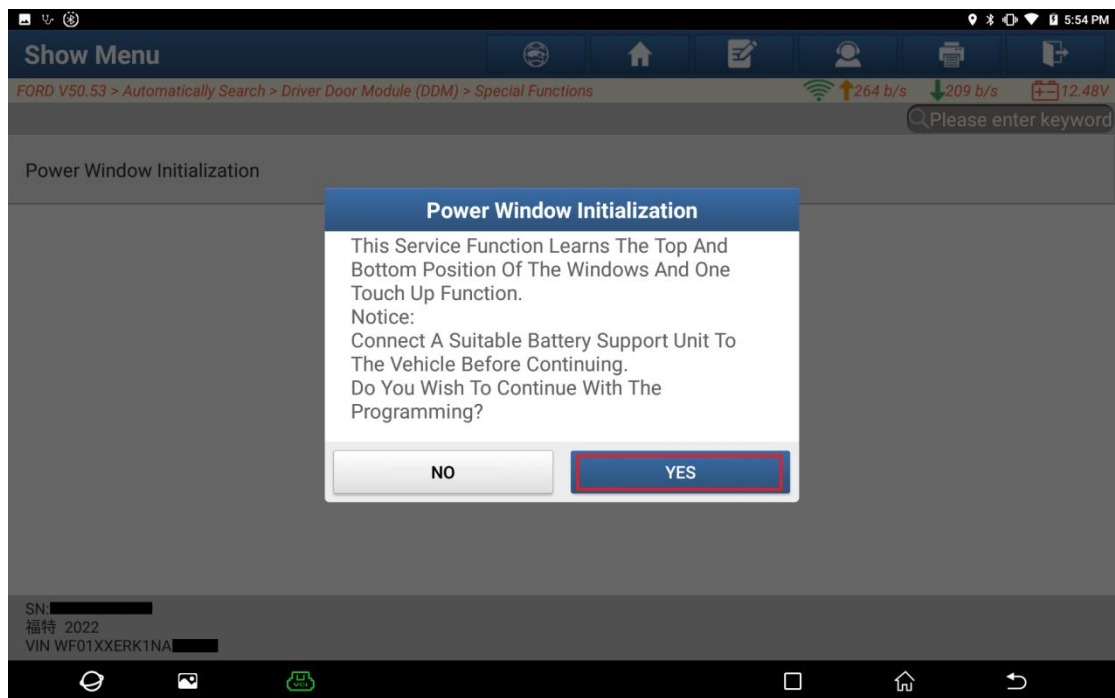


9. Ignition status: Ignition on, engine off

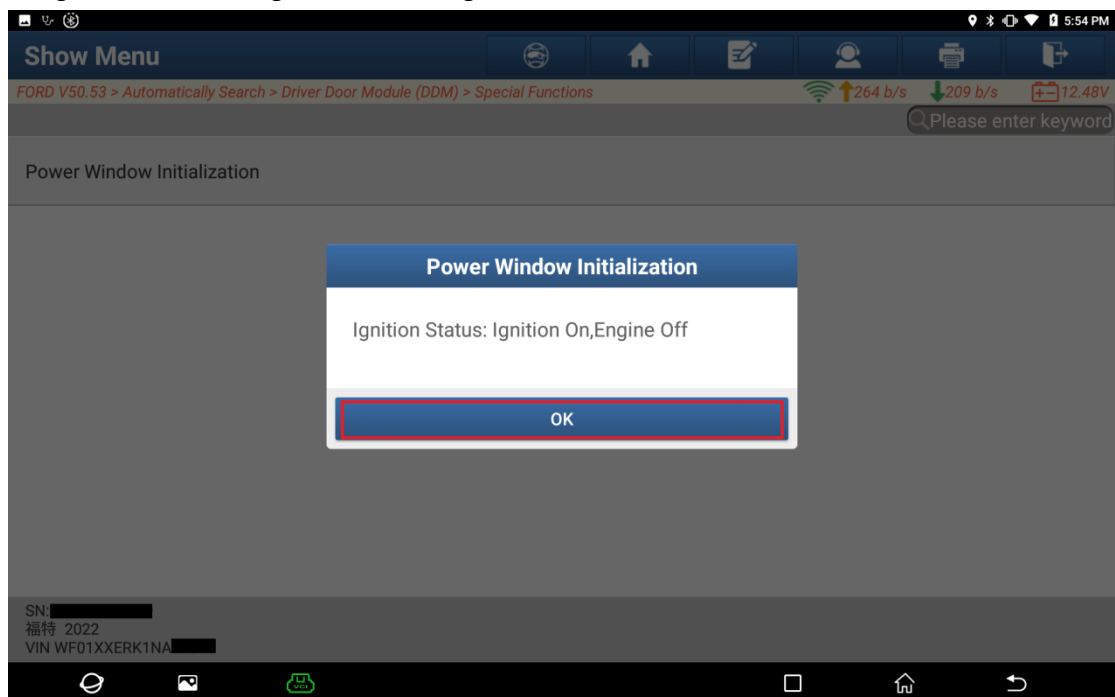

10. Wait for 15s.

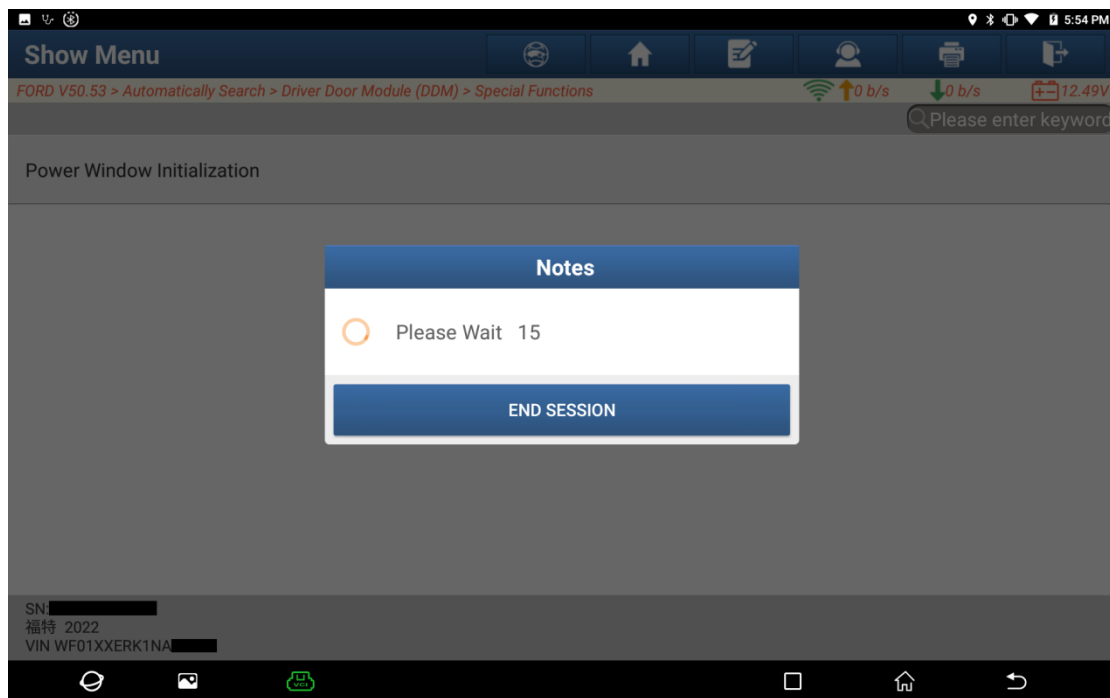

11. The program is completed successfully. Exit the program.

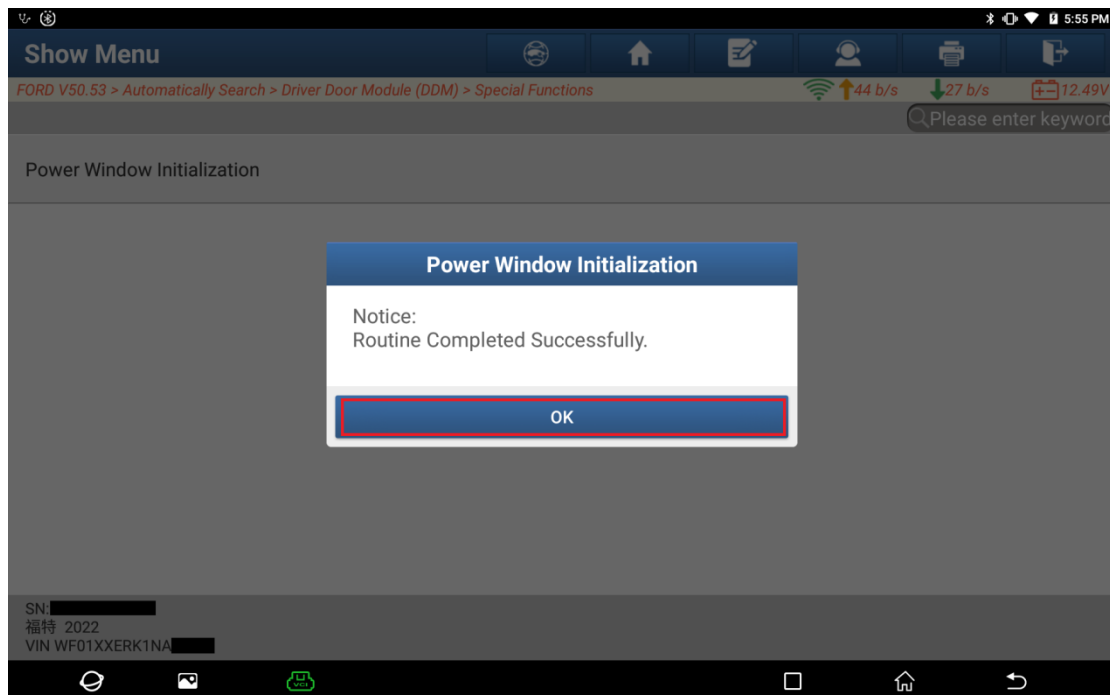

## Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.