Ford F-350 Tire Size Configuration


Supported equipment: Launch's full range of comprehensive diagnostic equipment

Current equipment: PAD 5


Function description: This program is used to modify the tire size configuration.


Tested model: Ford/2022/F-350, VIN: 1FT8W3DN0NEC*****

1. On a PAD 5, choose [Local Diagnose].

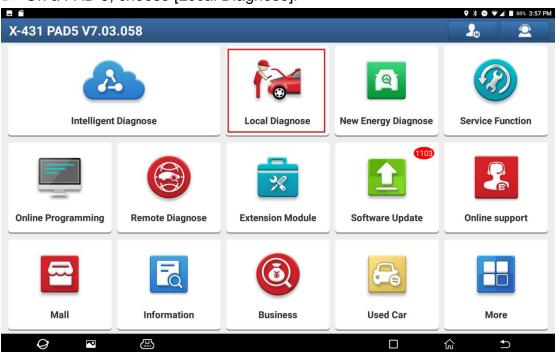

2. Choose [FORD] to test.

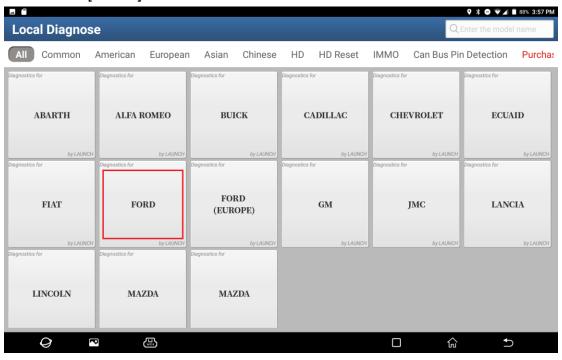

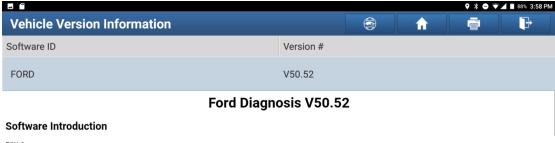

ECU Coverage:


This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.


- Reading ECUs
 Reading DTCs(Diagnostic trouble code)
 Clearing DTCs(Diagnostic trouble code)
 Reading Vehicle Running Data
 Vehicle Component Operation Test


- Programmable Module Installation
 ESP(Electronic Stability Program) Sensor Calibration
 PCM (Powertrain Control Module) or ICM (Instrument Control Module):
 *Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset,




3. Choose [Automatically Search] to identify car models automatically.

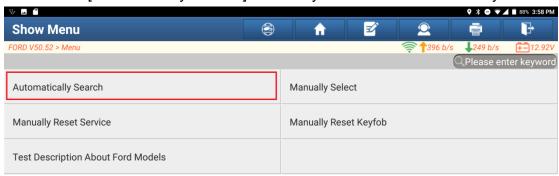

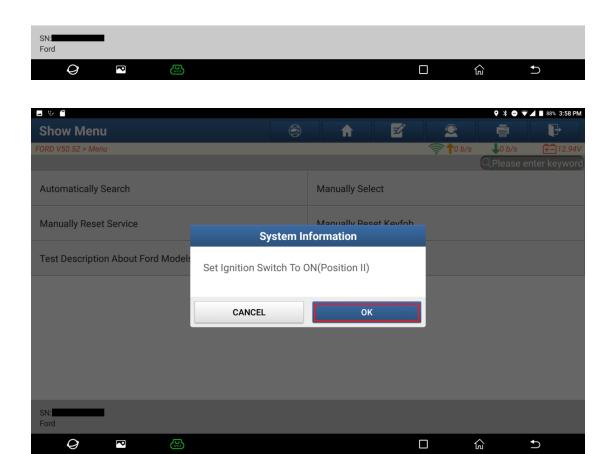


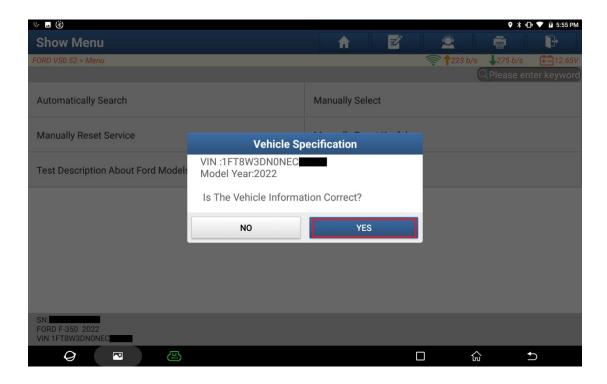

4. Click [High-speed Scan] to scan the entire vehicle systems.

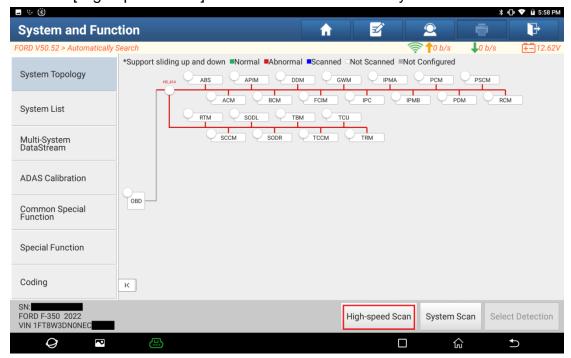

5. Click [BCM (Body Control Module)] to access the system.

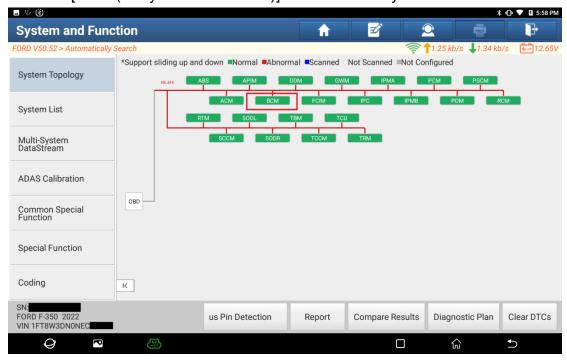




6. Click [Special Functions].






7. Click [Tire Size Configuration].

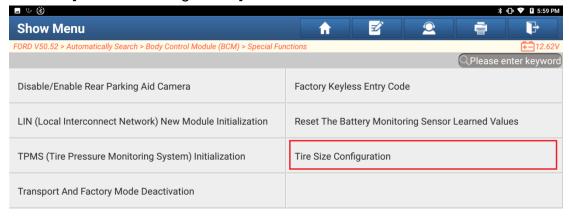





8. Program function introduction.

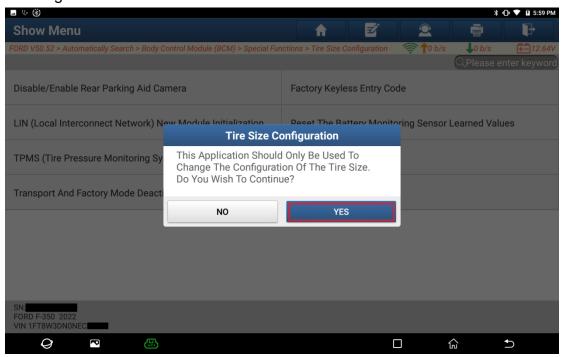

9. Turn the ignition switch to ON (position II).

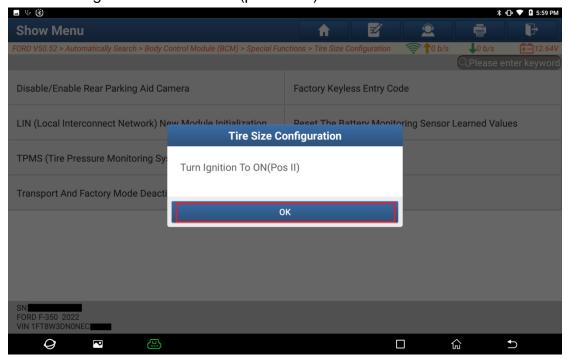


10. Check the stored configuration data.

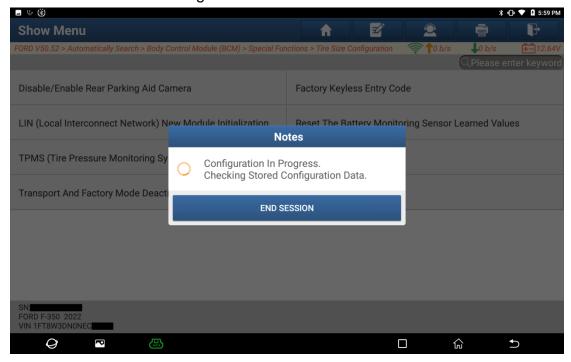


11. Enter the main menu and take selecting the [275/65R18] option as an example; the steps for other options are the same as this example.




12. Turn the ignition switch to ON (position II).

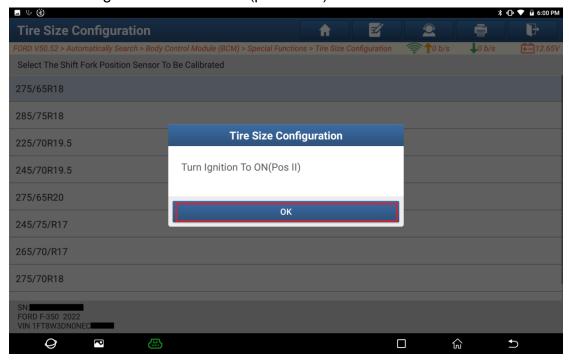


13. Modify configuration data.

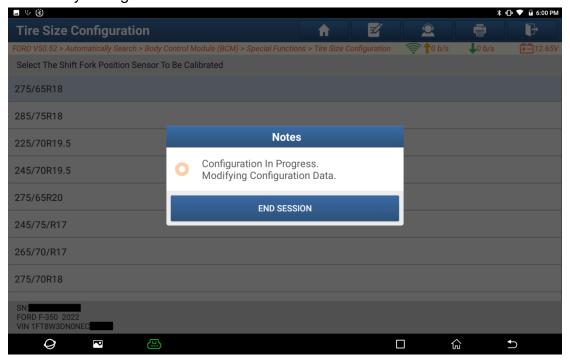


14. Write the new configuration data to the module.

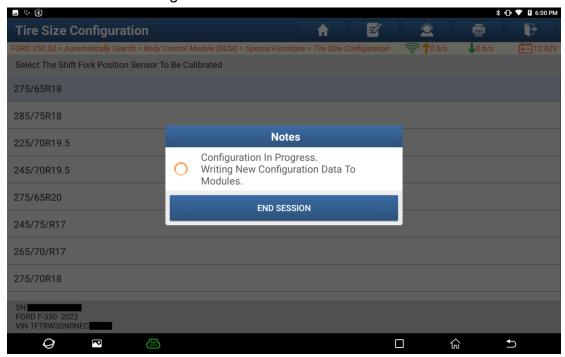


15. Update the BCM module.

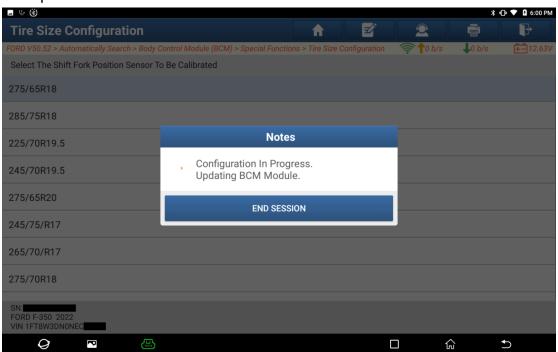


16. Communicating...Please wait.

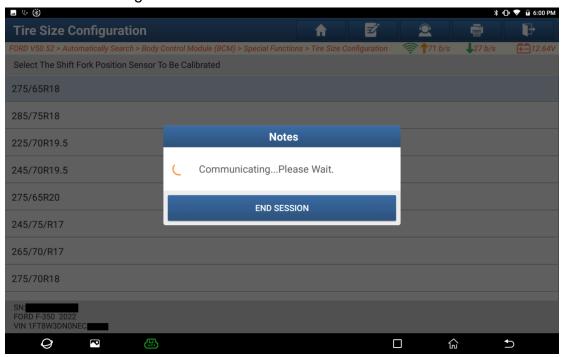


17. Update the stored configuration data.

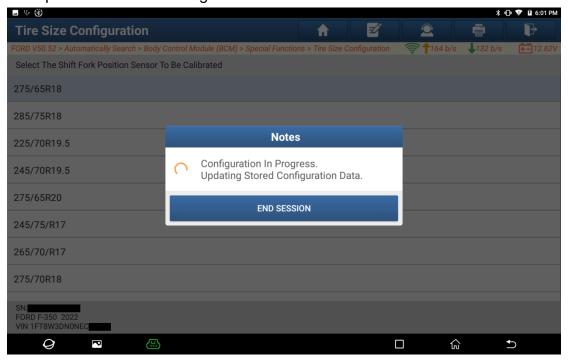

18. Turn the ignition switch to OFF (position 0).

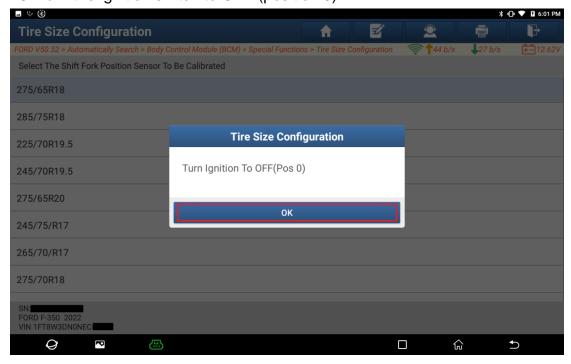


19. The tire size is updated to 275/65R18.

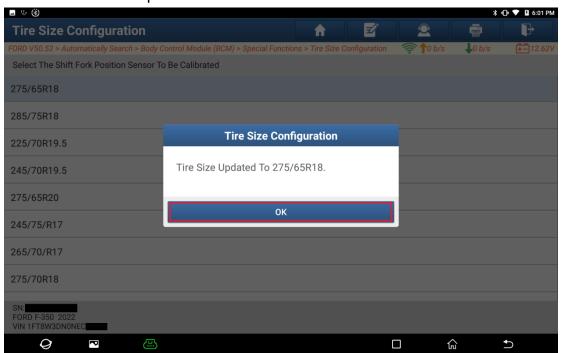


20. If [Other] is selected from the main menu




21. Enter the tire size.

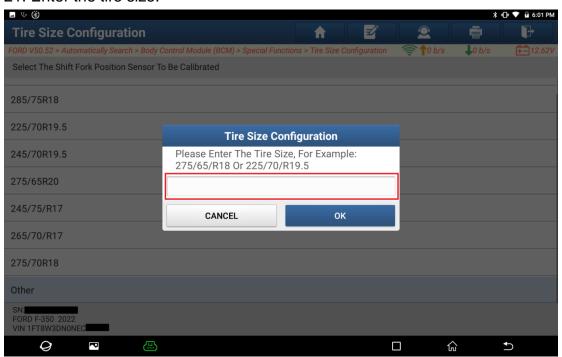



22. Take entering 275/65/R18 as an example.

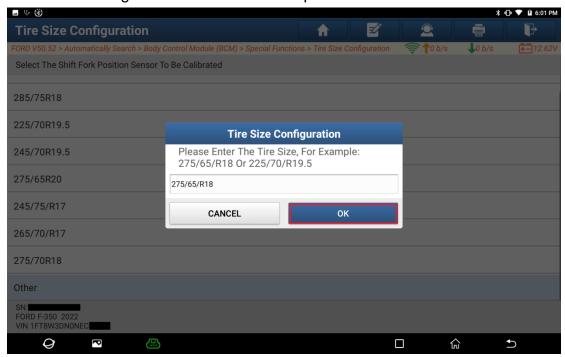



23. Subsequent steps are the same as the steps for selecting the [275/65R18] option in the main menu.

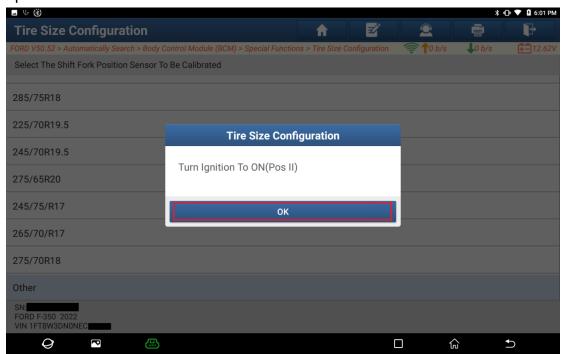


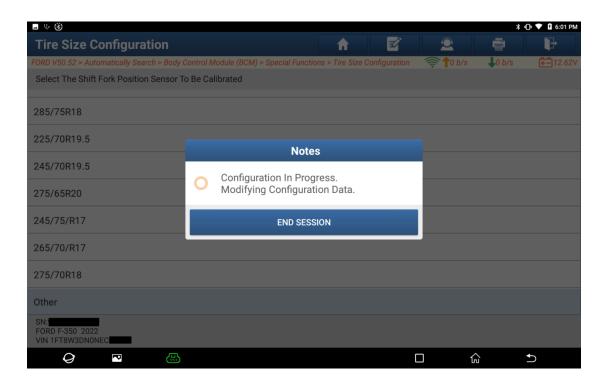


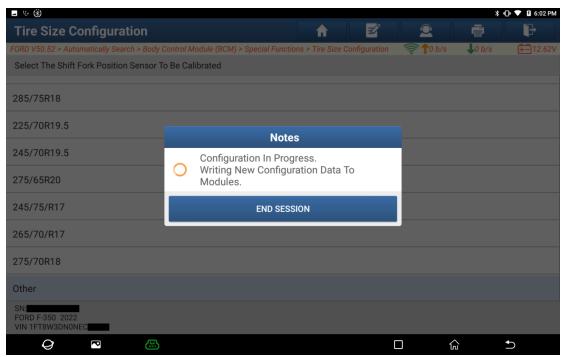


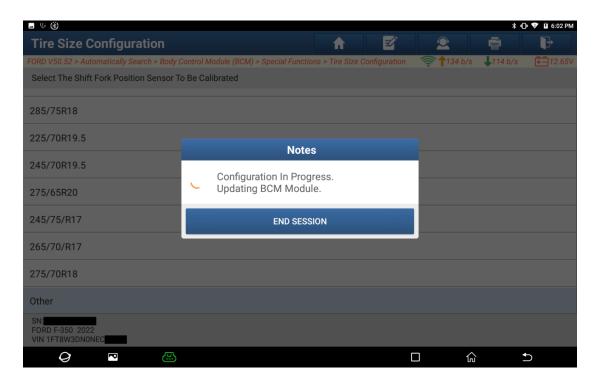

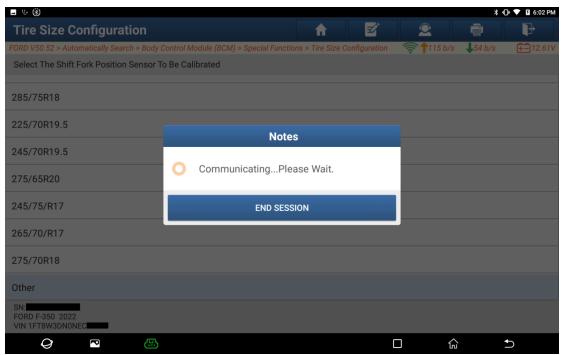

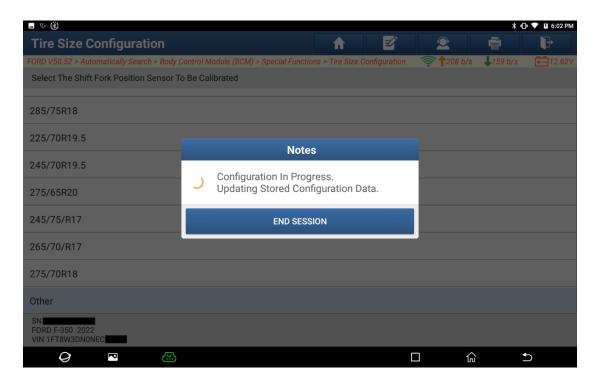

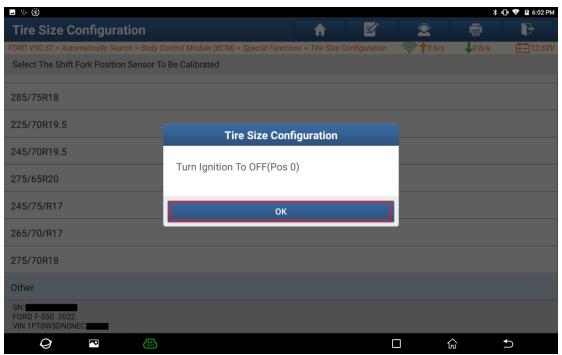

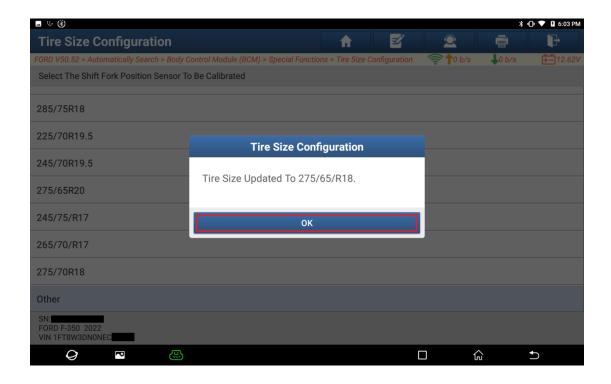

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.