Battery Status Info Update

Tested Model: Toyota Corolla Hybrid 2025


Function Description: This function is used to update the battery status information stored in the ECU.


Supported Equipment: Launch PRO or PAD series comprehensive diagnostic equipment


Execution Conditions: No hybrid/EV or battery-related DTCs are stored.

Procedure:

1. On a PRO3, choose [Local Diagnose], and then choose [TOYOTA] for testing.

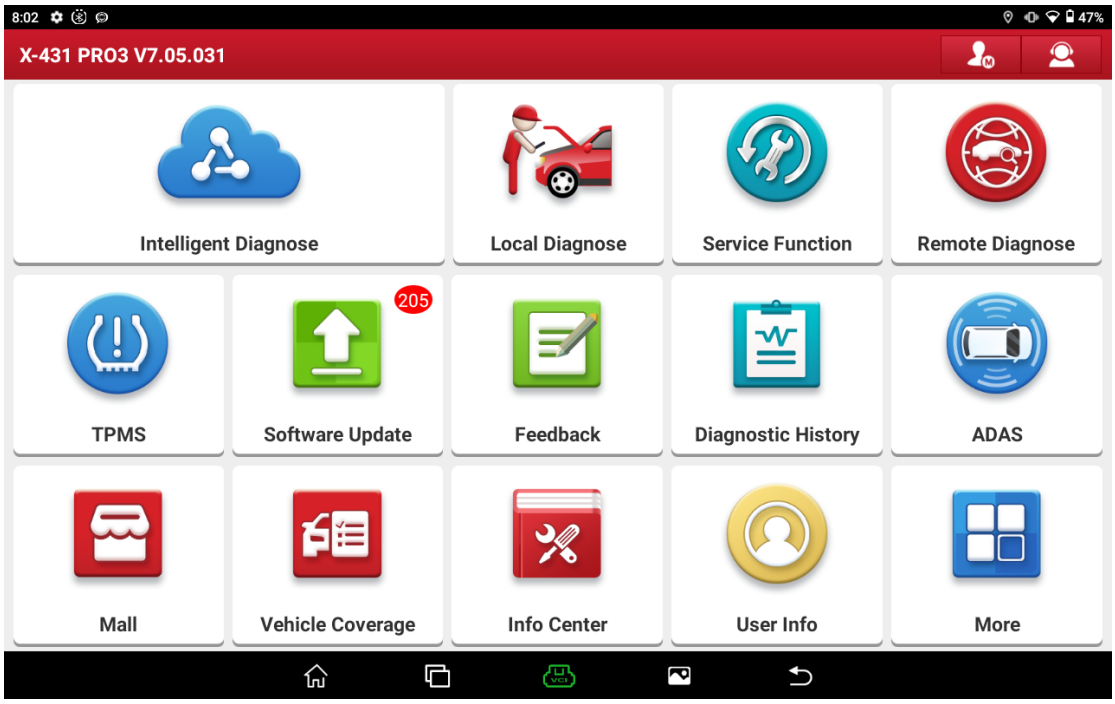

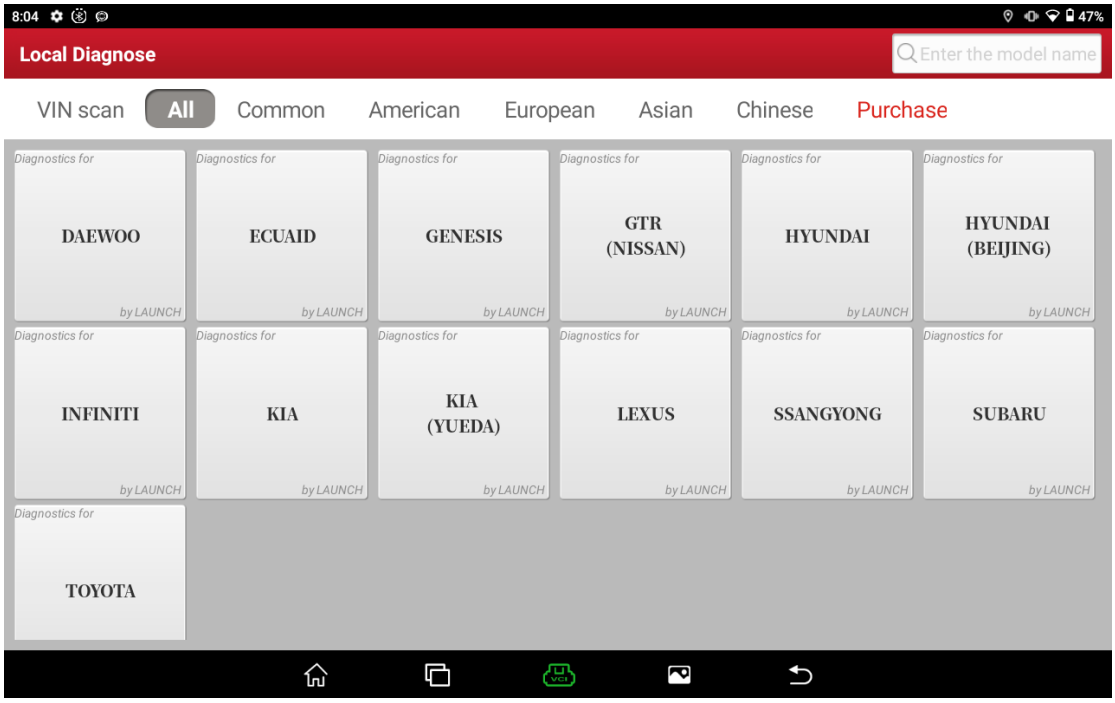

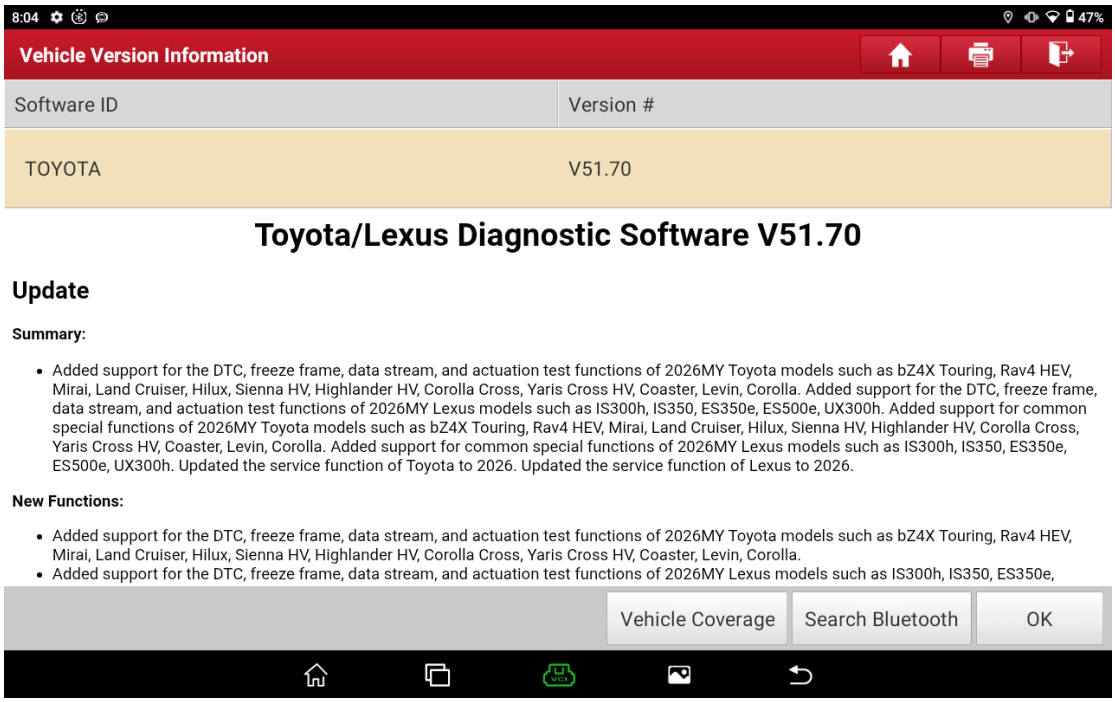

Toyota/Lexus Diagnostic Software V51.70

Update


Summary:


- Added support for the DTC, freeze frame, data stream, and actuation test functions of 2026MY Toyota models such as bZ4X Touring, Rav4 HEV, Mirai, Land Cruiser, Hilux, Sienna HV, Highlander HV, Corolla Cross, Yaris Cross HV, Coaster, Levin, Corolla. Added support for the DTC, freeze frame, data stream, and actuation test functions of 2026MY Lexus models such as IS300h, IS350, ES350e, ES500e, UX300h. Added support for common special functions of 2026MY Toyota models such as bZ4X Touring, Rav4 HEV, Mirai, Land Cruiser, Hilux, Sienna HV, Highlander HV, Corolla Cross, Yaris Cross HV, Coaster, Levin, Corolla. Added support for common special functions of 2026MY Lexus models such as IS300h, IS350, ES350e, ES500e, UX300h. Updated the service function of Toyota to 2026. Updated the service function of Lexus to 2026.

New Functions:


- Added support for the DTC, freeze frame, data stream, and actuation test functions of 2026MY Toyota models such as bZ4X Touring, Rav4 HEV, Mirai, Land Cruiser, Hilux, Sienna HV, Highlander HV, Corolla Cross, Yaris Cross HV, Coaster, Levin, Corolla.
- Added support for the DTC, freeze frame, data stream, and actuation test functions of 2026MY Lexus models such as IS300h, IS350, ES350e,


2. Choose [Automatic Search (Europe and Other)] to automatically identify the vehicle model. You can choose your region in [Set Area]; for this test, choose [Europe and Other].

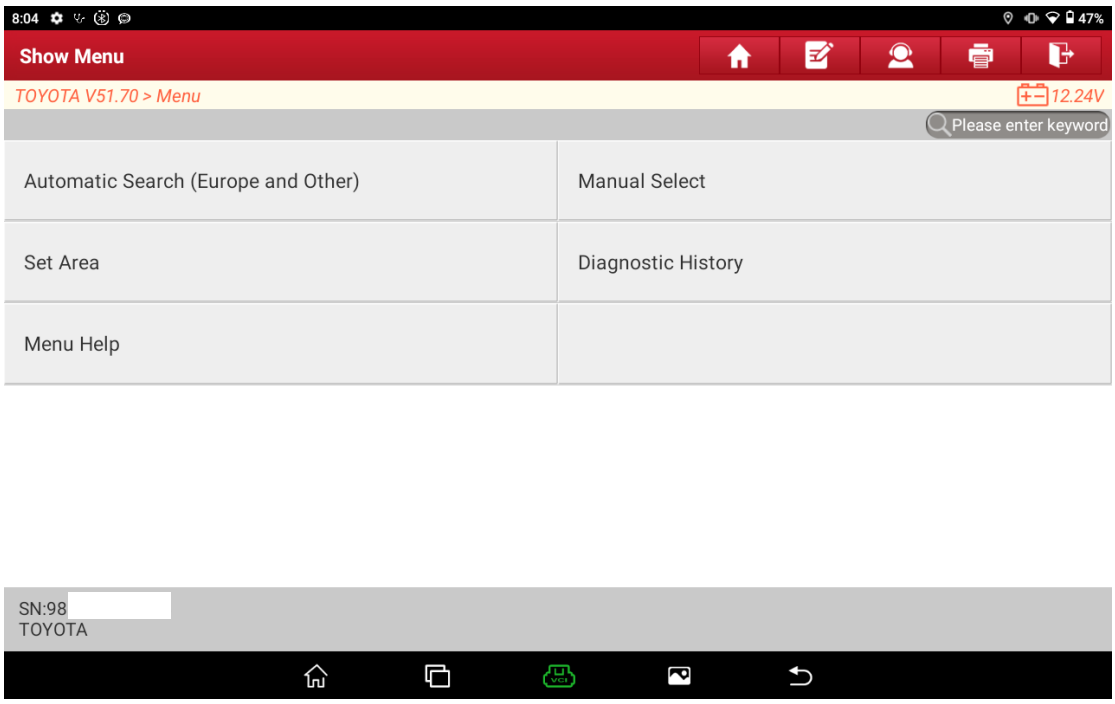

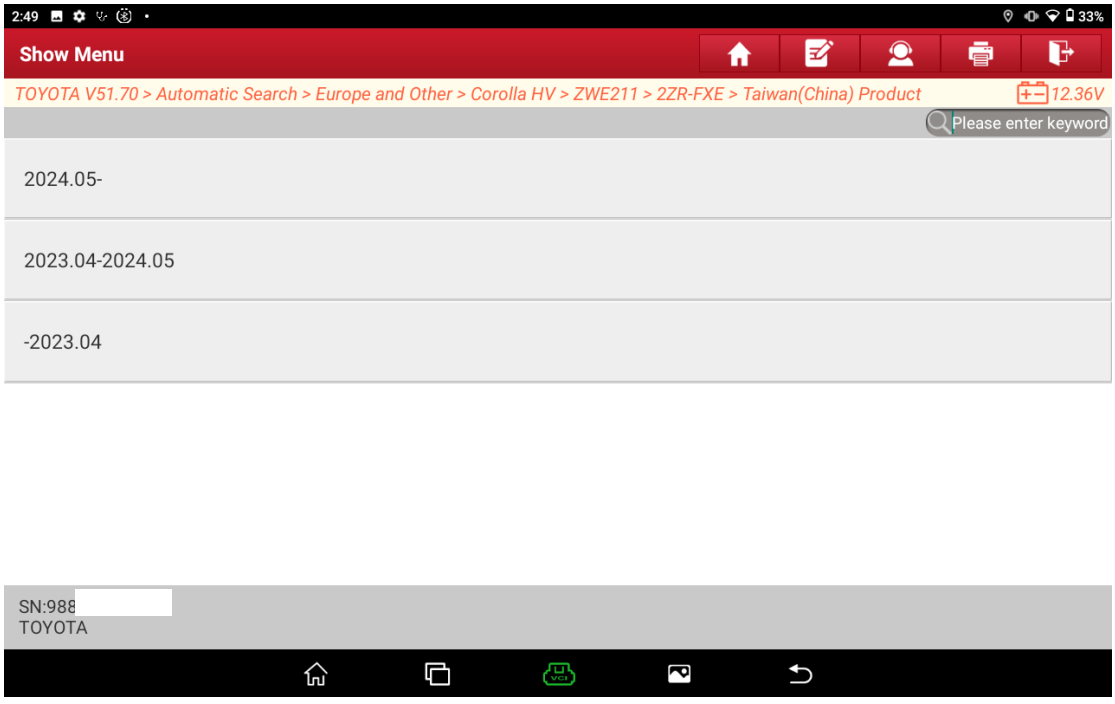


3. Confirm the vehicle information, and then tap "OK".

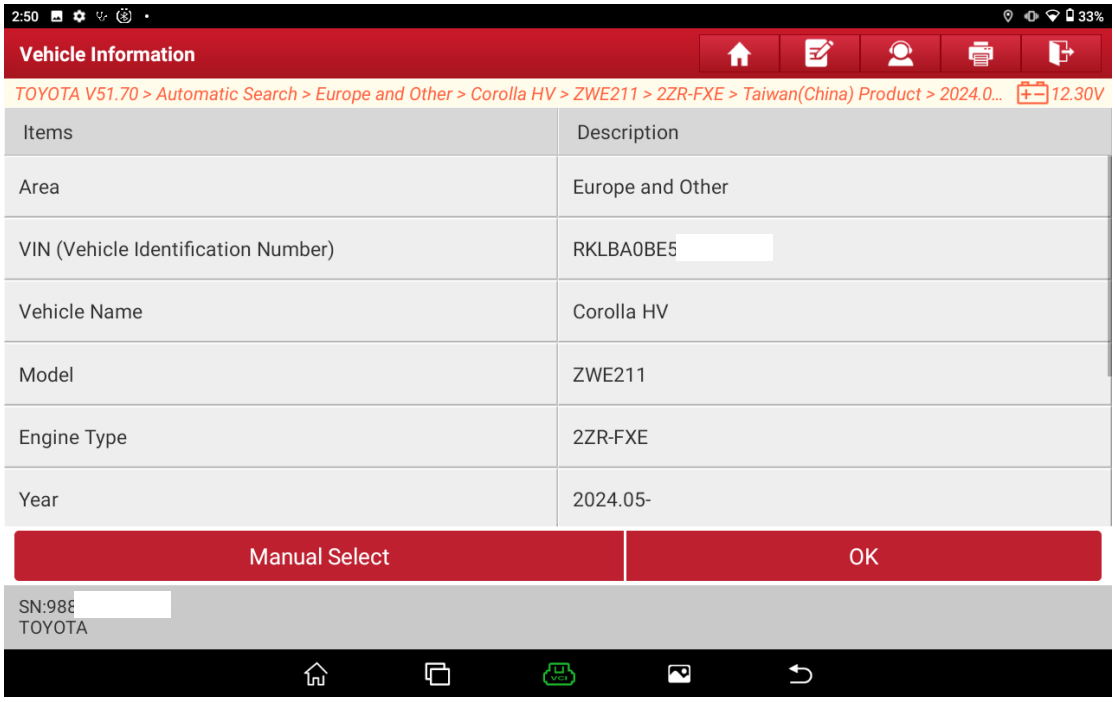


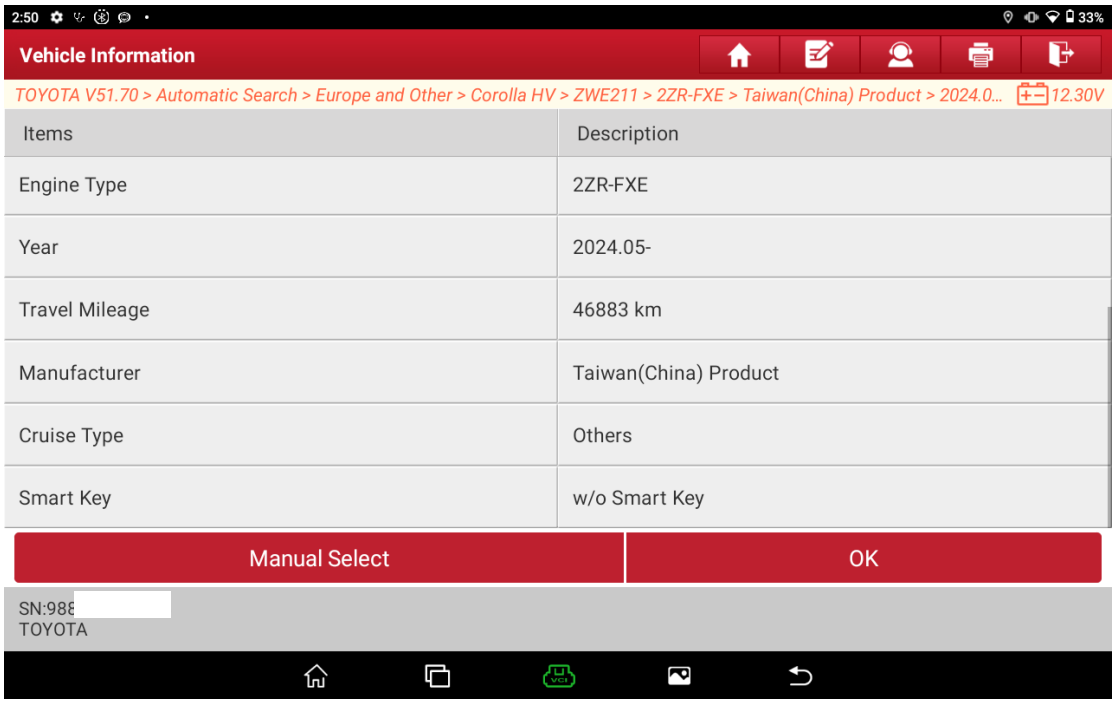


4. Tap [HC (Hybrid Control)] to enter the system.

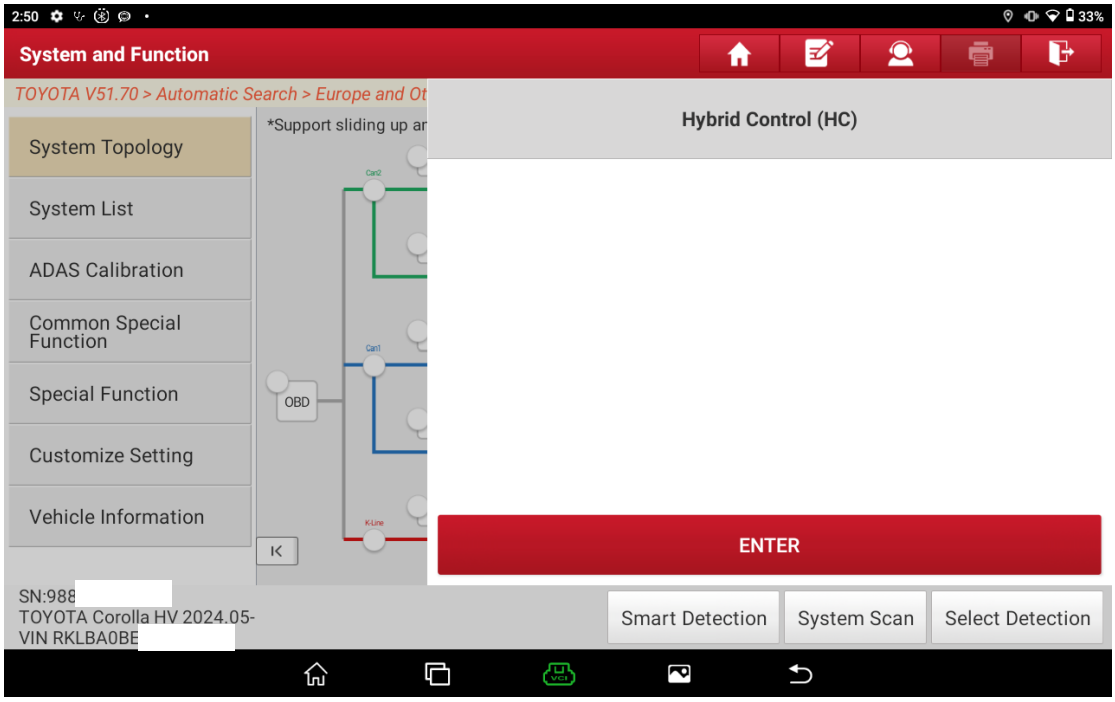


5. Choose [Special function].

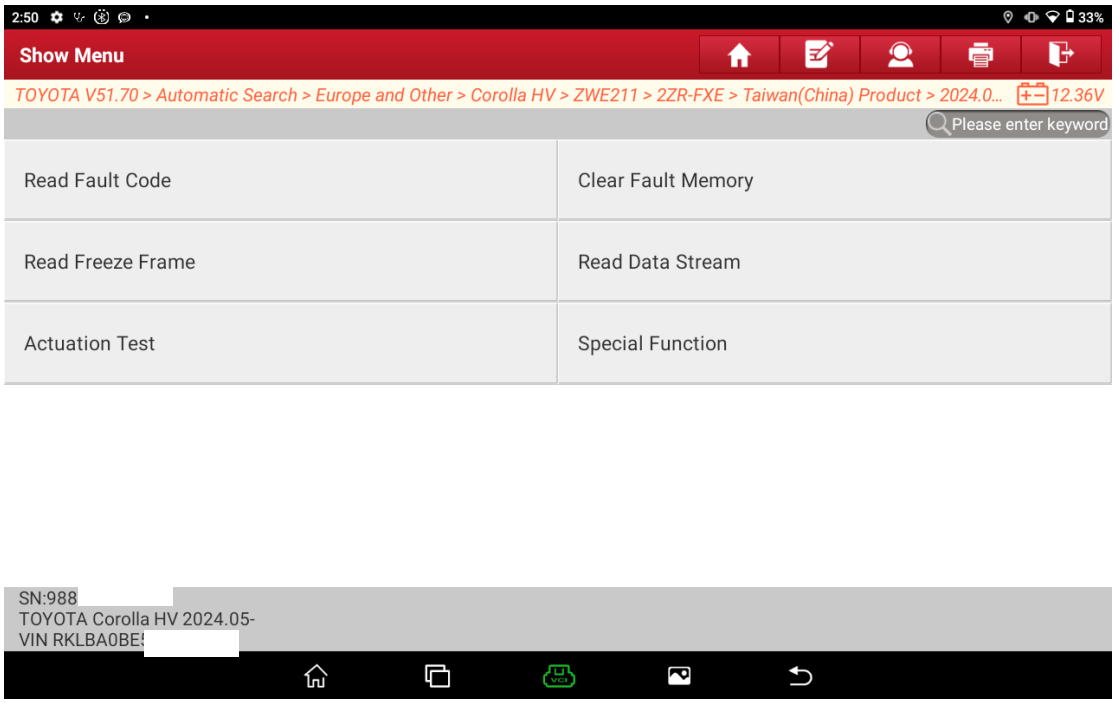


6. Choose [Battery Status Info Update].

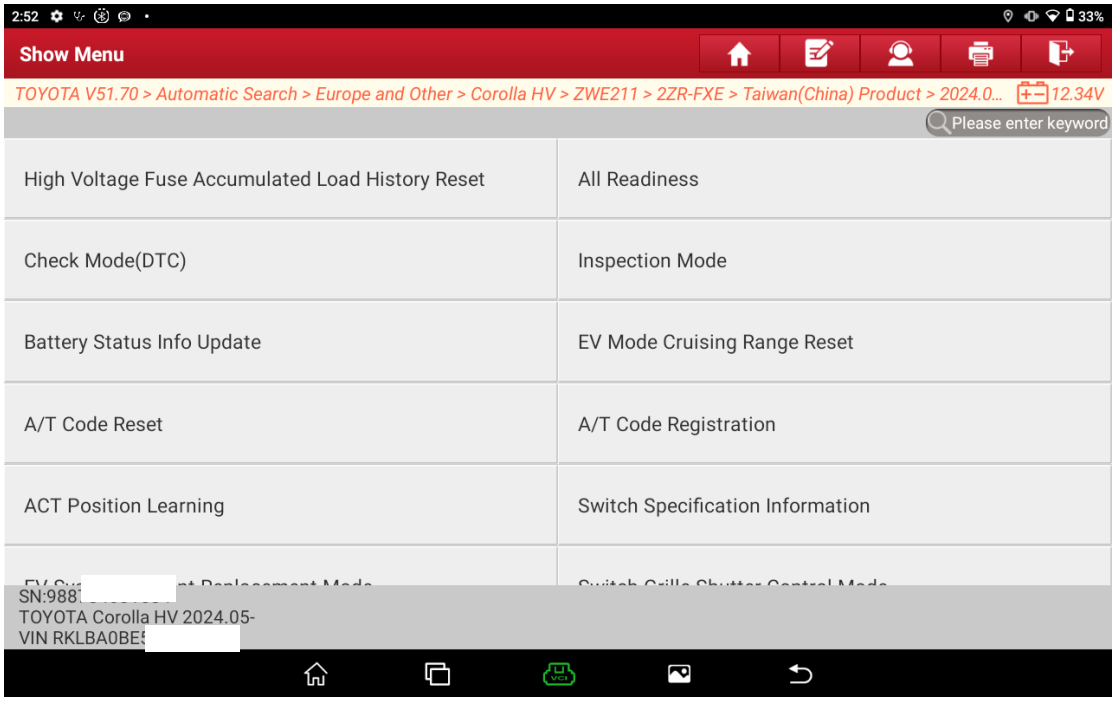


7. Tap "OK".

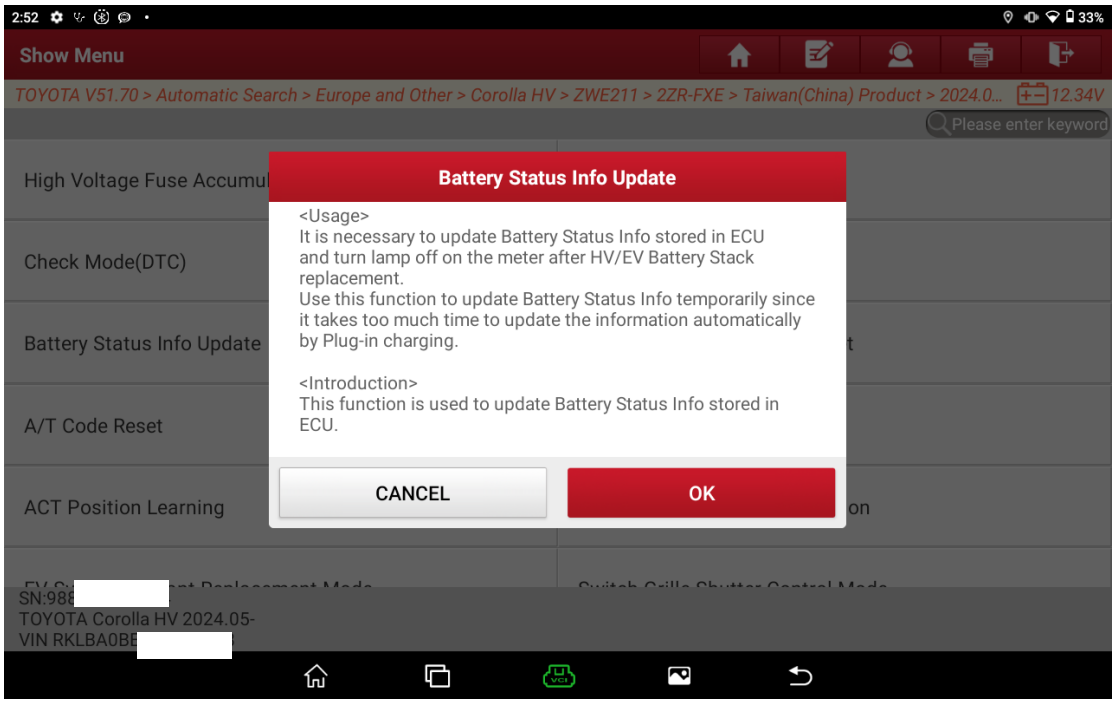


8. After confirming the execution conditions, tap "OK".

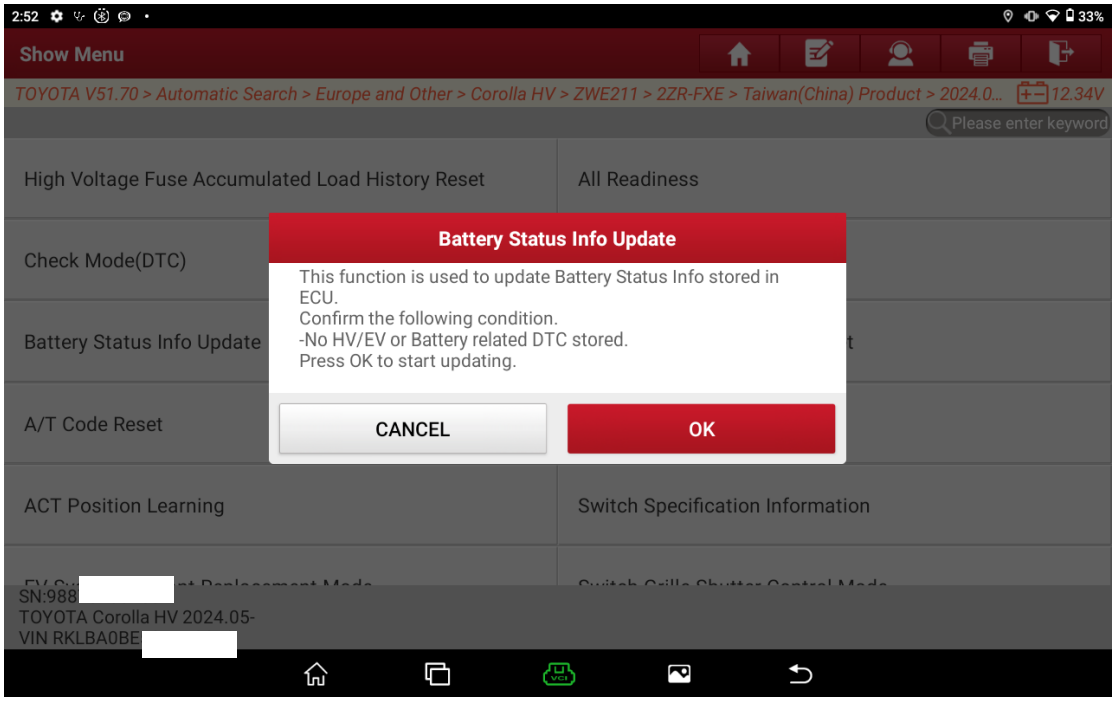

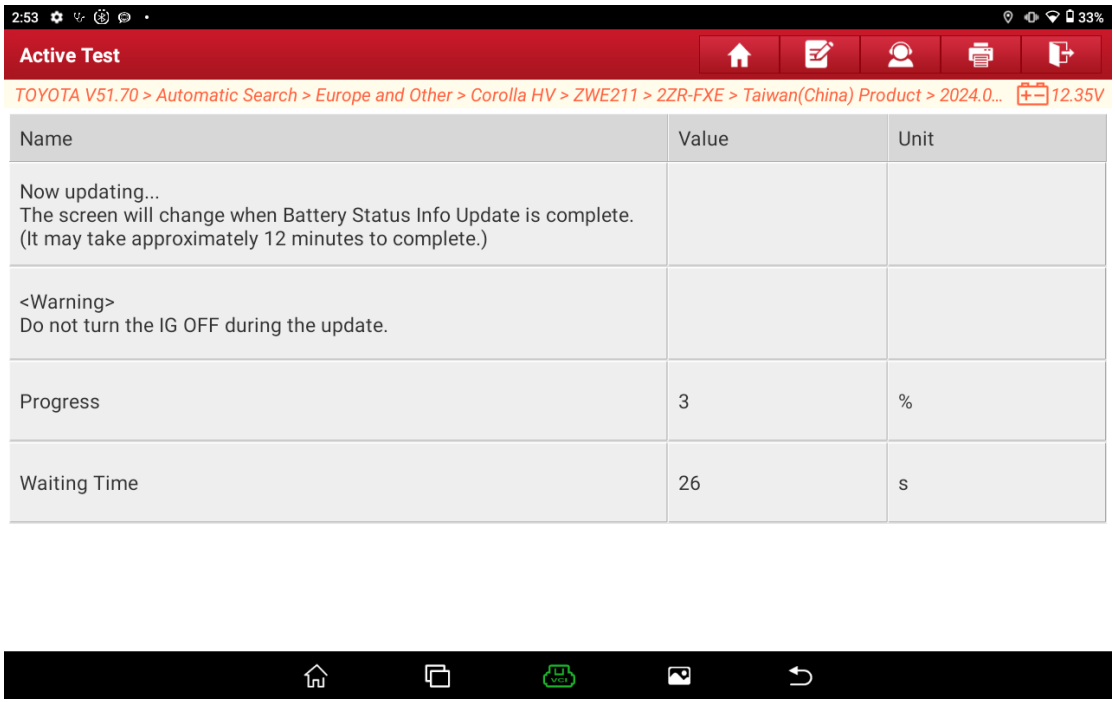

9. Battery status information update is completed. Tap "OK" to exit the function.

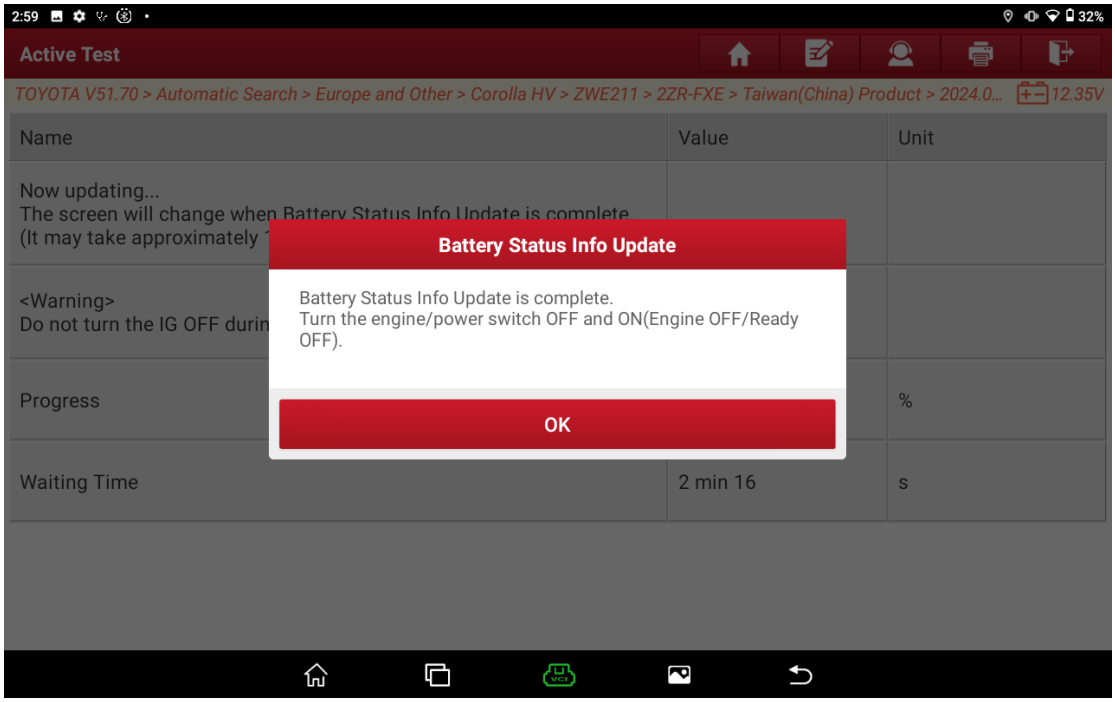

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.