

路虎揽胜发动机柴油微粒过滤器动态再生

实测车型：2016 年款揽胜，VIN: SALGA2KF3GA28****，如下图。



操作指引:

1). 进入路虎发动机控制模块，特殊功能，选择“柴油微粒过滤器动态再生”，如图 1



图 1

2). 阅读“重要说明”后，点击“确定”。如图 2



图 2

3). 打开点火开关，点击“确定”，如图 3



图 3

4). 点击“确定”，读取微粒过滤器烟尘质量。如图 4



图 4

5). 提示“完成”，点击“确定”，如图 5



图 5

6). 按提示启动发动机，热车待水温高于 60℃后，以高于 40km/h 的车速驾驶车辆。另一人操作设备，点击“确定”。如图 6



图 6

7). 阅读“重要说明”，并点击“确定”。如图 7

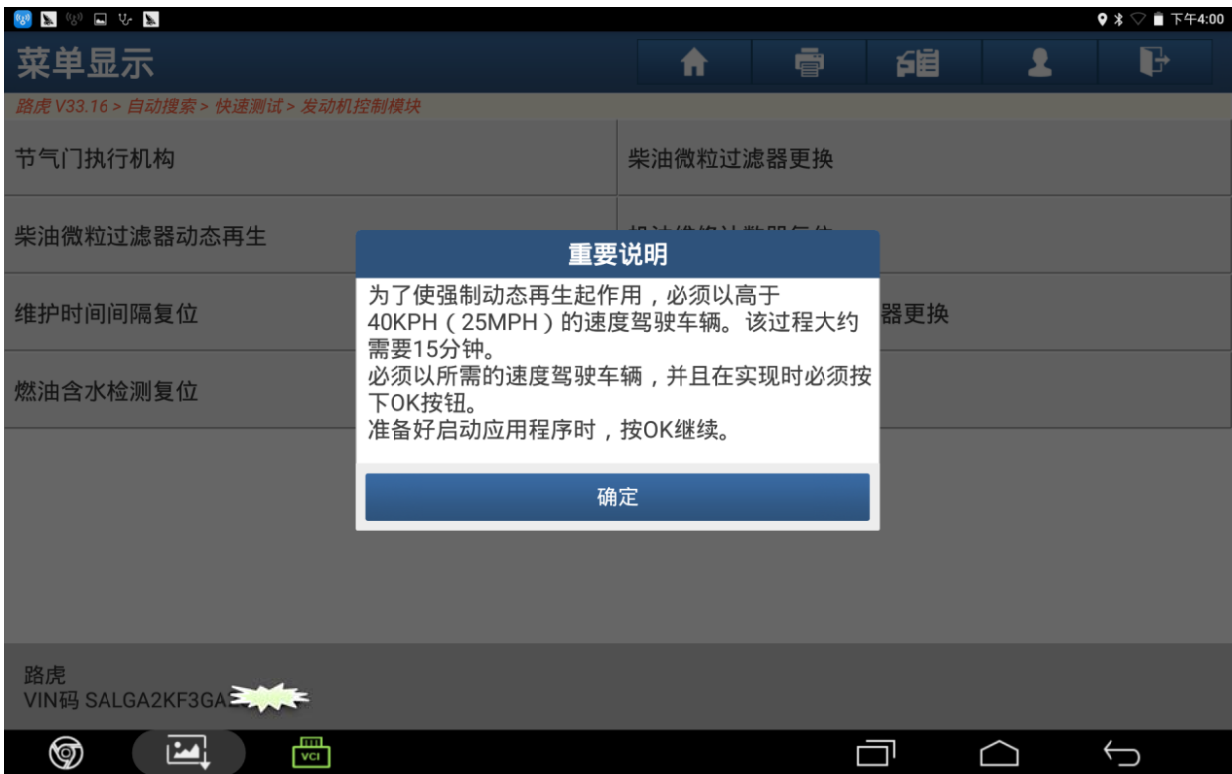


图 7

8). 按提示点击“确定”，如图 8



图 8

9). 阅读提示信息，并点击“确定”。如图 9



图 9

10). 读取温度为 89°C，高于 60°C，点击“正常”。如图 10



图 10

11). 阅读提示信息，并点击“确定”。如图 11



图 11

12). 提示“完成”，点击“确定”，如图 12



图 12

13). 阅读提示信息，并点击“确定”。如图 13



图 13

14). 阅读提示信息，并点击“确定”。如图 14



图 14

15). 烟尘质量值由 10g 慢慢下降当达到下限 6g，点击“正常”。如图 15, 16

The screenshot shows the '动作测试' (Action Test) screen for a Jaguar V33.16. The breadcrumb trail is '路虎 V33.16 > 自动搜索 > 系统选择 > 发动机控制模块'. Below the breadcrumb is a table with three columns: '数据流名称' (Data Stream Name), '值' (Value), and '单位' (Unit). The table contains one row with the text '正在读取微粒过滤器烟尘质量。当烟尘质量达到可接受的下限6g时，按OK。' (Reading particulate filter ash mass. When ash mass reaches the acceptable lower limit of 6g, press OK.), a value of '10', and a unit of 'g'. At the bottom, there are two buttons: '取消' (Cancel) and '正常' (Normal).

| 数据流名称 | 值 | 单位 |
|-------------------------------------|----|----|
| 正在读取微粒过滤器烟尘质量。当烟尘质量达到可接受的下限6g时，按OK。 | 10 | g |



图 15

The screenshot shows the '动作测试' (Action Test) screen for a Jaguar V33.16. The breadcrumb trail is '路虎 V33.16 > 自动搜索 > 系统选择 > 发动机控制模块'. Below the breadcrumb is a table with three columns: '数据流名称' (Data Stream Name), '值' (Value), and '单位' (Unit). The table contains one row with the text '正在读取微粒过滤器烟尘质量。当烟尘质量达到可接受的下限6g时，按OK。' (Reading particulate filter ash mass. When ash mass reaches the acceptable lower limit of 6g, press OK.), a value of '6', and a unit of 'g'. At the bottom, there are two buttons: '取消' (Cancel) and '正常' (Normal).

| 数据流名称 | 值 | 单位 |
|-------------------------------------|---|----|
| 正在读取微粒过滤器烟尘质量。当烟尘质量达到可接受的下限6g时，按OK。 | 6 | g |



图 16

16). 提示“完成”，点击“确定”。如图 17



图 17

17). 找个安全地方停车，关闭点火开关，并将换挡杆置于P档。点击“确定”。如图 18



图 18

18). 阅读提示信息，并点击“确定”，如图 19



图 19

19). 阅读提示信息，并点击“确定”，如图 20



图 20

20). 正在初始化, 如图 21



图 21

21). 按提示打开点火开关, 并点击“确定”, 如图 22



图 22

22). 提示“清除故障代码”，点击“确定”。如图 23



图 23

23). 提示“清除故障代码完成”，点击“确定”。如图 24



图 24

24). 关闭点火开关，点击“确定”。如图 25



图 25

25). 打开点火开关，点击“确定”。如图 26



图 26

26). 提示“下一步将清除车辆所有故障码”，点击“是”，如图 27



图 27

27). 倒计时中。如图 28



图 28

28). 关闭点火开关, 点击“确定”, 如图 29



图 29

29). 打开点火开关, 点击“确定”。如图 30



图 30

30). 阅读提示信息, 并点击“确定”, 如图 31



图 31

31). 关闭点火开关, 并点击“确定”。如图 32



图 32

32). 提示“强制再生成功完成”，点击“确定”。如图 33



图 33

声明：

该文档内容归深圳市元征科技股份有限公司版权所有，任何个人和单位不经同意不得引用或转载。