

# Operation Method Of CHRYSLER Renegade Maintenance Information Resetting


**Supported Equipment:** Full Range Of Comprehensive Diagnostic Equipment  
Of Launch


**Current Equipment:** PAD V

**Function Description:** CHRYSLER Renegade Would Need To Reset The  
Maintenance Information After The Maintenance Is Finished

**Tested Vehicle Model:** CHRYSLER/2020/Renegade (BV), VIN:  
1C4BU000XLP0\*\*\*\*\*

1. Use PAD V To Select **【CHRYSLER】** Software In Local Diagnose To Test;

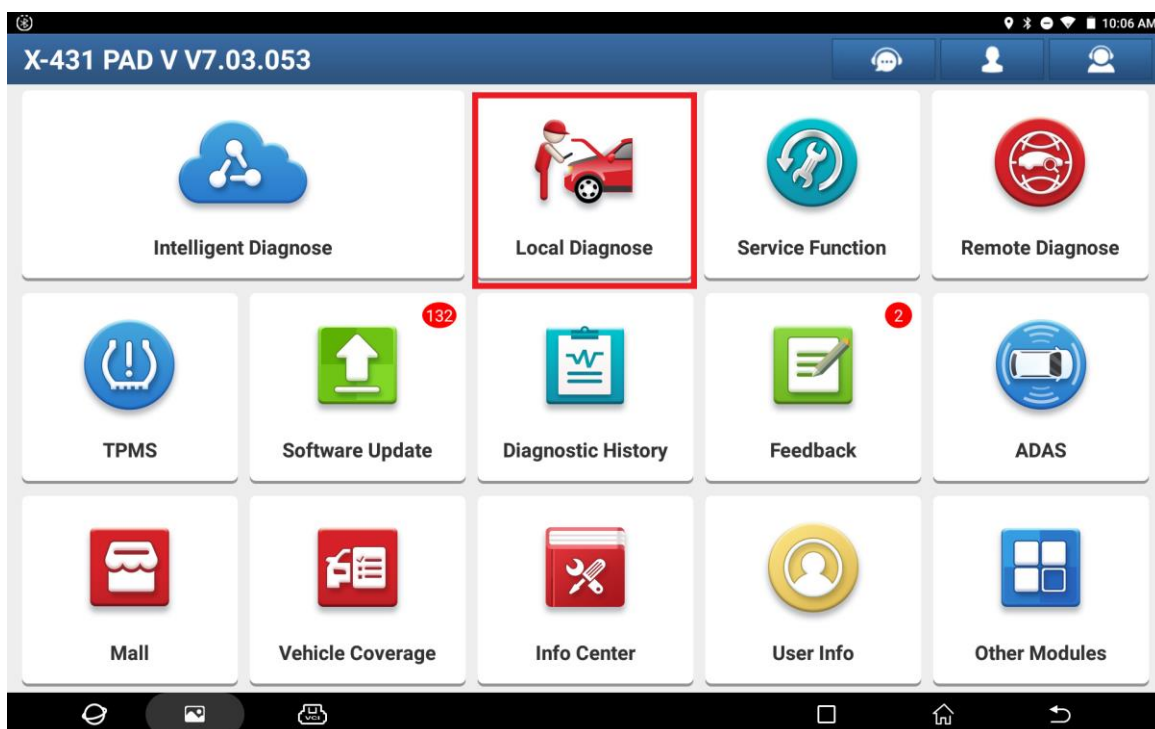

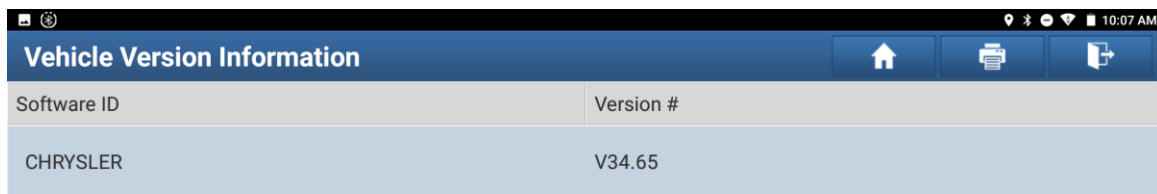

**CHRYSLER/JEEP/DODGE V34.65**

**Introduction**

**ECU Coverage:**

Engine, Automatic Transmission, Anti-lock Brake, Airbag, Body, A/C, Dashboard, Memory Seat, Trap-door, Steering Angle, Wireless Control Module, Tire Pressure, etc.

**Basic Functions:**


- Read Car Computer Information
- Read Car Fault Information
- Clear Car Fault Information
- Read Car Running Data
- Actuation Test For Car Component

**Special Functions:**


- **ENGINE [Engine System]:**  
 Check PCM Odometer, Check PCM VIN, Learn ETC, Reset ECU, Reset Memory, Clear Variable Line Pressure(VLP) Counters, Relearn Cam/Crank, Injector Quantity Adjustment, View/Reset duty cycle accumulators, View/reset trip information accumulators, Enable / Disable vehicle features, Reset Nox adsorber counts, Reset after treatment trip information, Turbo actuator pre-align / self calibrate, Reset regenerative filter timers, Reset Fuel Pressure Limiting Valve Accumulators, Stationary Desoot, View/Reset Duty Cycle Maps, Idle Shutdown Timer Adjustment, Oil Change Monitor Type, View/Reset NAC After Treatment Over Temp Events, Manual DPF Regeneration, DPF Replacement, ECM Replacement




2. Click The **【16 PIN Connector】** And **【Select The Automatically Search】** Menu To Automatically Identify The Vehicle Type;


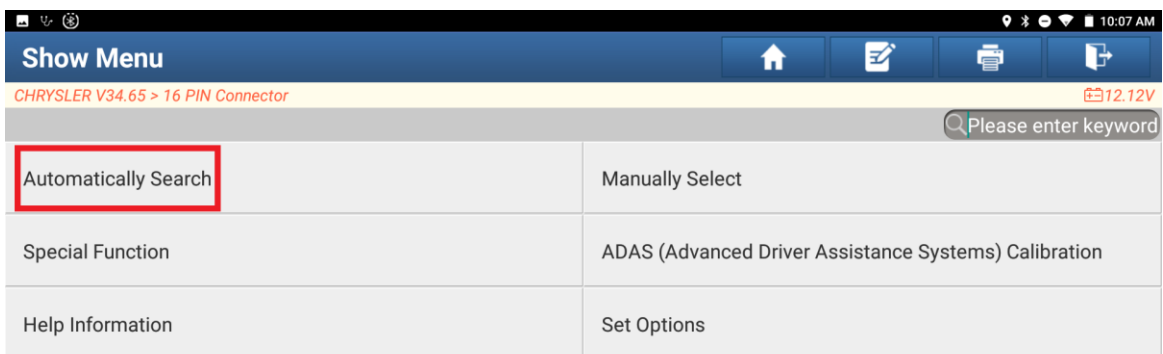


3. Click “OK” And Prompt Says That SGW Needs To Be Unlocked;


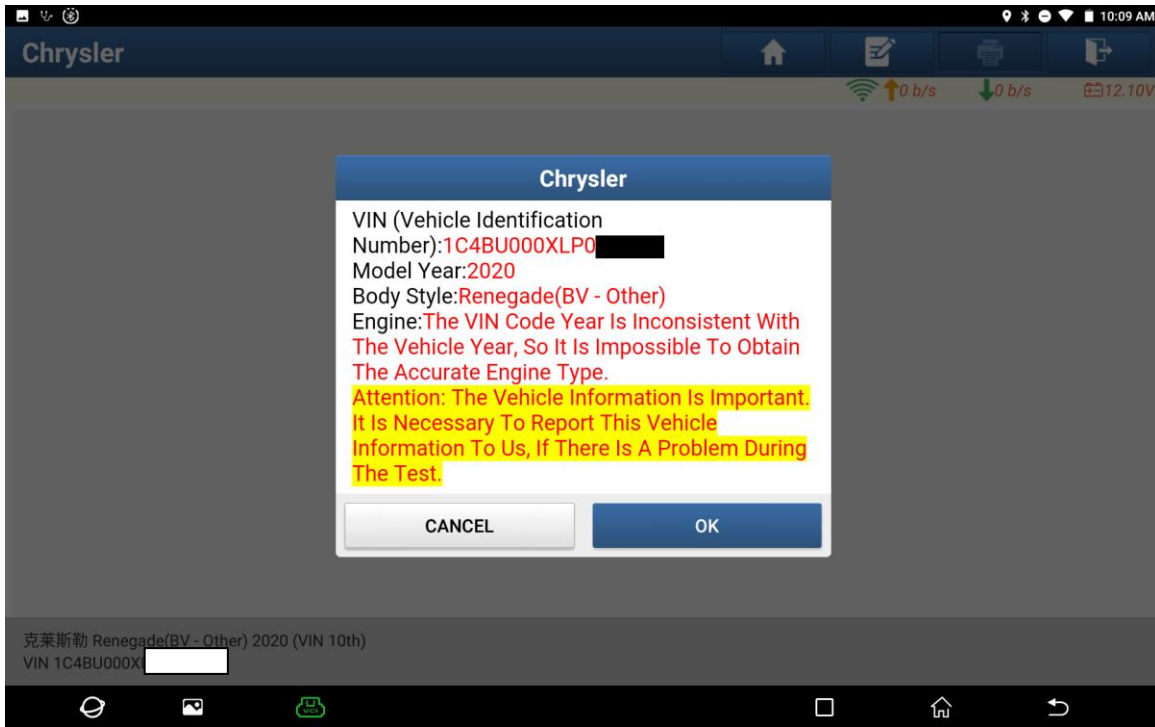


4. Click “Yes”, Select North America, And Then Enter Your Own FCA Account:

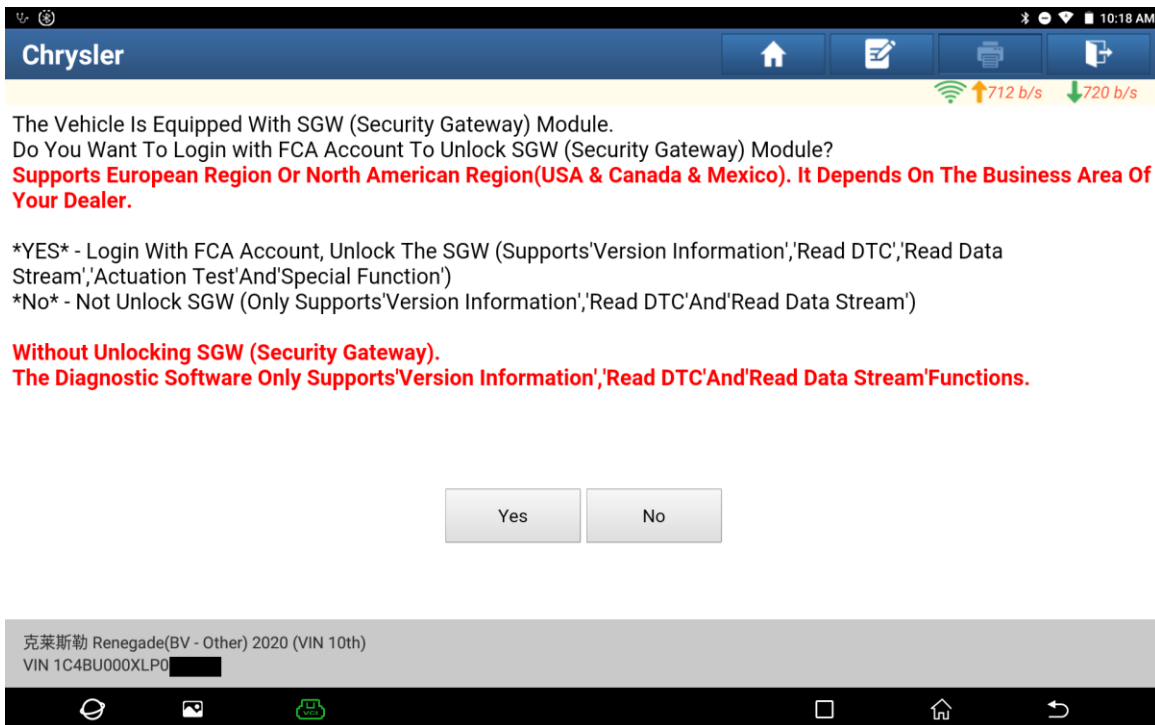


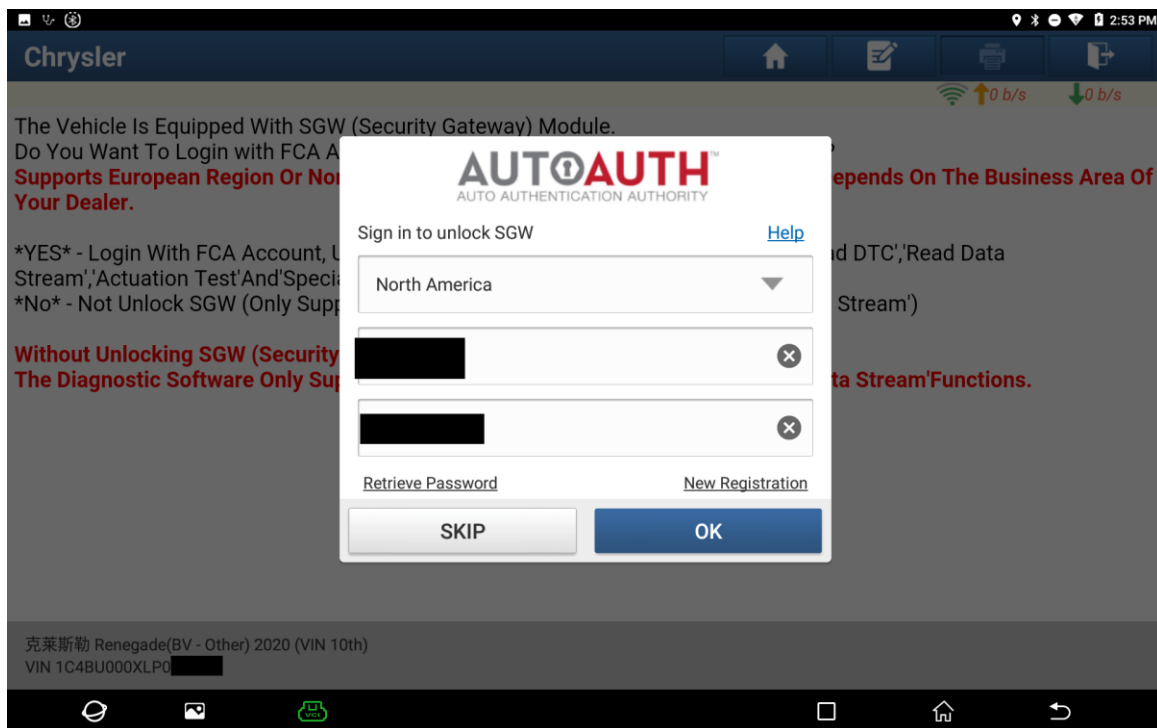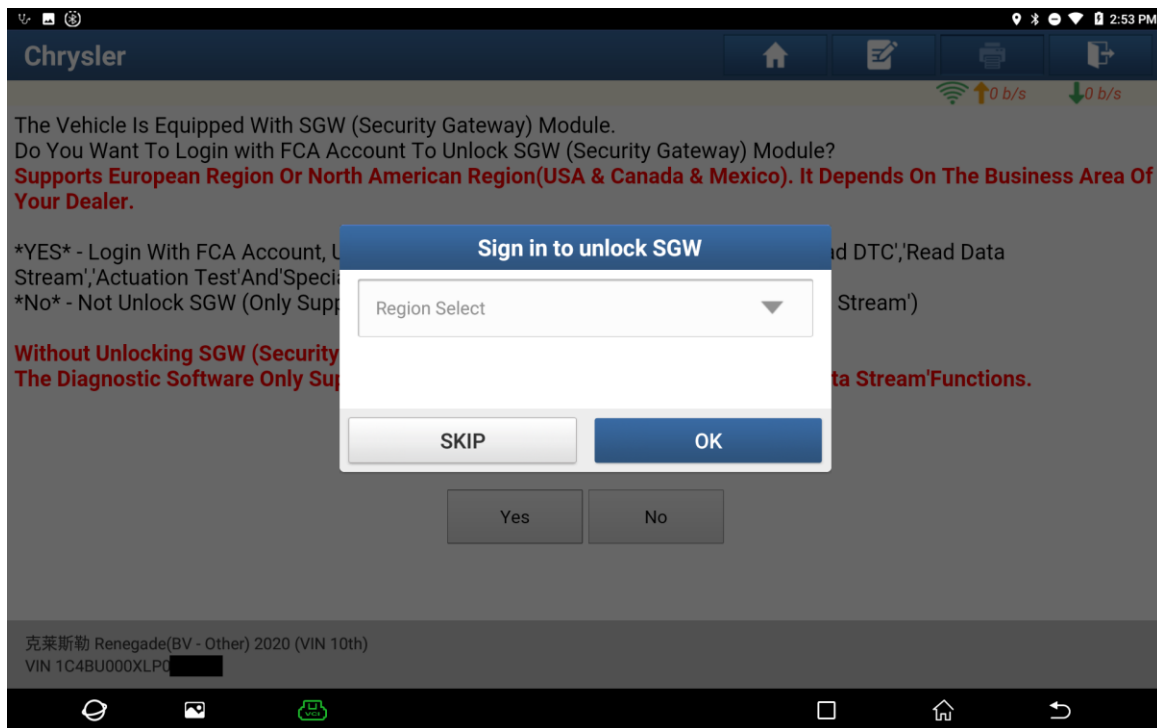


5. Click “OK”, And Click The Smart Scan Button With PAD V To Scan All Systems Of The Whole Vehicle;

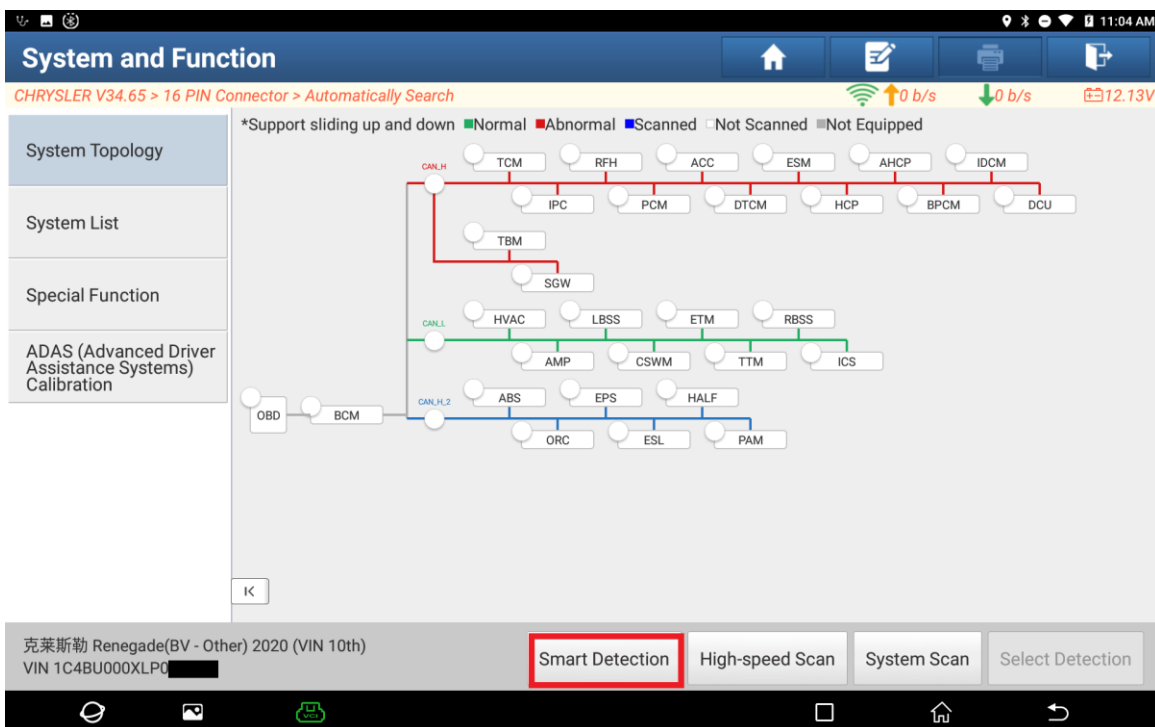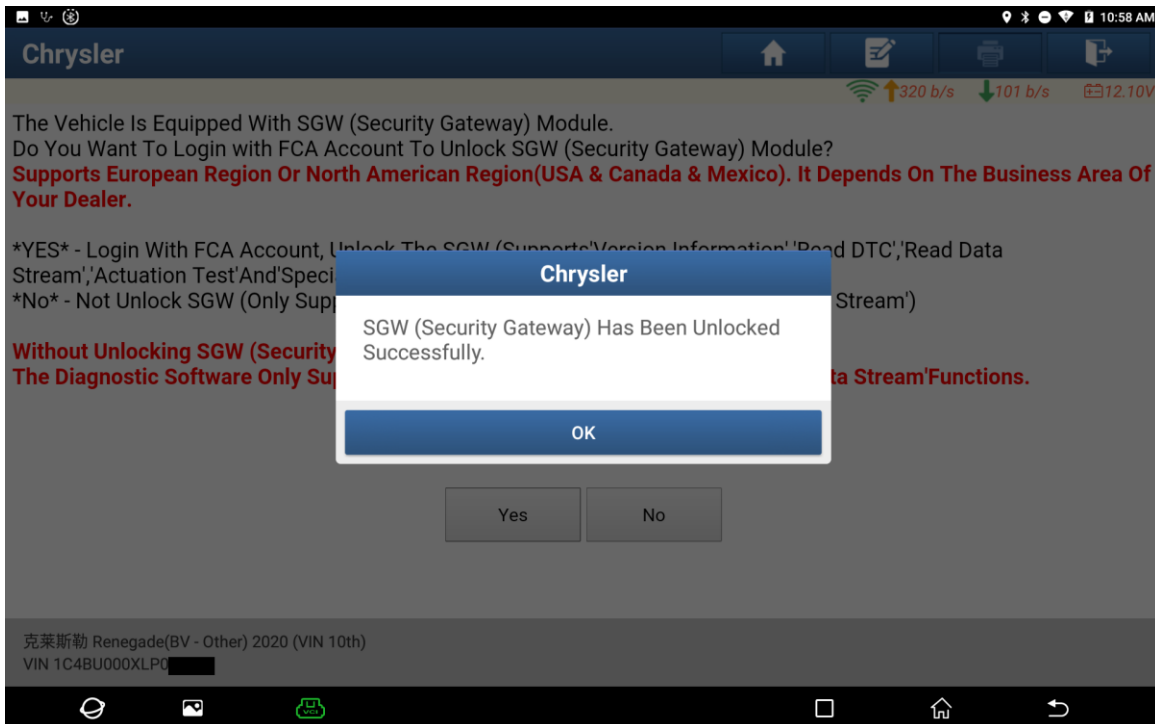


6. Click 【IPC (Instrument Panel Cluster)】 To Enter The System;

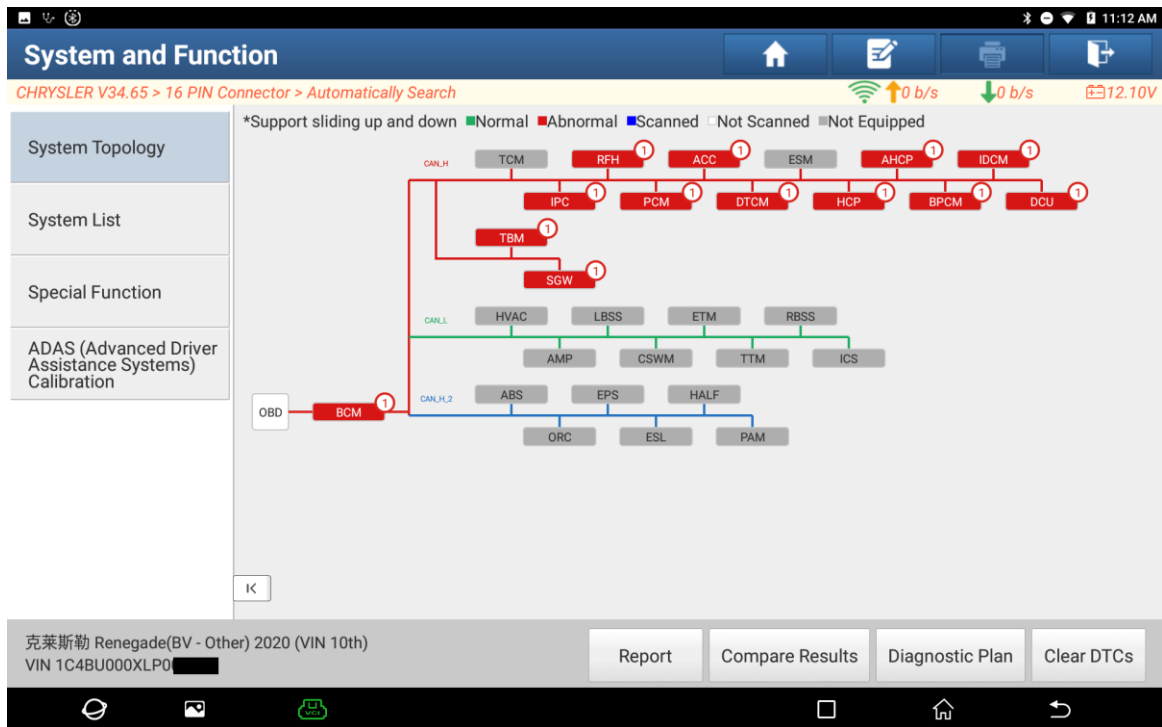


7. Click 【Special Function】 ;

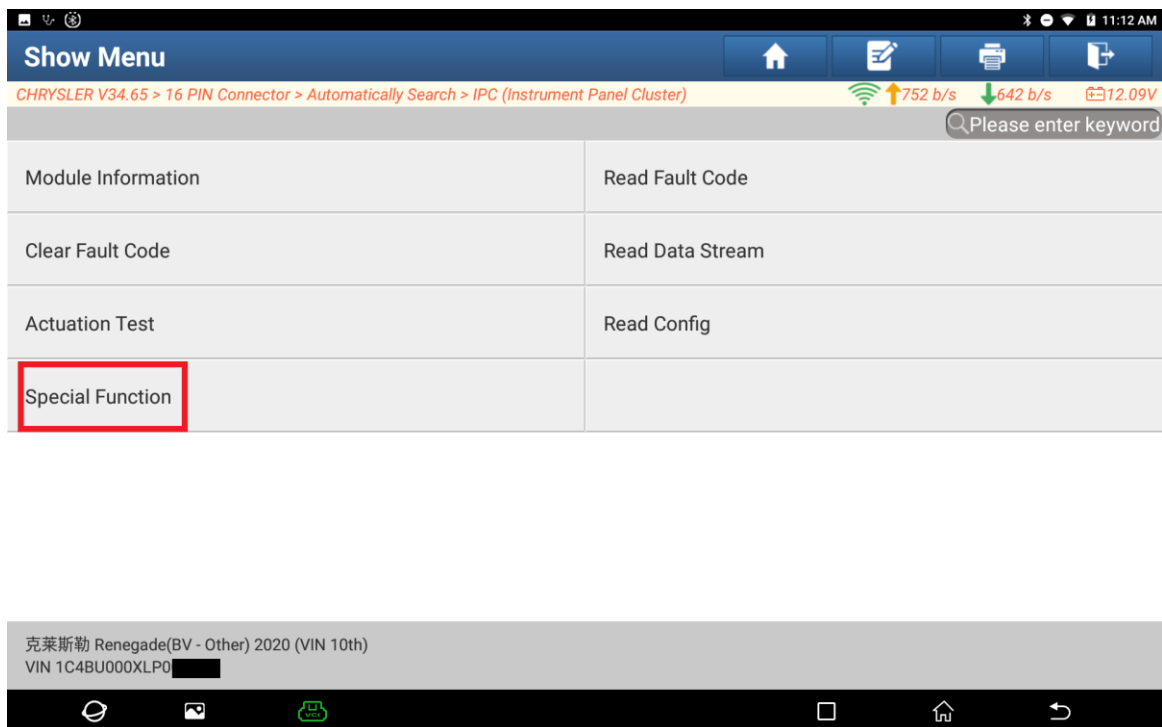

8. Click The Function 【Reset Service Information】 ;

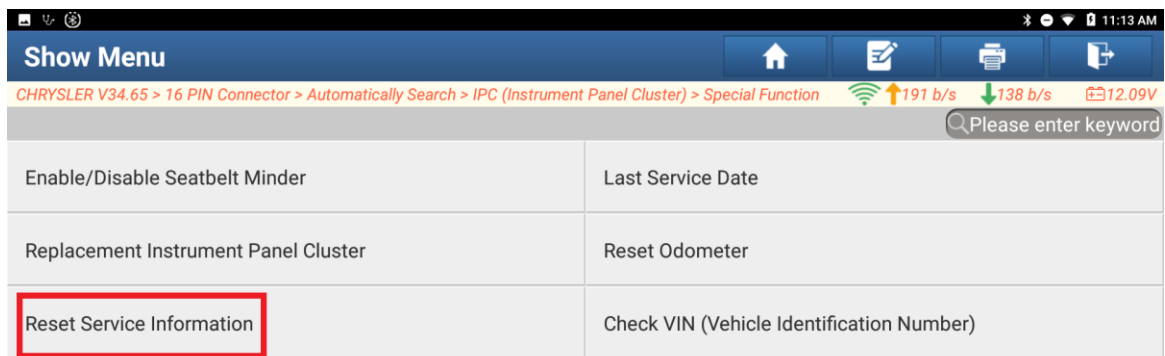


9. Click “OK”;

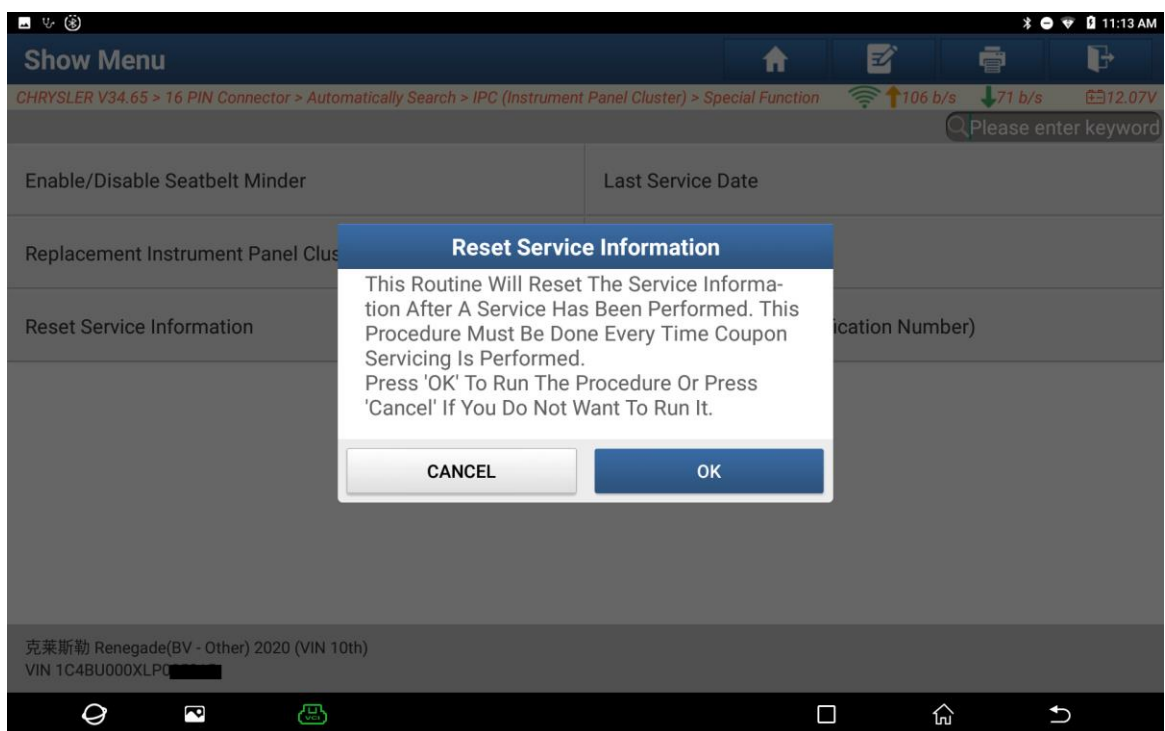





10. Click “OK”

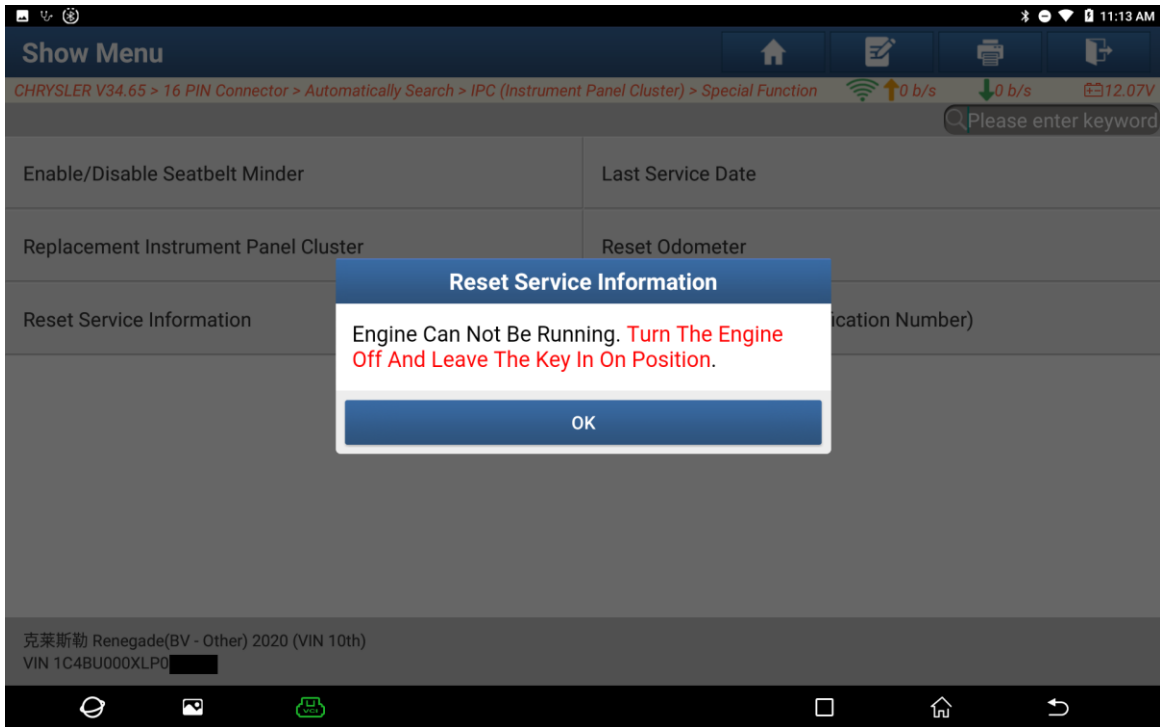

11. Click “OK”;

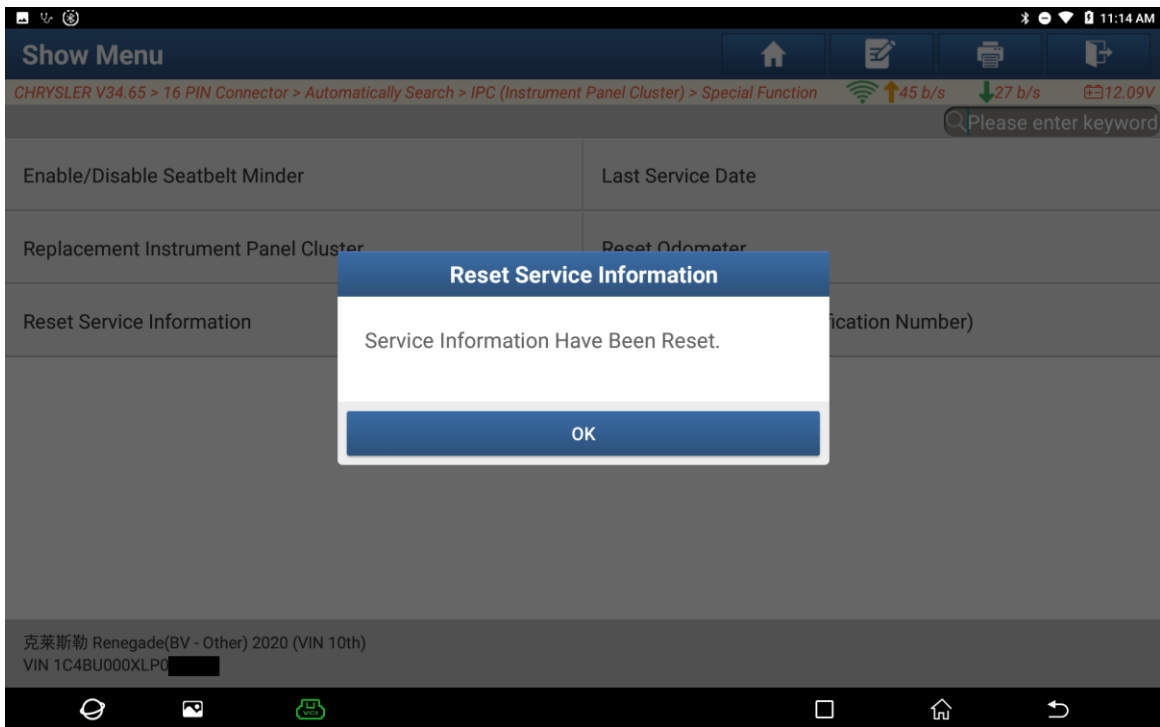

12. Click “OK” To Complete The Operation;

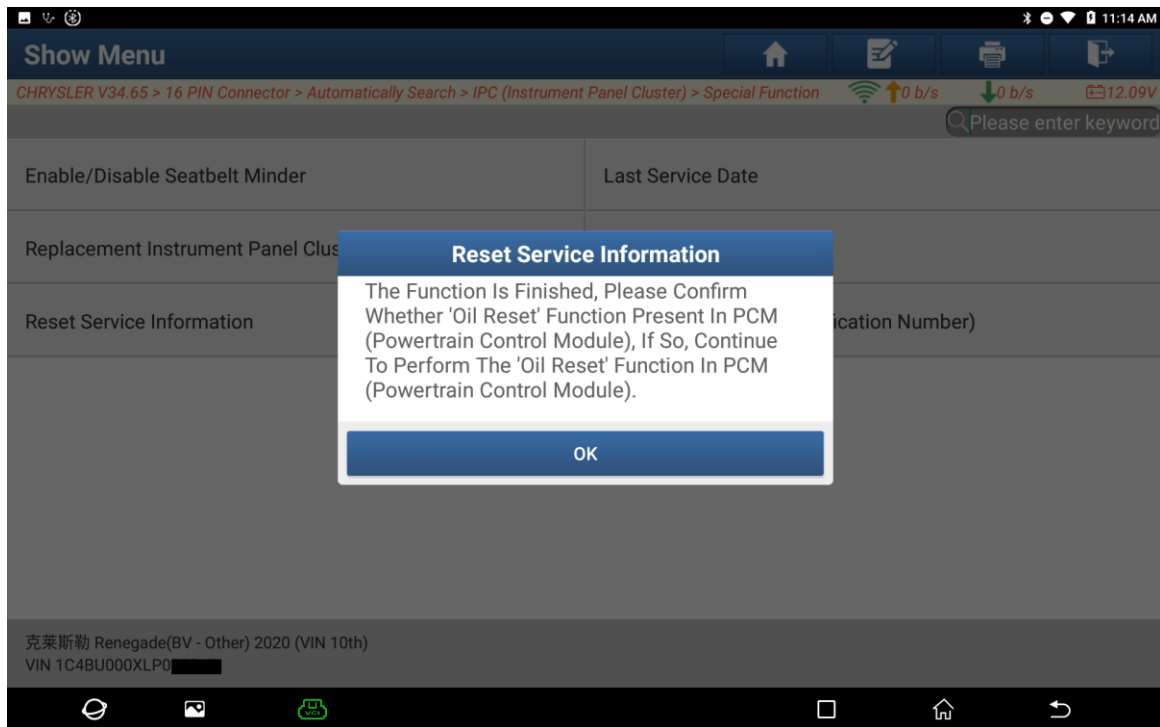

## Statement:

The Content Of This Document Belongs To The Copyright Of Shenzhen Launch Co., Ltd., And No Individual Or Unit May Quote Or Reprint It Without Permission.