

Mercedes-Benz S500 PTG (Power Tailgate) Learning

Functional description: On Mercedes-Benz S500, the PTG (Power Tailgate) is not equipped with the one-click switch function. The PTG learning function needs to be performed.

Supported products: Launch PRO or PAD series comprehensive diagnostic equipment

Tested model: 2013 Mercedes-Benz S500, VIN: WDDUG8CB4EA***** (See the following figure)



Procedure:

1. Access the [PTG - Power Tailgate] system and choose [Special Function]. (See the following figure.)

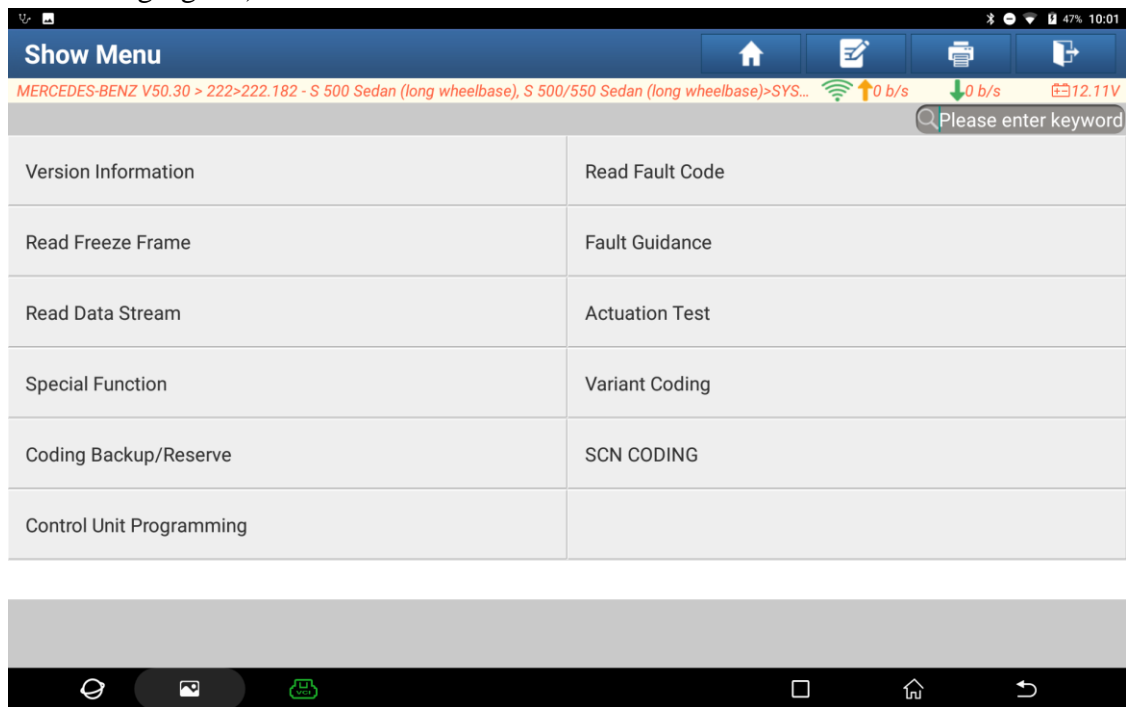


Figure 1

2. Click [Teach-in processes]. (See the following figure.)

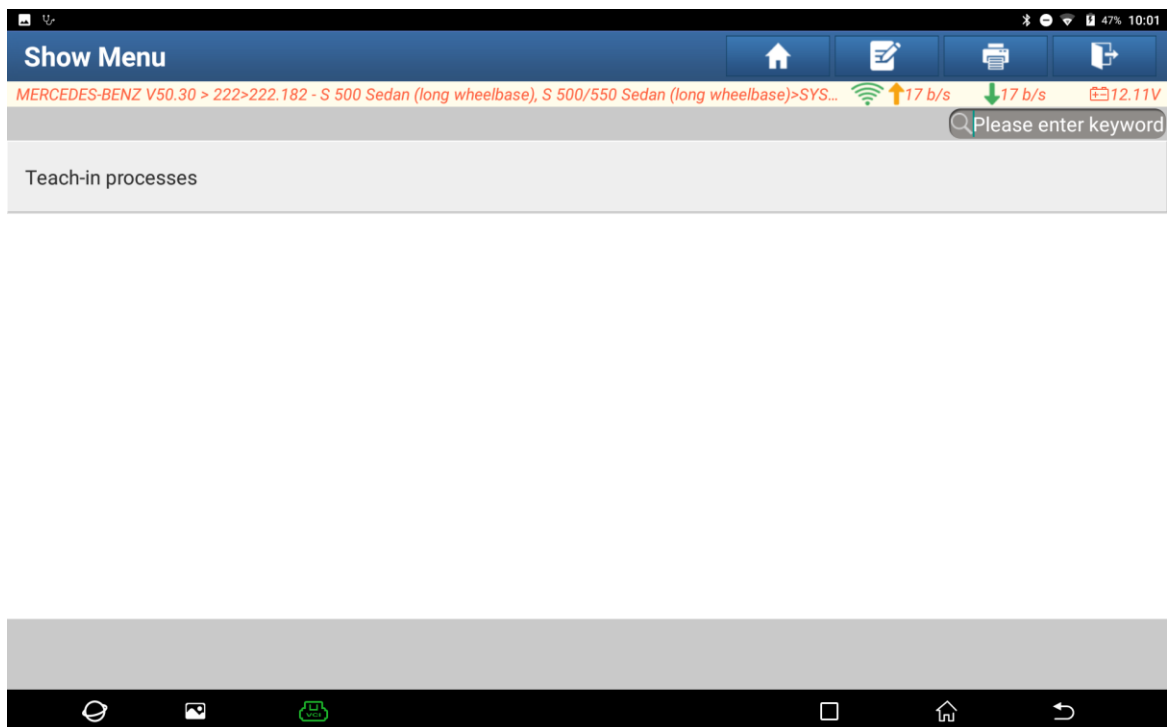


Figure 2

3. Click [N121/1 (Trunk lid/liftgate control unit)]. (See the following figure.)

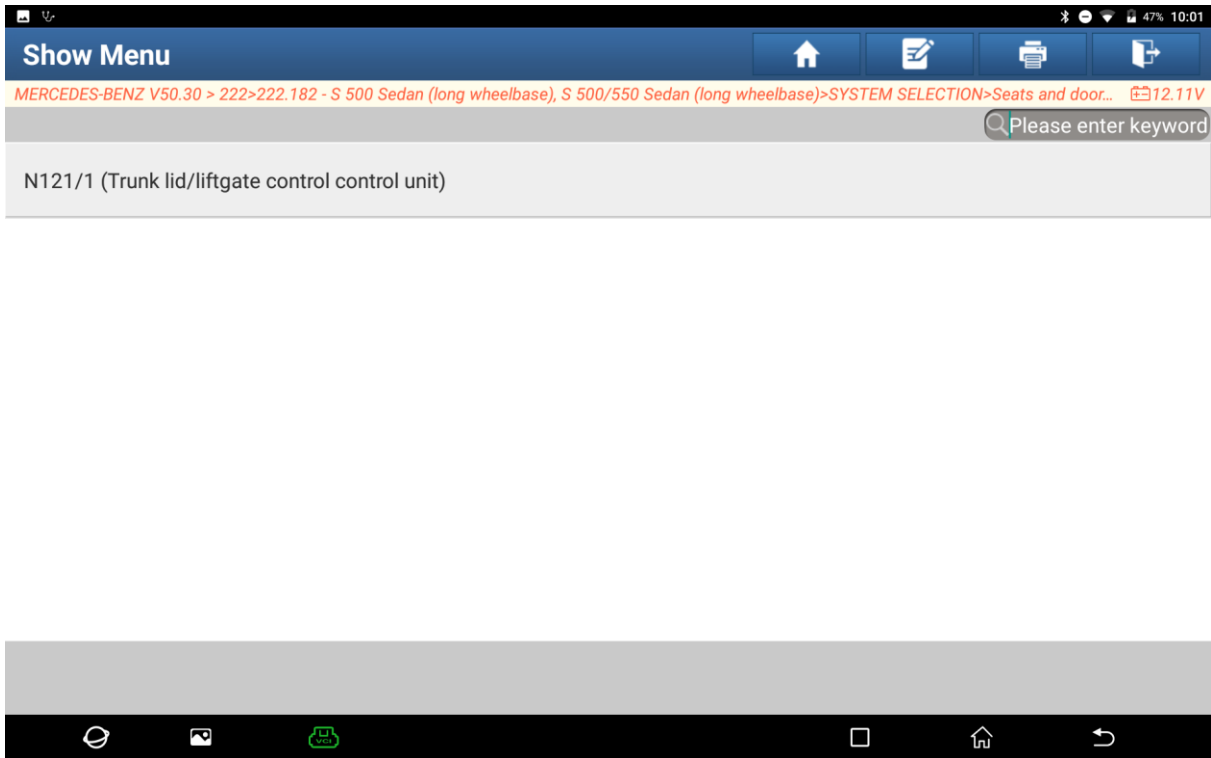


Figure 3

4. Carefully read the "Safety Tips", confirm that the conditions are met, and click "Continue". (See the following figure.)

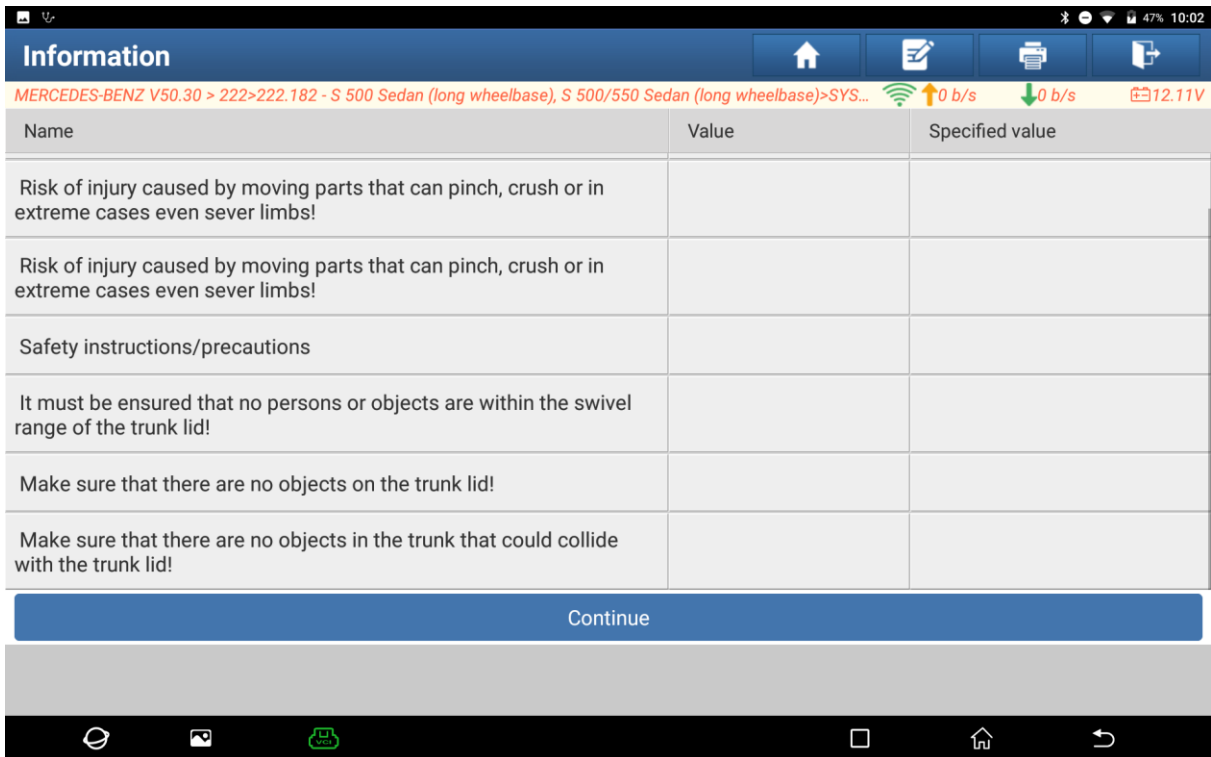


Figure 4

5. The normalization status of the tailgate is "Not normalized". Click "Continue". (See the following figure.)

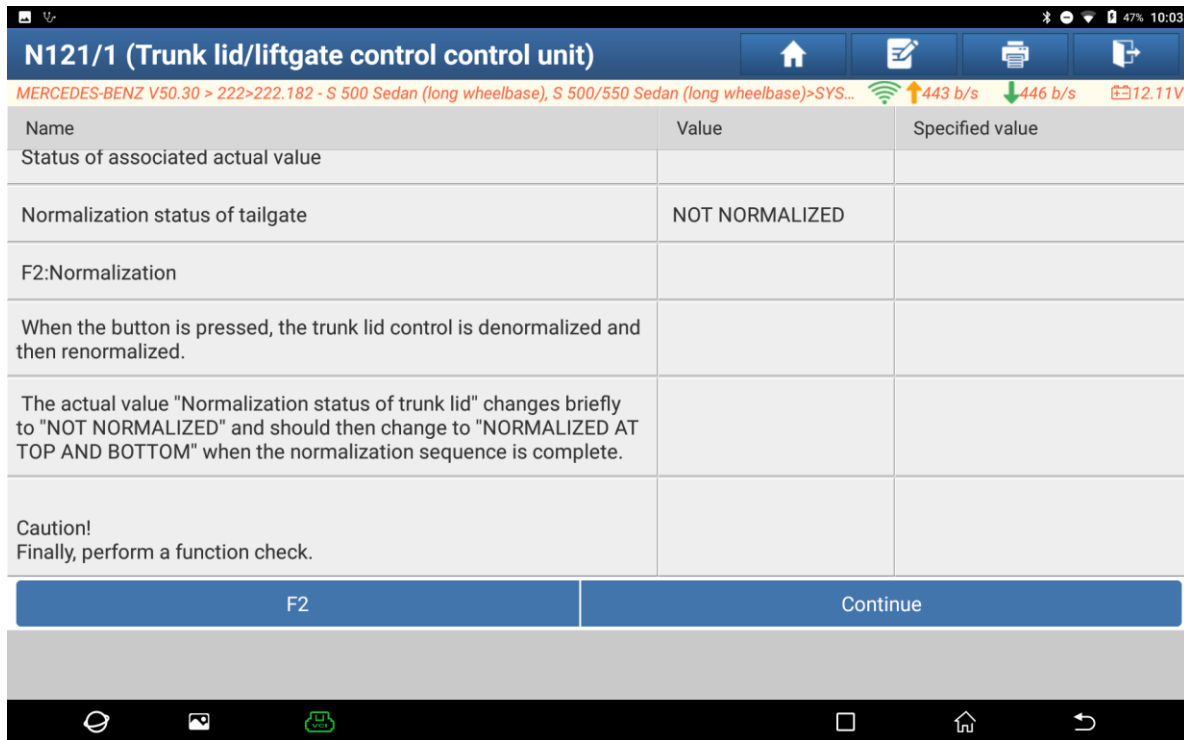


Figure 5

6. The status of the rotary tumbler is "Closed". Manually open the trunk lid. (See the following figure.)

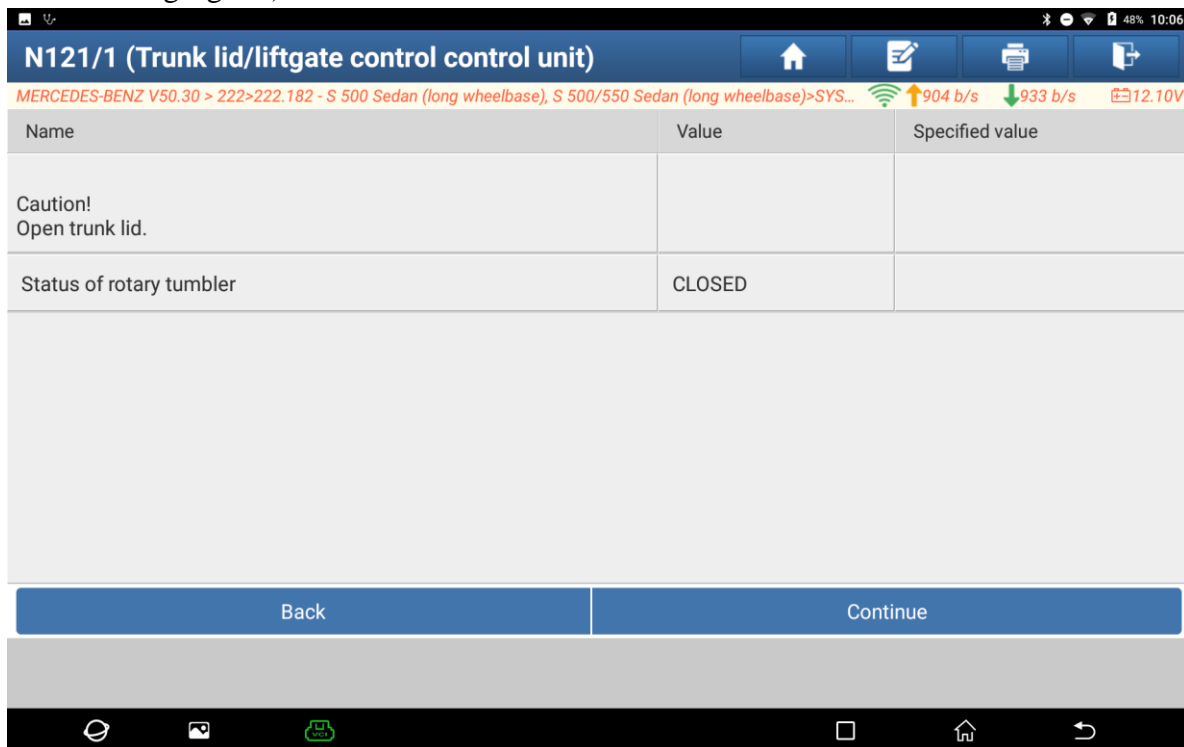


Figure 6

7. The status of the rotary tumbler is “Open”. Click "Continue". (See the following figure.)



Figure 7

8. Click F2. The normalization status of the tailgate is “Normalized at top”. (See the following figure.)

