

Mercedes-Benz S350L Rear Seat Normalization

Tested Model: 2012 Mercedes-Benz S350L, VIN: WDDNG5HB3DA51****, as shown below:




Function Description:

After replacing the seat control module or repairing the rear seat, it is required to use this function to normalize the rear seat.



Operation Guideline:

- 1) Use X431-PADIII to enter the traditional diagnostic interface. Select Mercedes-Benz model, click "Automatic search", select "System Scan" to scan the complete vehicle systems, see Picture 1.

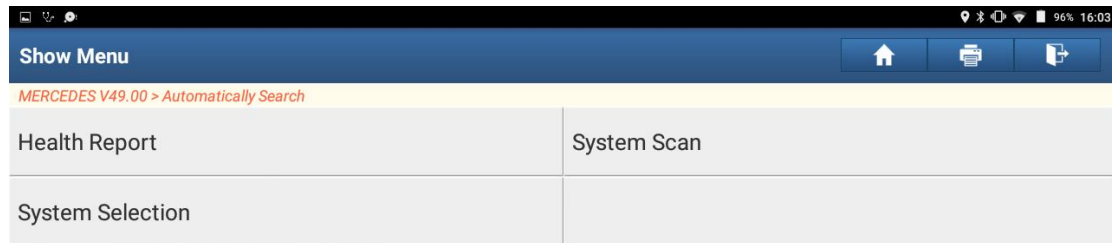


Picture 1

- 2) Select "ESA_R-Electric Seat Adjustment_Rear", see Picture 2.

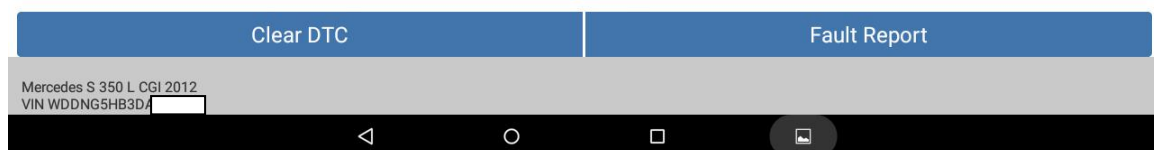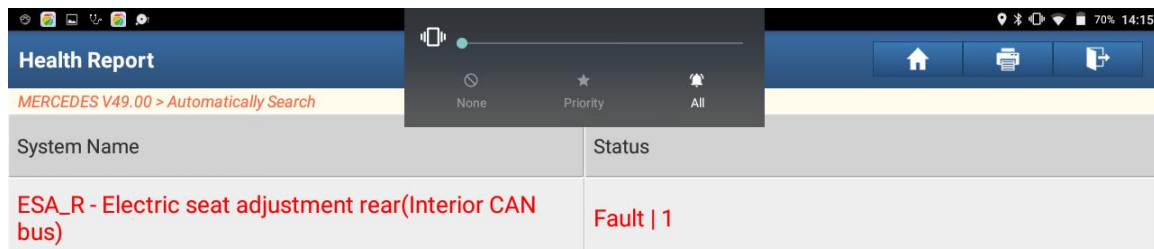


Picture 2

3) Click "Special Function", see Picture 3.

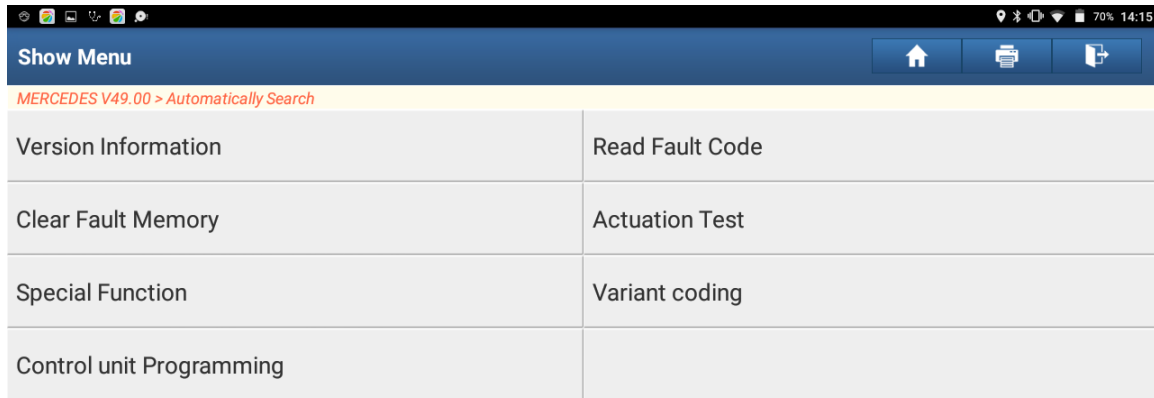


Picture 3

4) Click "Normalizing rear left and right seats", see Picture 4.

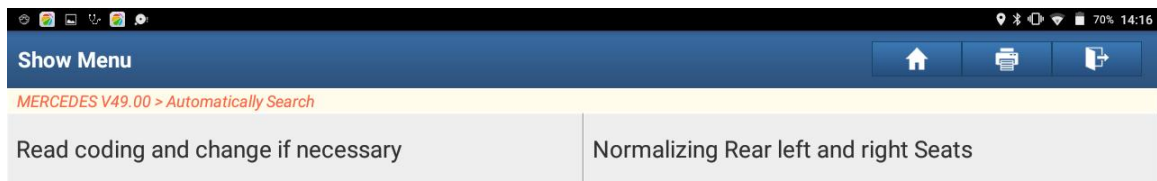


Picture 4

5) Read the prompts. After the conditions are met, click OK to continue, see Picture 5.

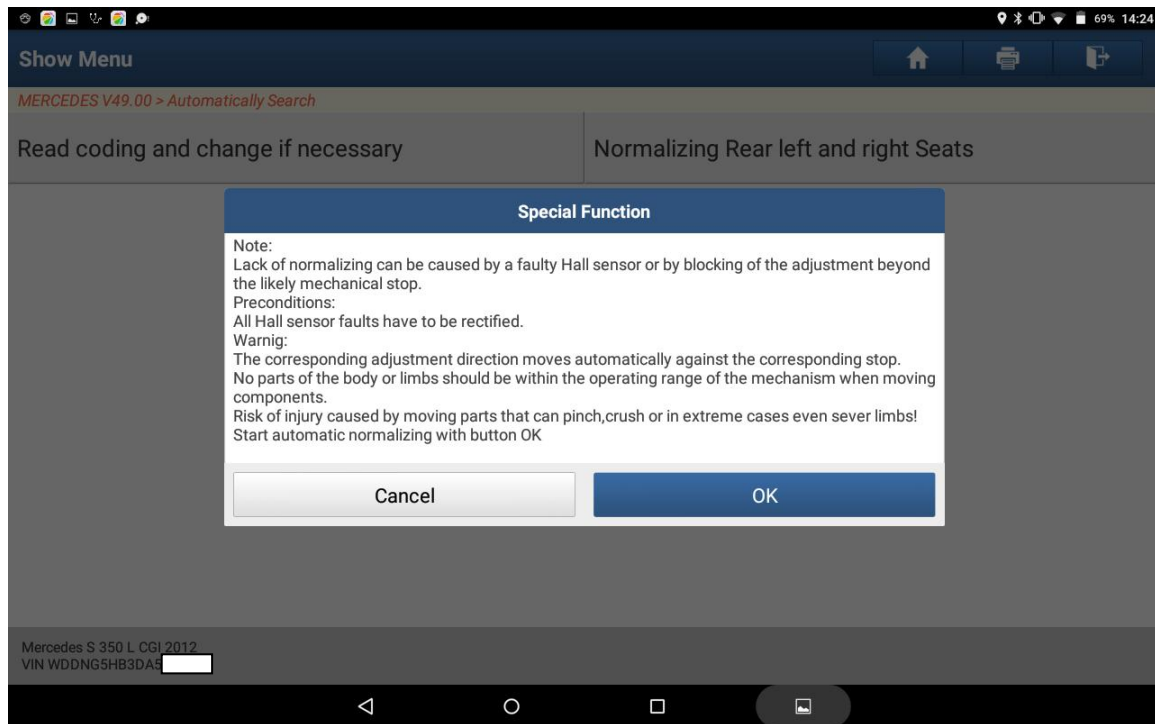


Picture 5

6) Normalization in process, please wait, see Picture 6.

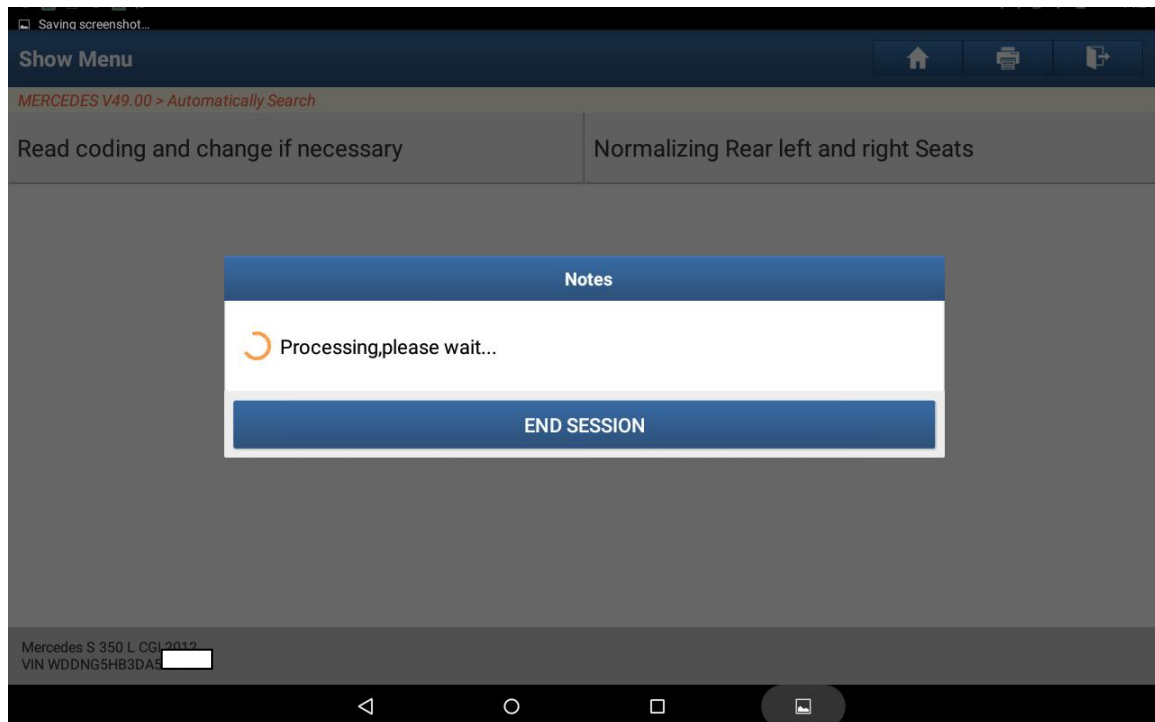

Picture 6

7) After the normalizing is complete, click OK, see Picture 7.

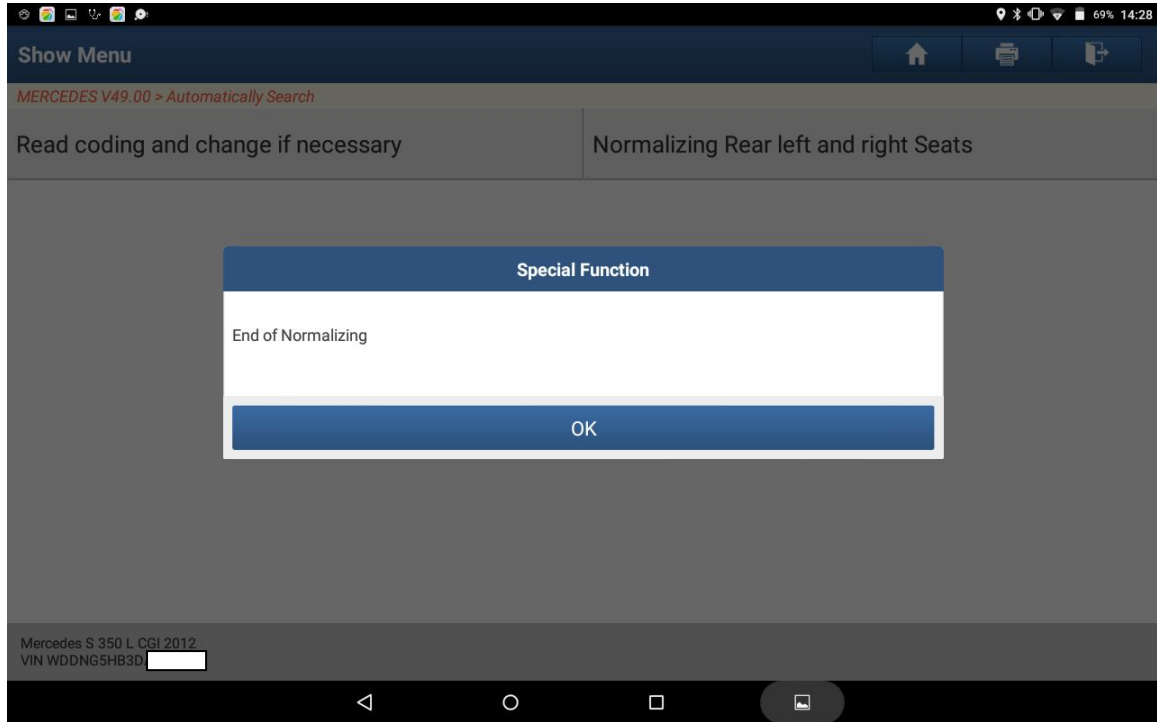

Picture 7