

FIAT Giulia (GPF (Gas Particulate Filter)) Particulate Filter Replacement


Supported equipment: Launch's full range of comprehensive diagnostic equipment



Current equipment: PRO3 LINK

Function description: For FIAT vehicles, run this program to reset the GPF (Gas Particulate Filter) parameters in the control unit to default values after replacing the GPF.

Tested model: 2023/Fiat/Giulia, VIN: ZARFAMEV6P76*****

1. On a PRO3 LINK, choose [Local Diagnose] and then [FIAT] to test.

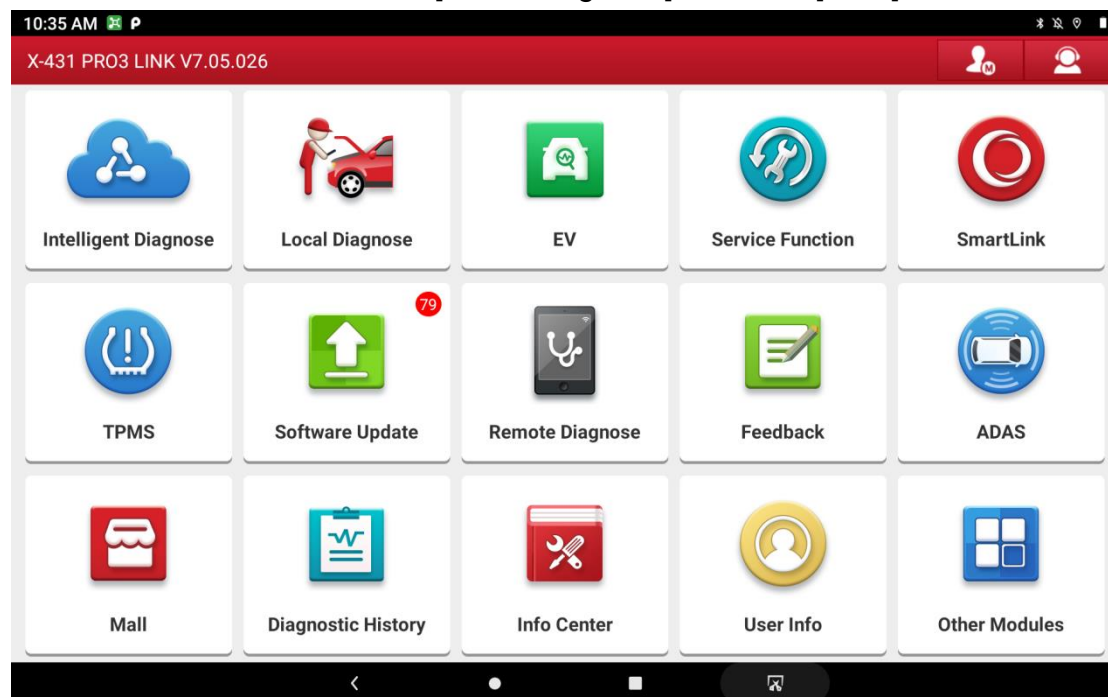

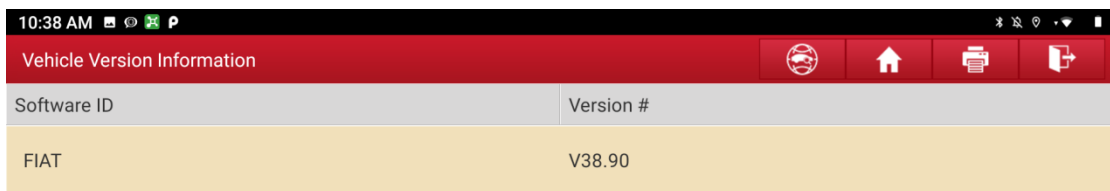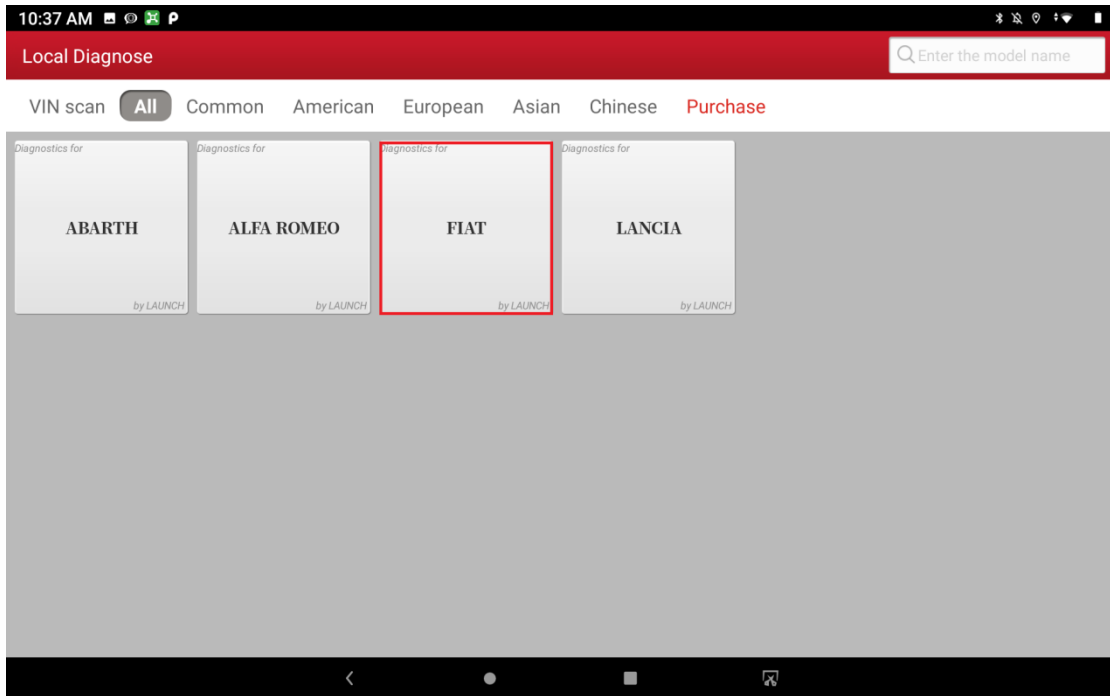

FIAT V38.90

Introduction

ECU Coverage:

This Software Diagnoses All FIAT Series ECUs, Including Engine, AT, ABS, SRS, A/C, Instrument, Power Steering, Body PC, Door Control, Tire Pressure Control, Parking Control And Headlamp, Etc.

(The Following Models Covered Are Only For Reference And Will Vary Constantly With The Upgrades Of Software.)

Basic Functions Include:



- Reading ECU Information
- Reading DTCs
- Clearing DTCs
- Reading Vehicle Running Data
- Vehicle component Operation Test

Special functions include:


- Key Programming([Body Module])
- Tire Pressure detection([Body Module]/[Tire Pressure Control])
- Reset Adaptation




- 2. Choose [Automatically Search] to identify vehicle models automatically. After the vehicle model is successfully identified, click [OK].

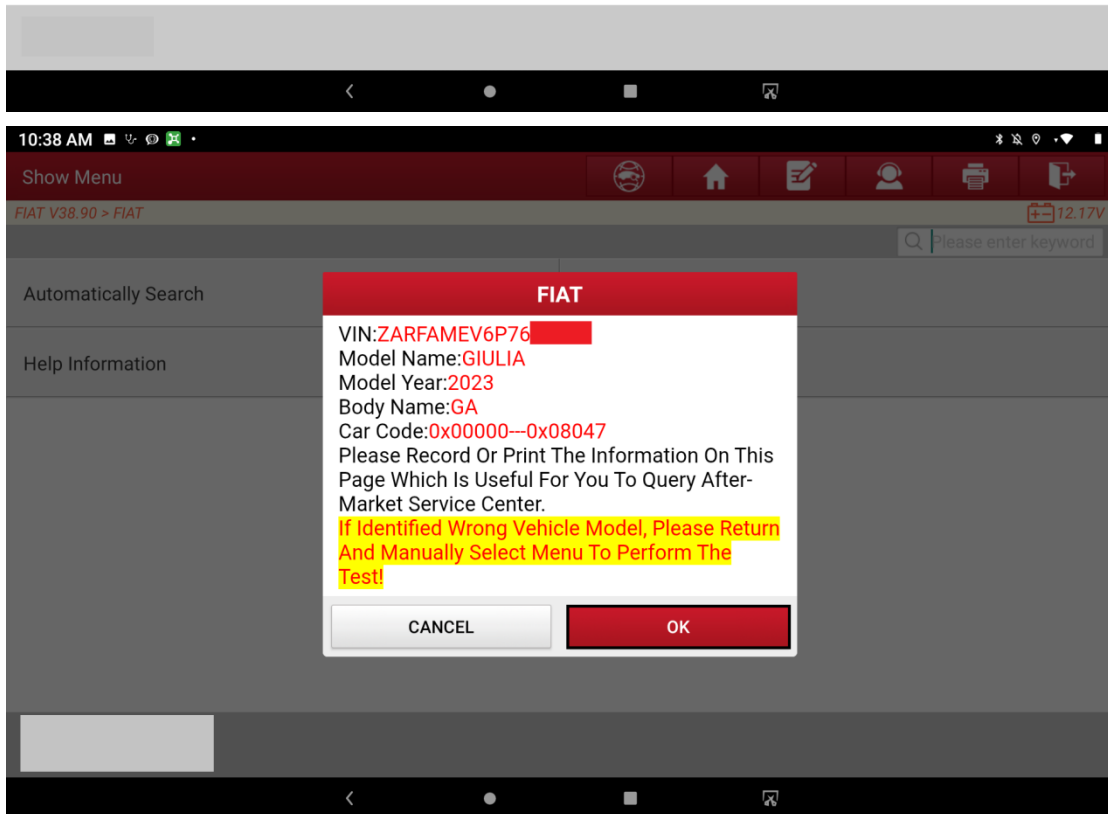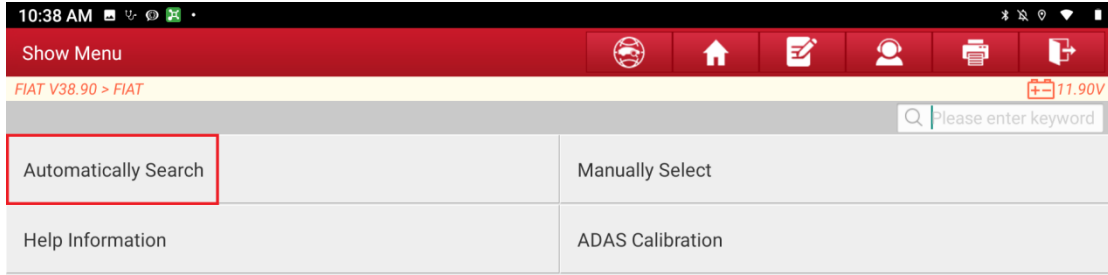


3. Unlocking is successful. Click [OK].

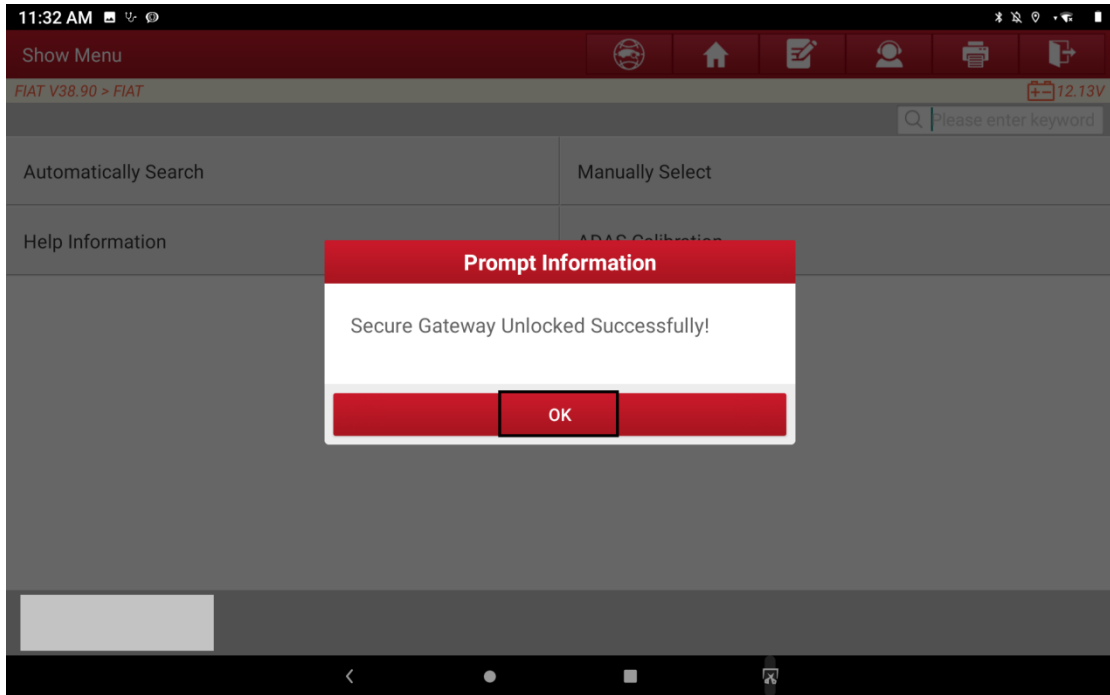


4. Click [Smart Detection] to scan the entire vehicle systems.

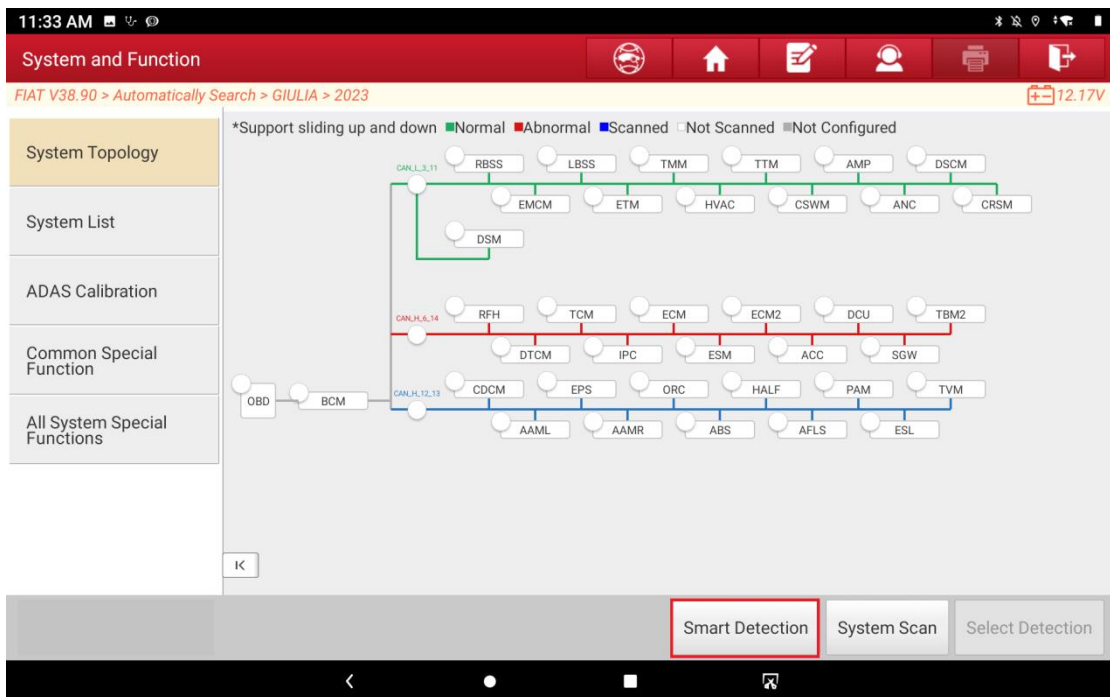


5. Click [ECM (Engine Control Module)] to enter the system.

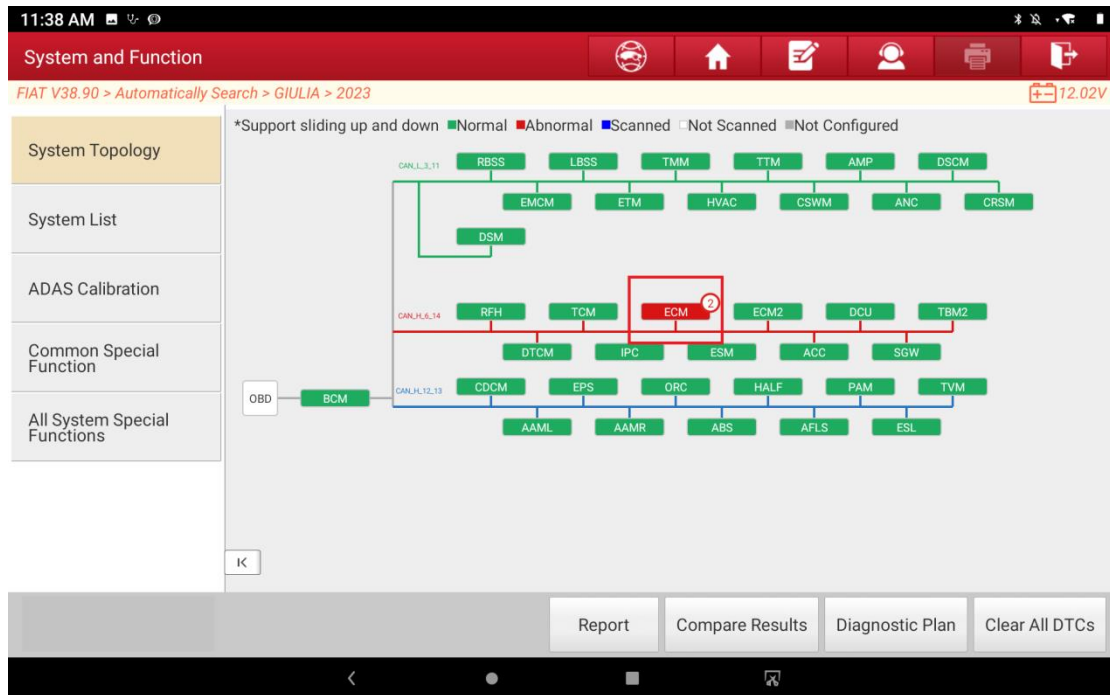

6. Choose [Special Function].

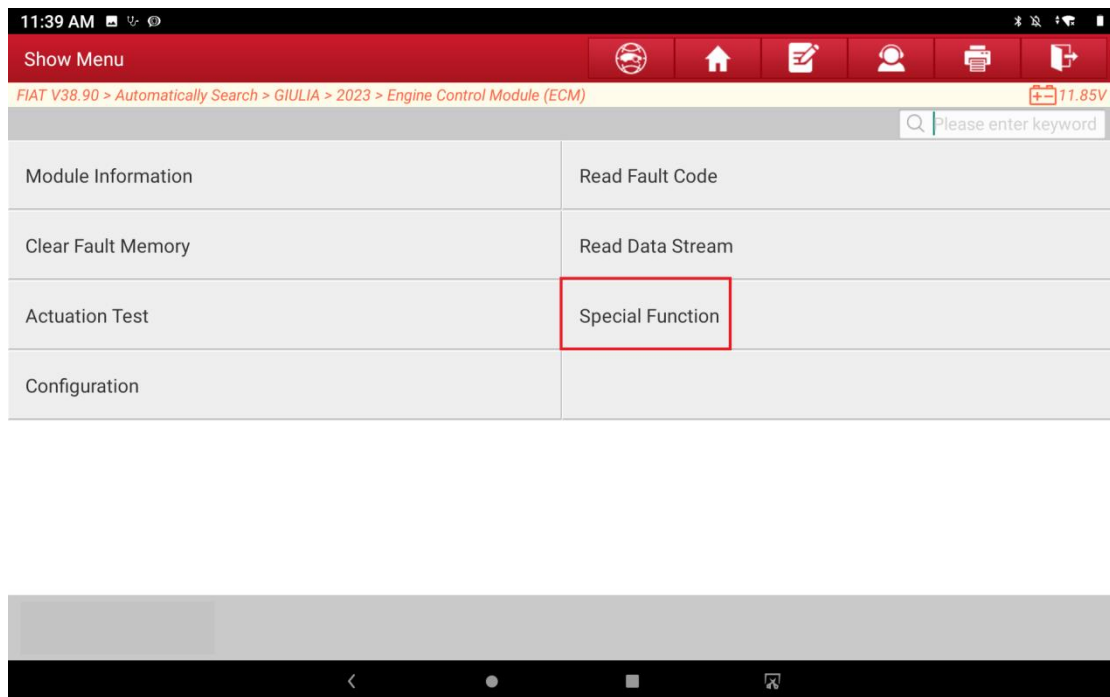


7. Choose [Misc Function].

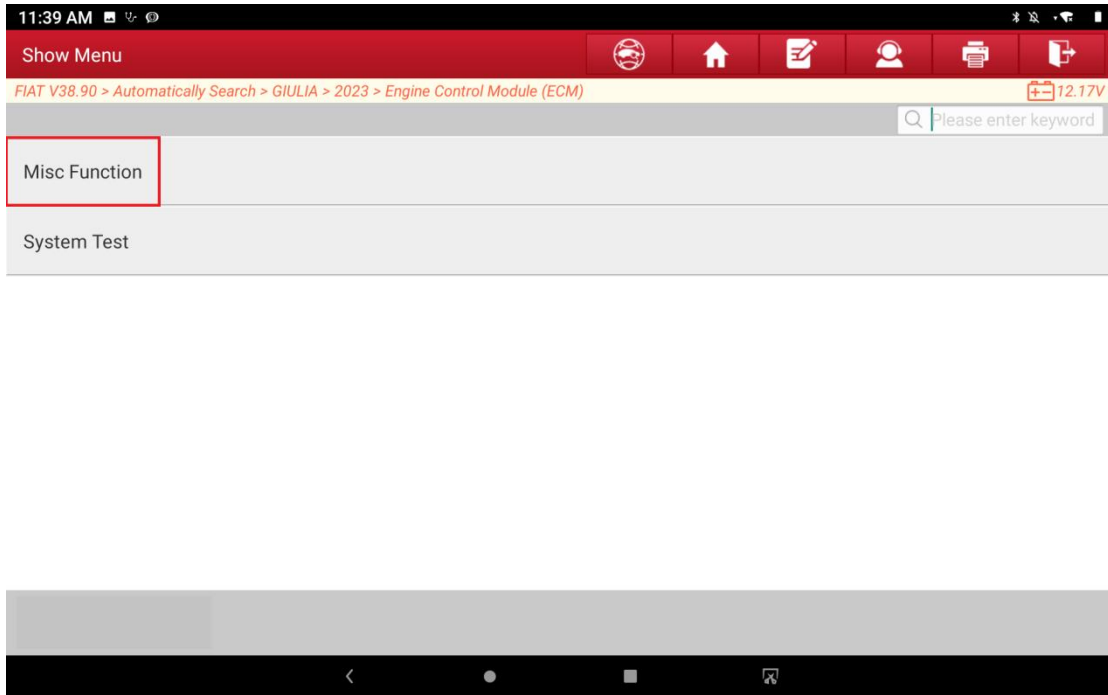


8. Choose [(GPF (Gas Particulate Filter)) Particulate Filter Replacement].




9. Click [OK].

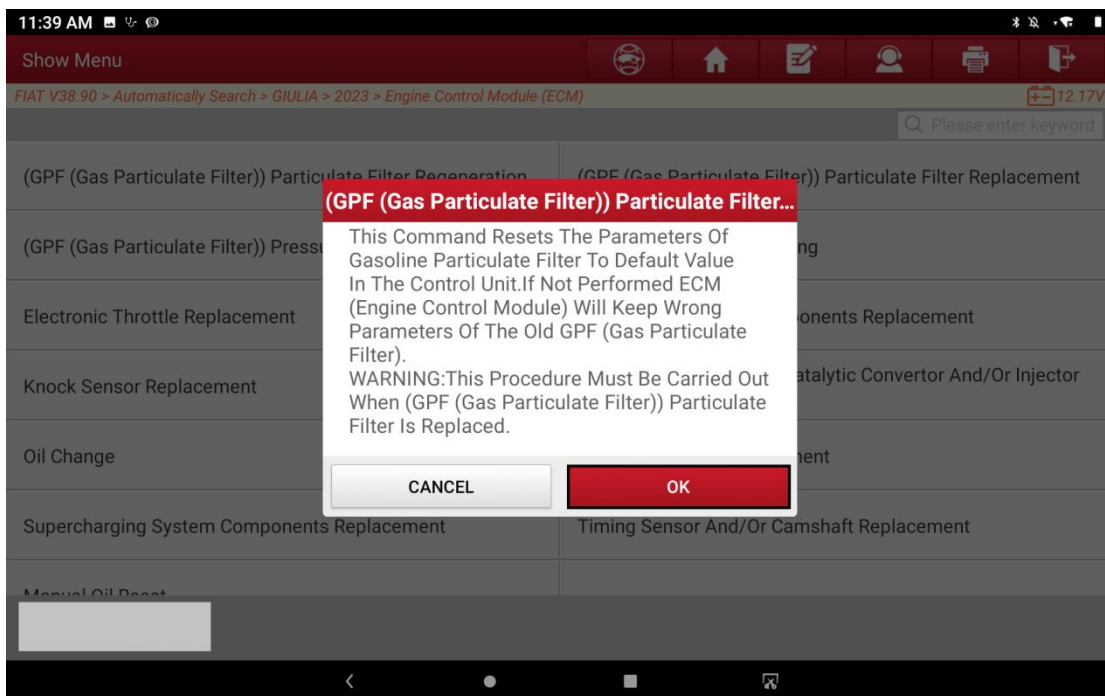


10. Click [OK].

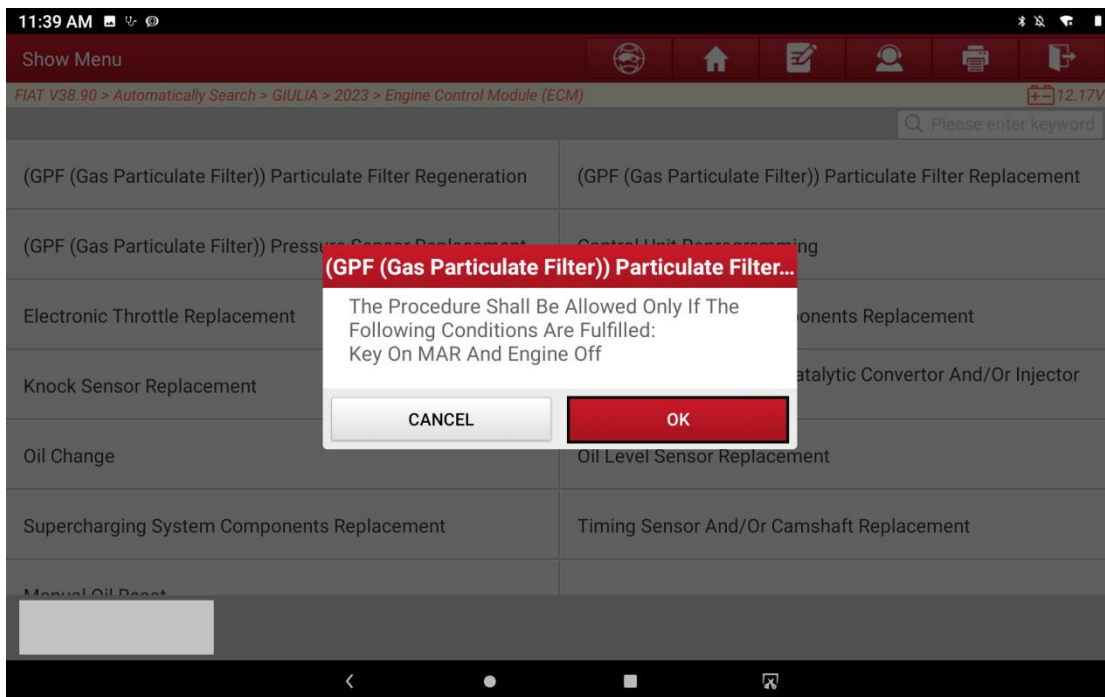


11. Click [OK].

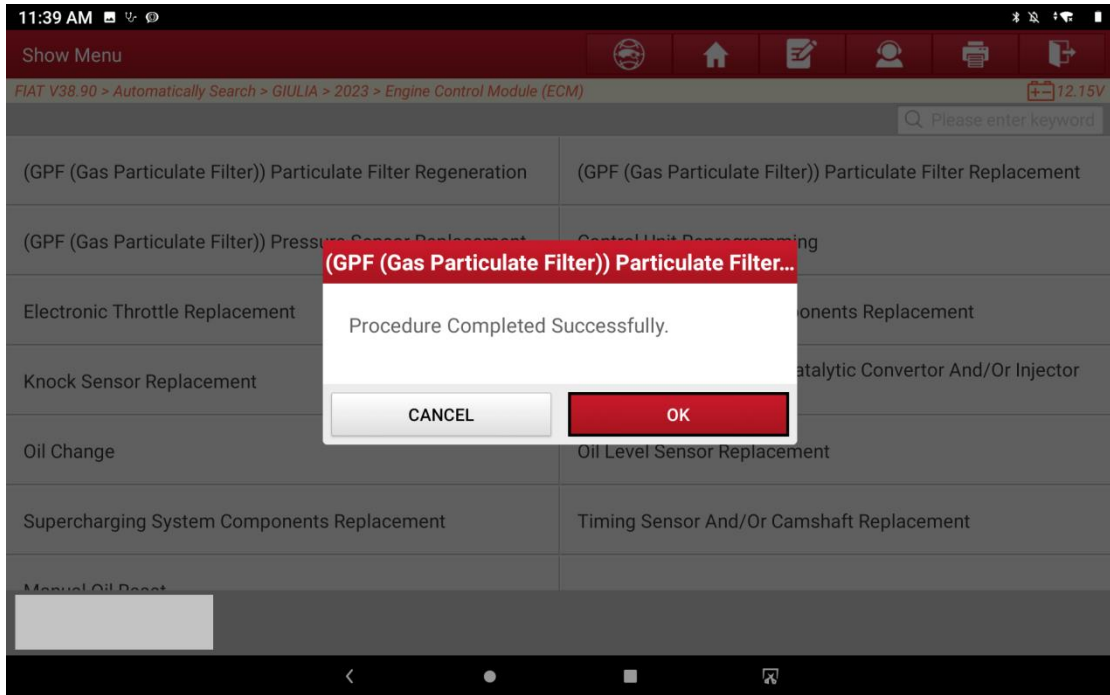


12. Click [OK].

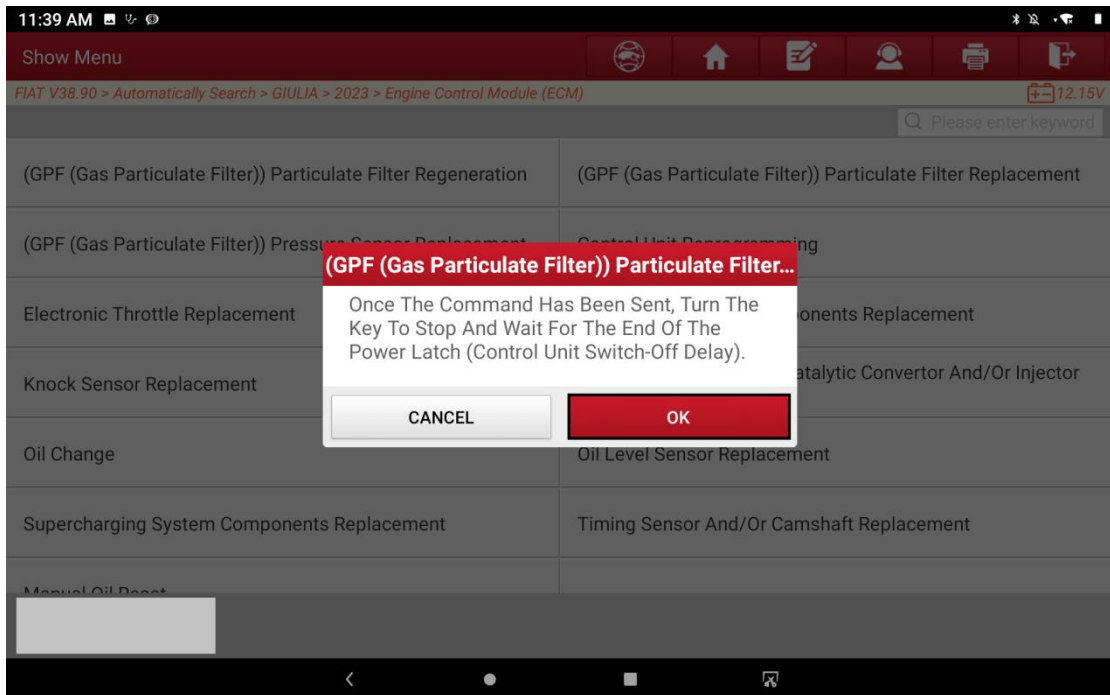


13. Click [OK].

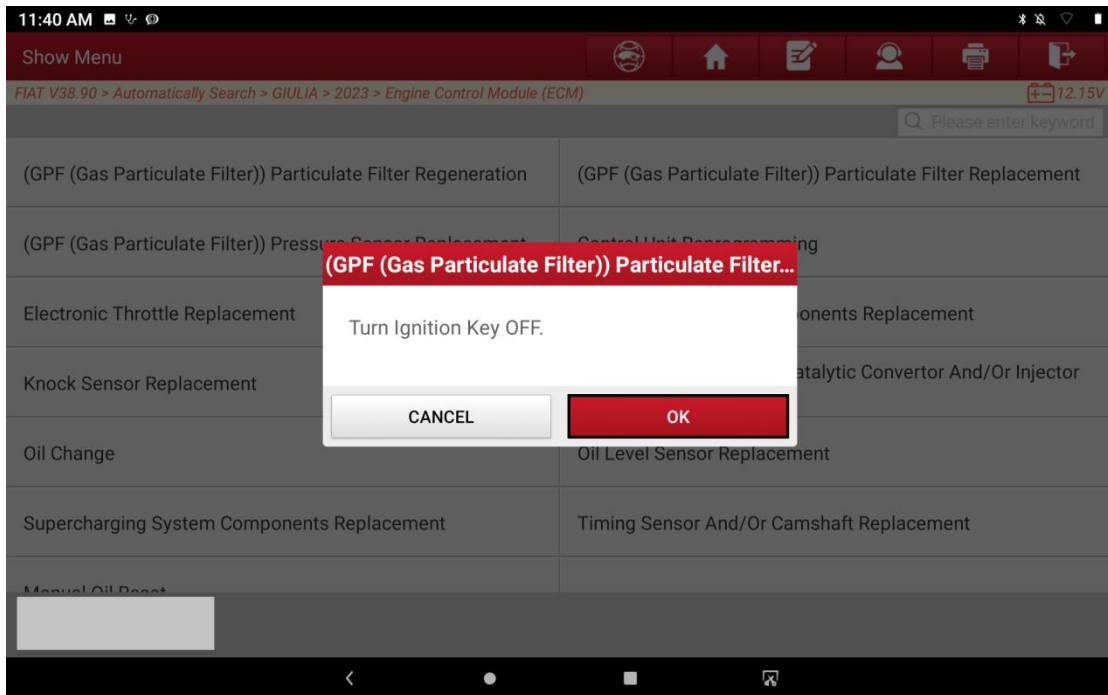


14. Wait for the countdown to end.

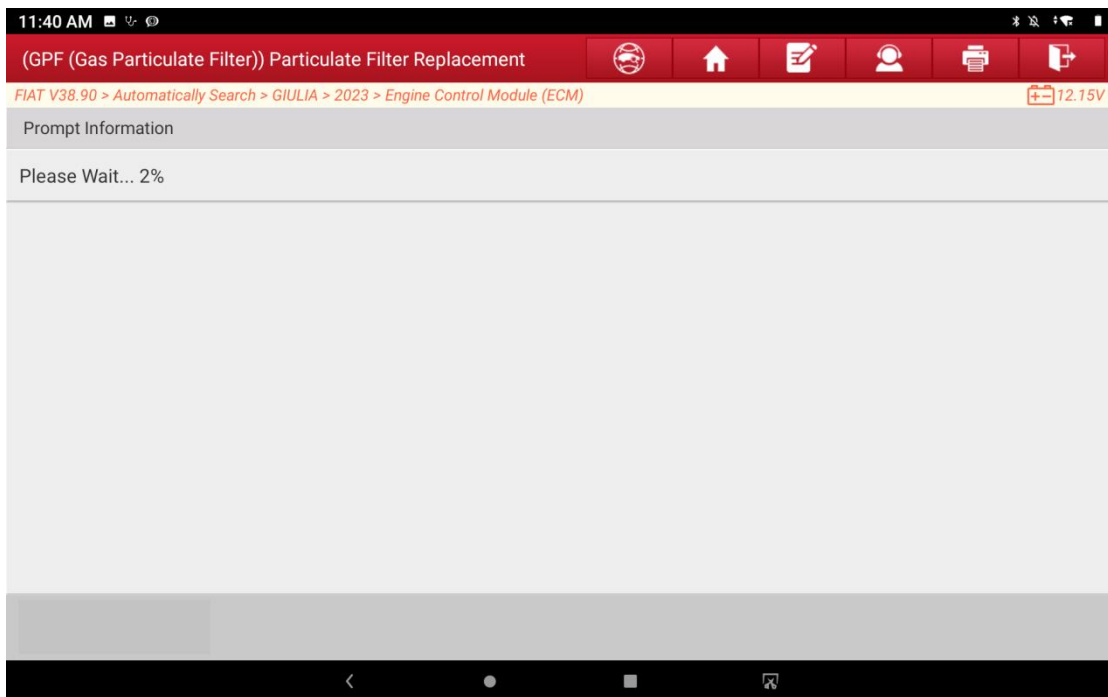

15. Click [OK].

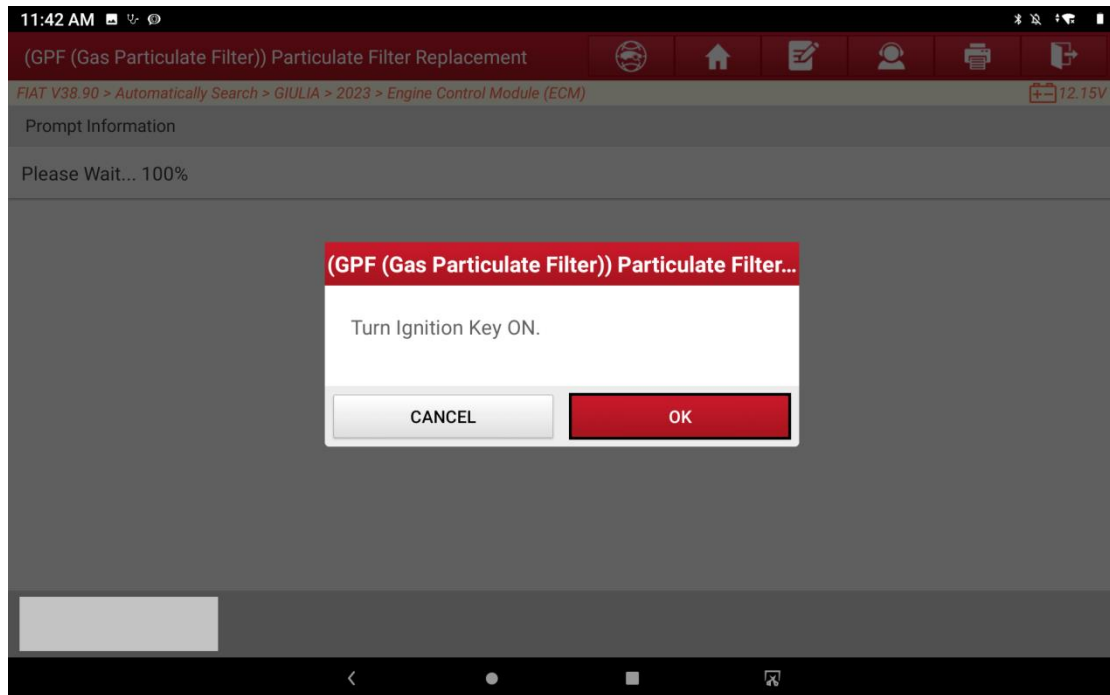

16. Click [OK]. Program execution is completed.

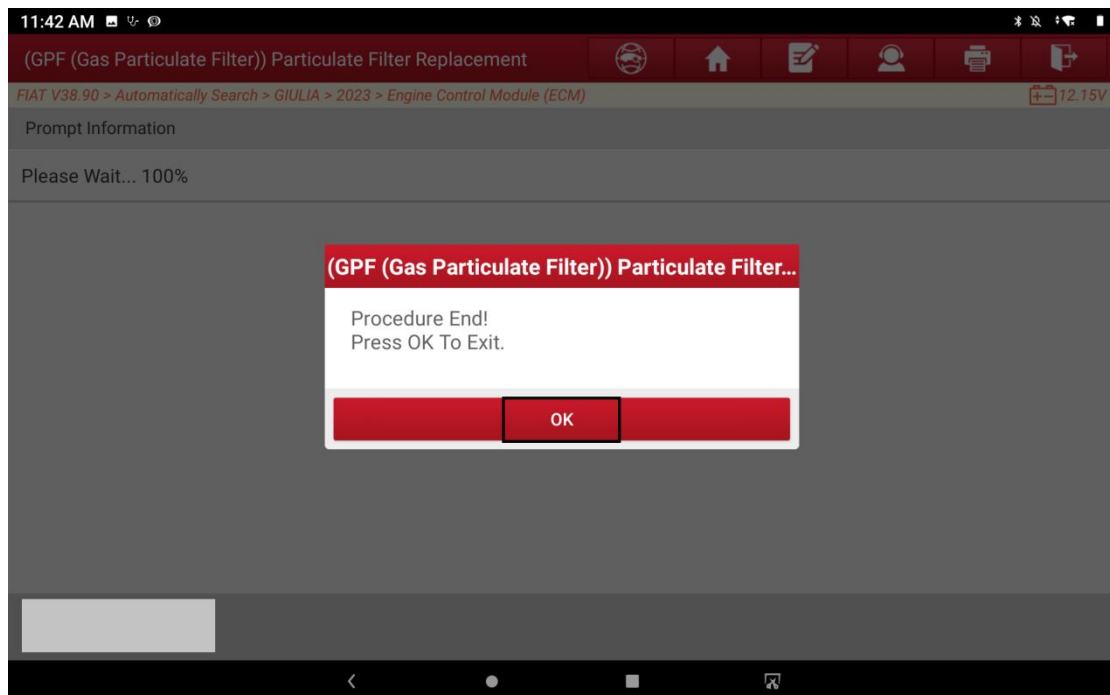

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.