

Mercedes-Benz ELV Erasing

Tested Model: Mercedes-Benz 2010

Function Description:


Mercedes-Benz W204 ELV erasing

Supported Equipment:


- Launch X-431 IMMO Pro and comprehensive diagnostic equipment equipped with G3

Procedure:


1. On an IMMO Pro, enter the Mercedes-Benz IMMO menu and choose [ECU Erasing].

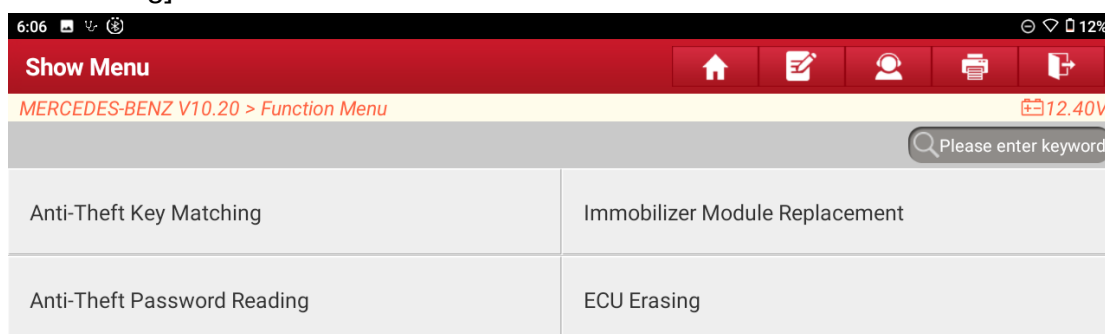


2. Choose [ELV].

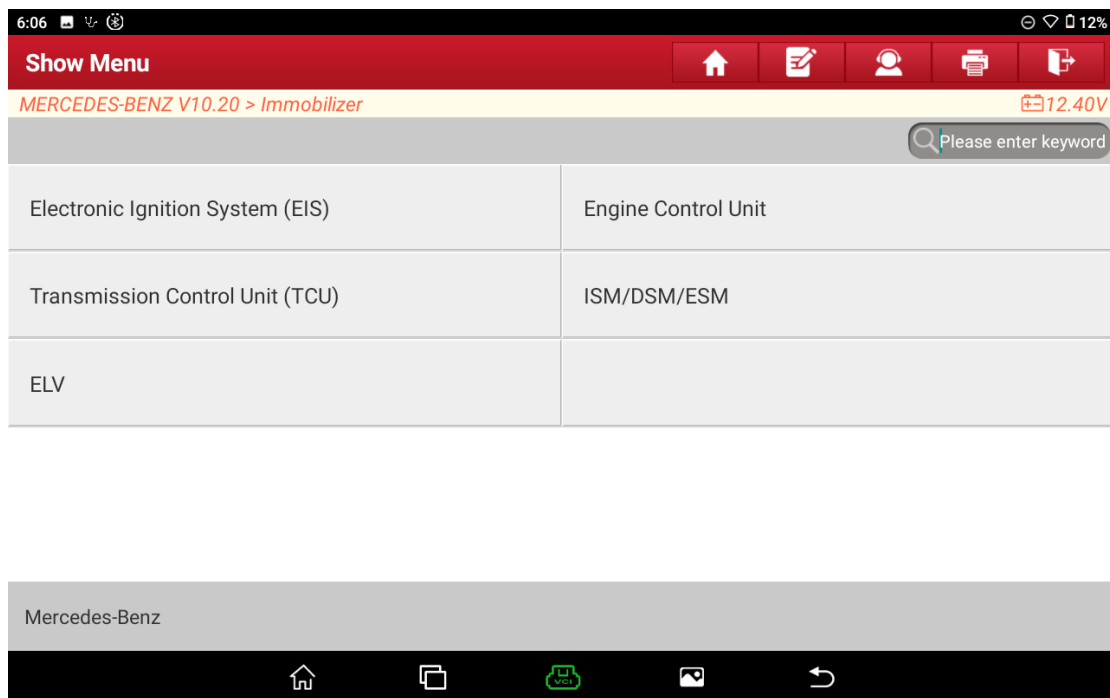


3. Choose [Wiring Diagram].

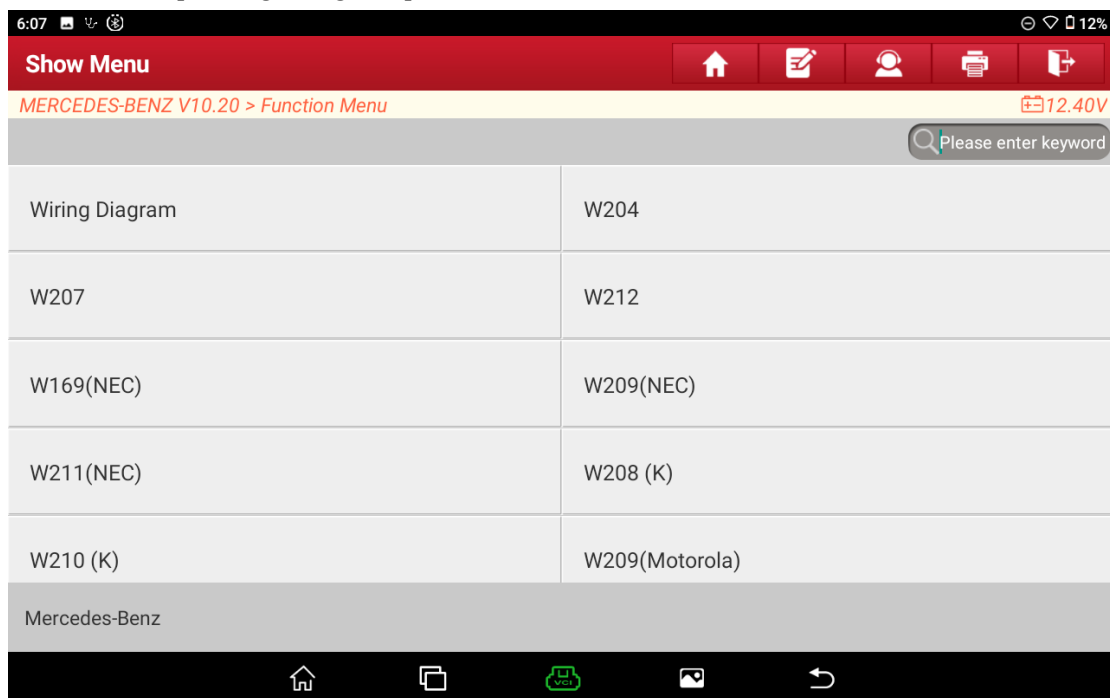


4. Choose [W204].

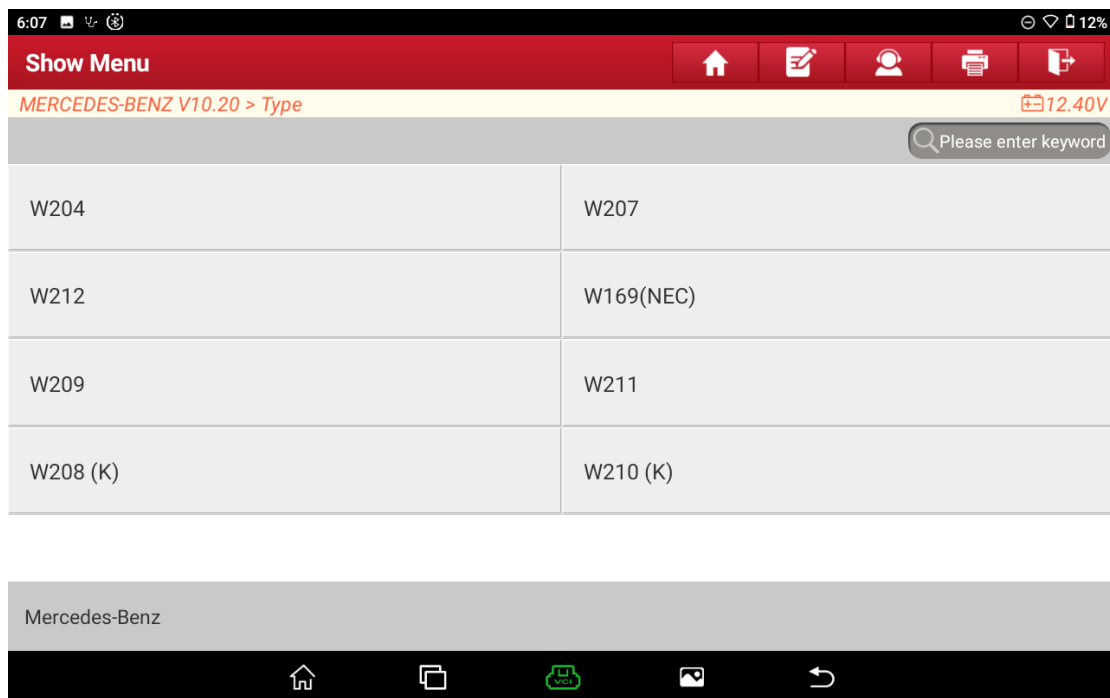


5. Choose the applicable wiring diagram according to the actual situation. Connect the used or new ELV properly, and then click "OK".

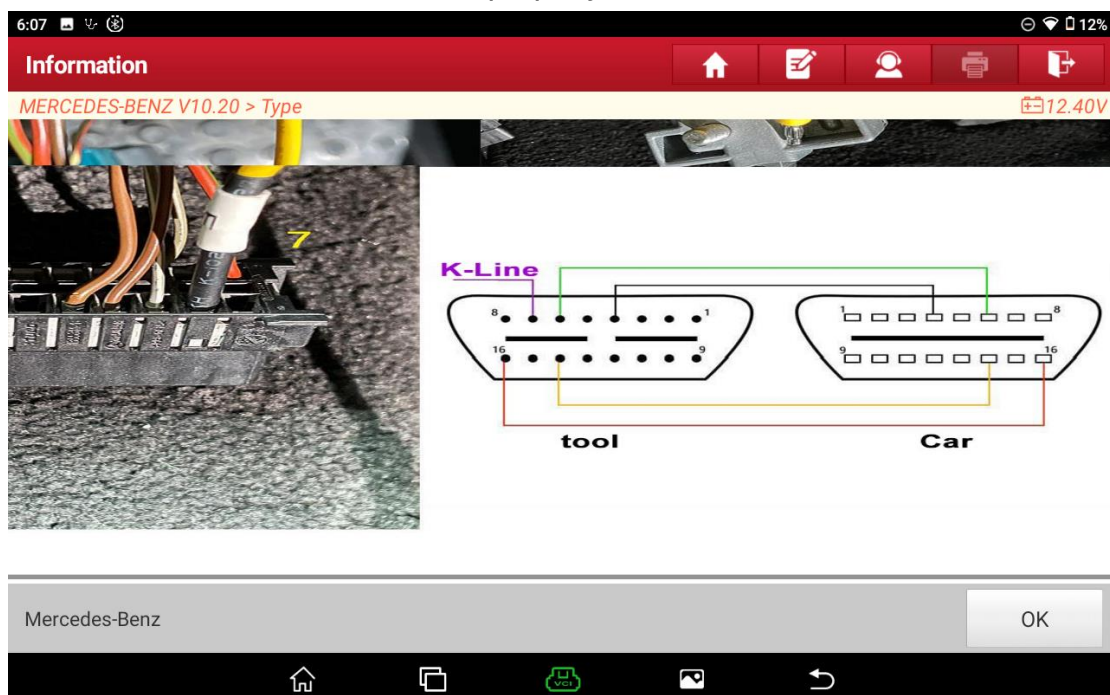


6. Click the Back icon on the bottom navigation bar.

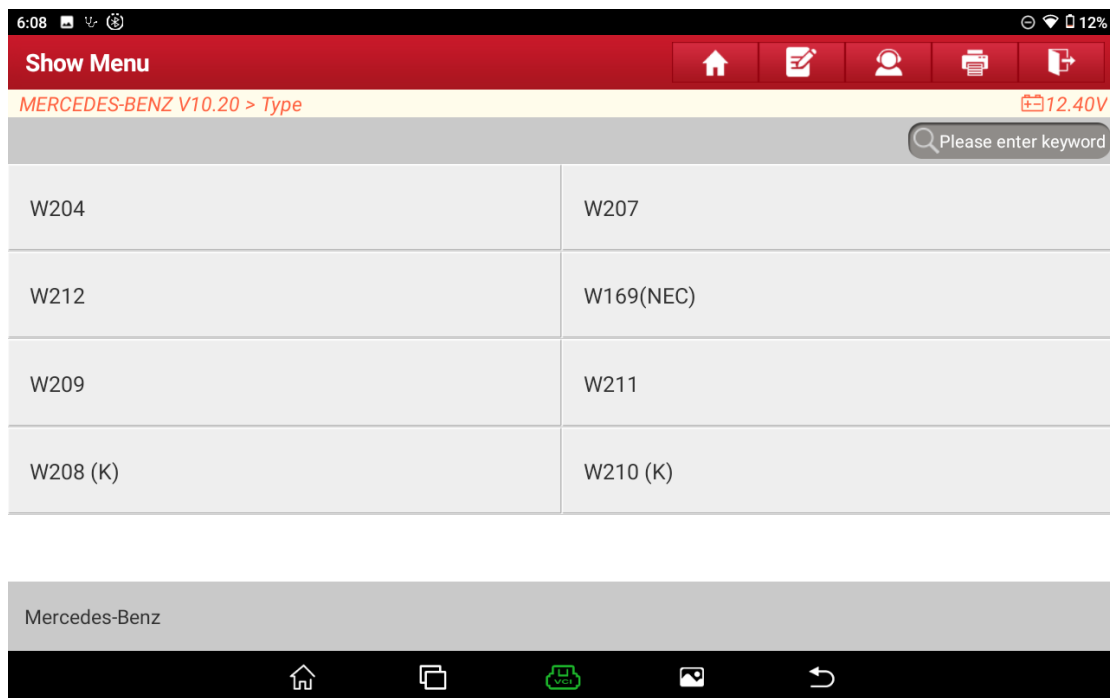


7. Choose [Completely Erase Module].

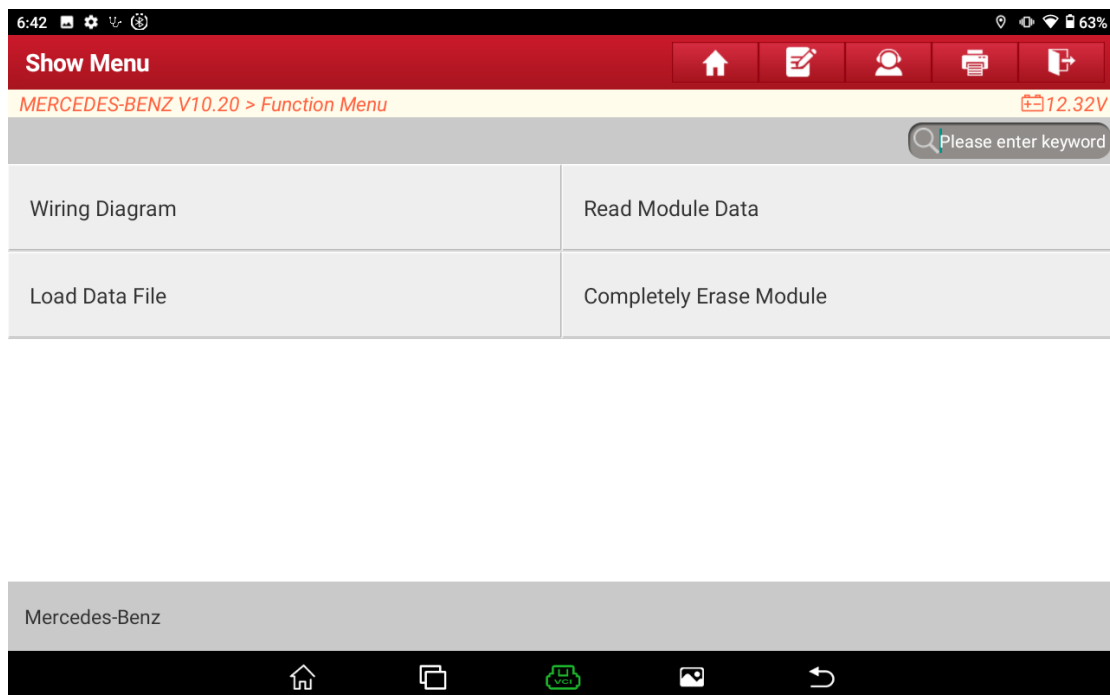


8. Confirm the network condition and click "OK".

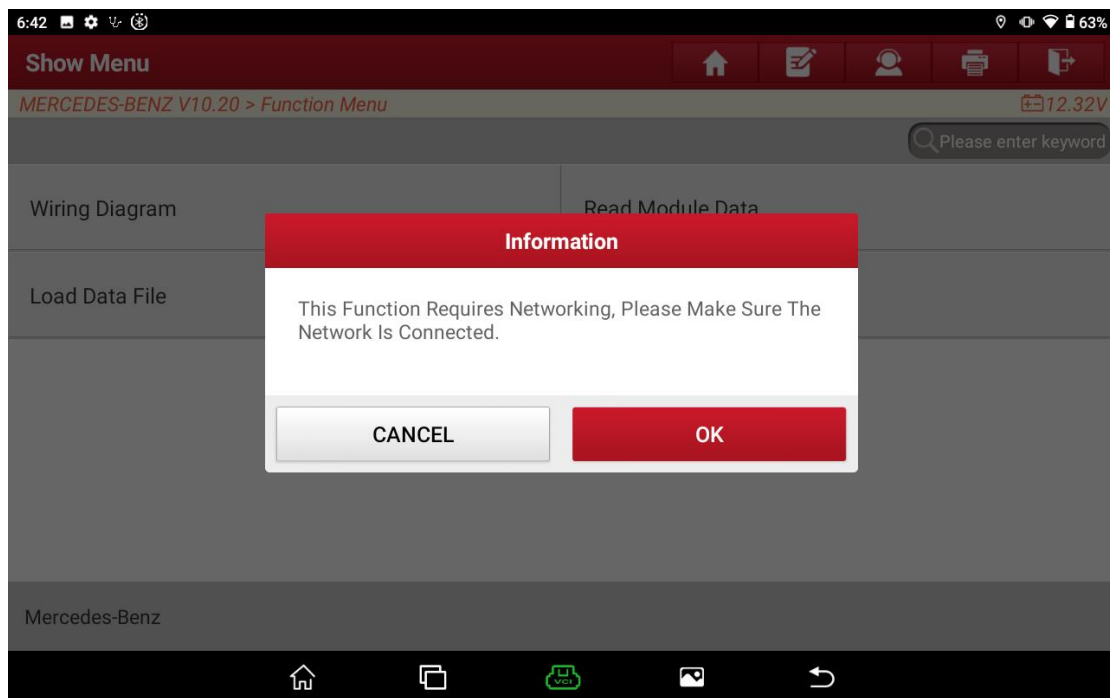


9. Choose whether to back up data according to your needs. Choose [NO] here.

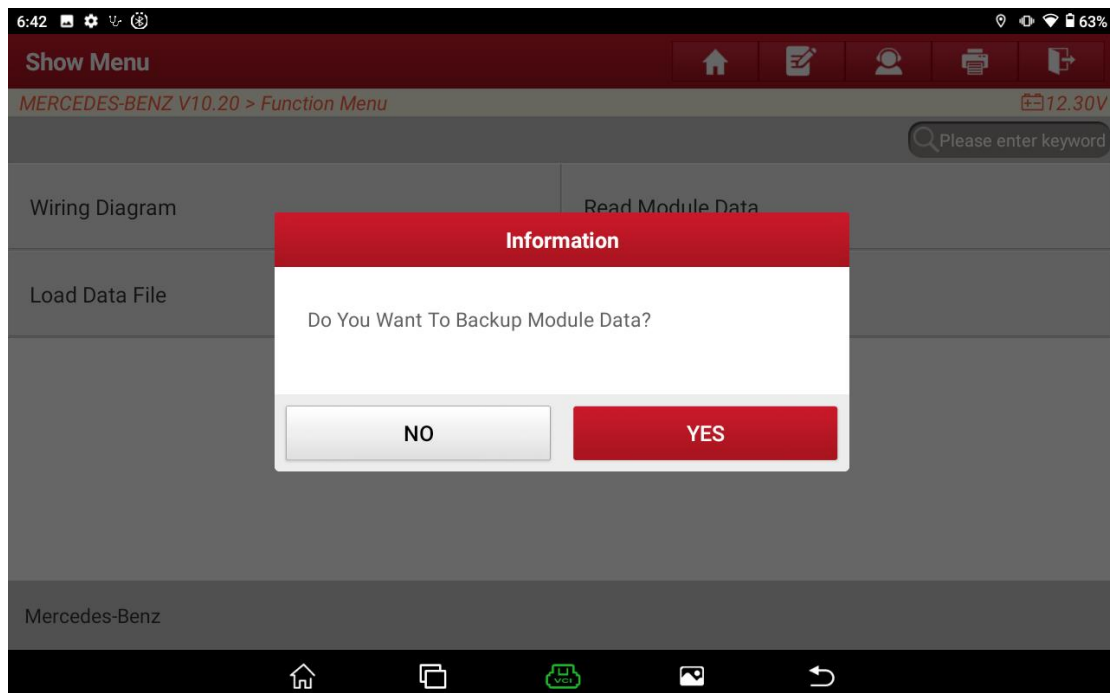

10. Networking to calculate the erase password...Please wait.

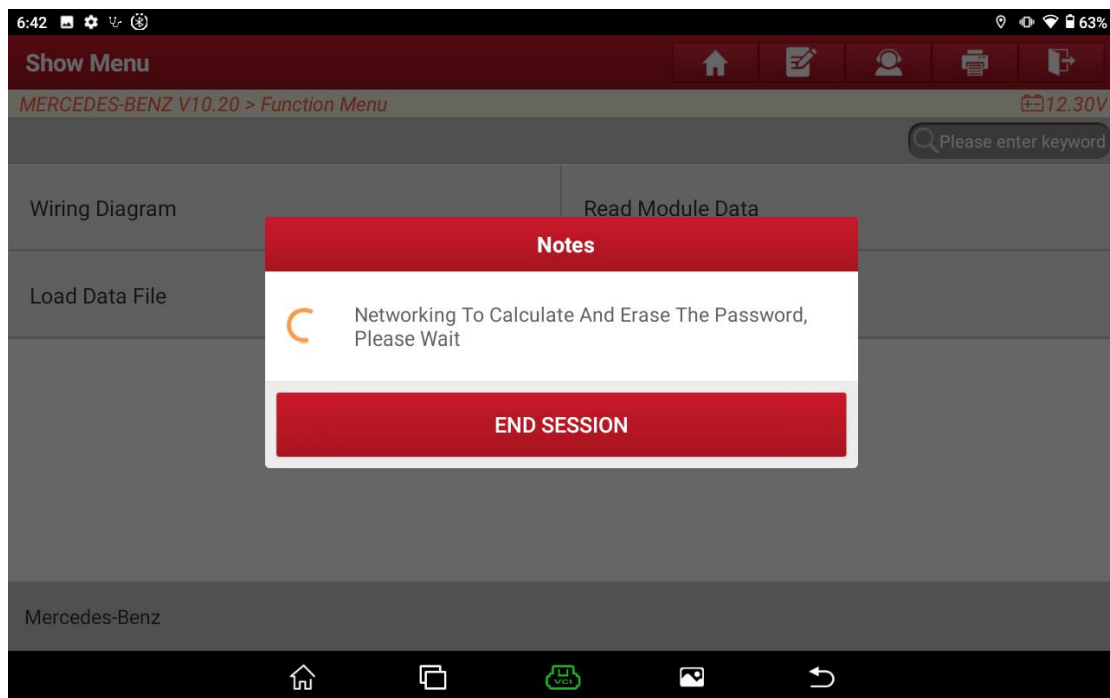

11. Click "YES".

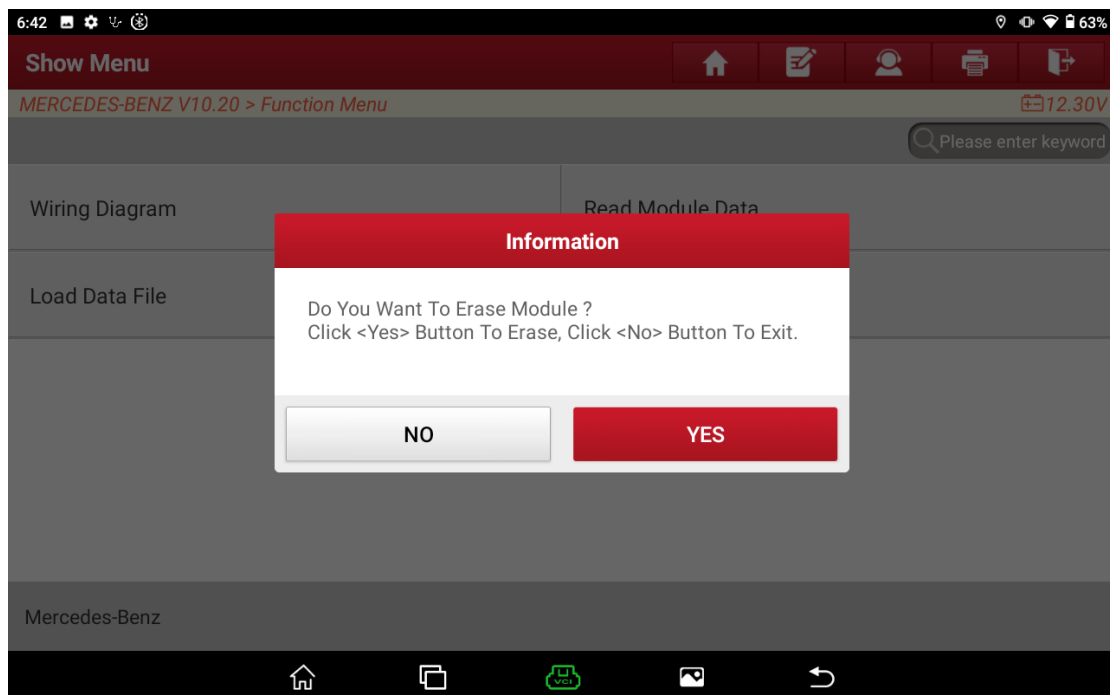

12. The information after erasing is displayed. The EIS activation status shows "No". Click "OK" to complete the function.

The screenshot shows the 'Module Information' screen for a Mercedes-Benz V10.20. The interface includes a status bar at the top with the time 6:43 and battery level 63%. Below the status bar is a red header with the title 'Module Information' and several icons. A yellow banner below the header displays 'MERCEDES-BENZ V10.20 > Module Information' and a battery voltage of 12.30V. The main content is a table with three columns: 'Name', 'Corresponding Value', and 'Status'. The table contains the following data:

Name	Corresponding Value	Status
Number	2049005912	
Initialized	Yes	
TP Cleared	No	
Personalized	No	
Activated	No	

The 'Activated' row is highlighted in yellow. Below the table is a red button labeled 'OK'. At the bottom of the screen, there is a grey bar with the text 'Mercedes-Benz' and a black bar with several icons.

Statement:

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.