# FIAT TALENTO/TANGO Particulate Filter Regeneration Method

Supported equipment: Launch's full range of comprehensive

diagnostic equipment


**Current equipment: PAD V** 


**Function description:** When the particulate filter regeneration is required for FIAT or the GPF DTC (P2463, P243F or P24A4) exists in the fault memory, this procedure must be performed.

Tested models: 2016/Fiat/TALENTO(TANGO), VIN:

ZFAFFL007J50\*\*\*\*\*

1. On a PAD V, choose [Local Diagnose] and then [FIAT] to test.

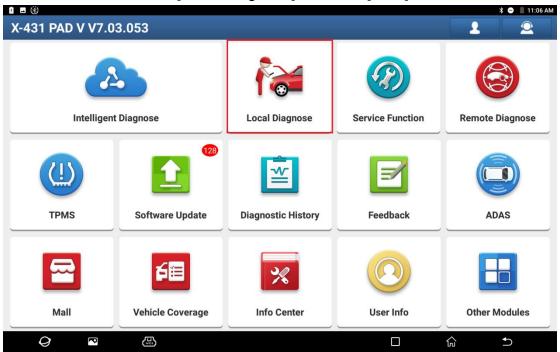

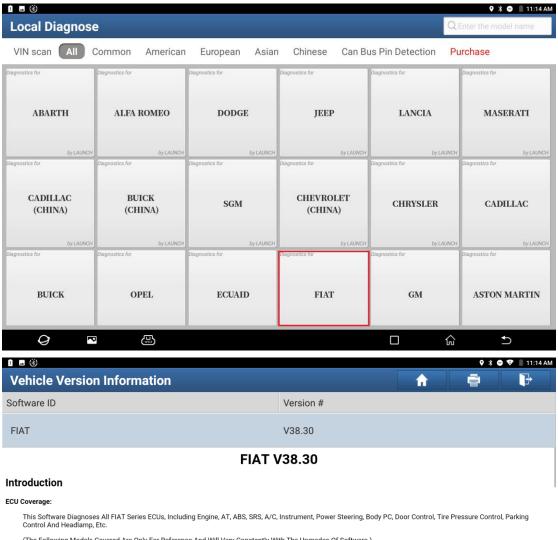

(The Following Models Covered Are Only For Reference And Will Vary Constantly With The Upgrades Of Software.)

#### Basic Functions Include:


- Reading ECU Information Reading DTCs


- Reading DTCs
   Clearing DTCs
   Reading Vehicle Running Data
   Vehicle component Operation Test

#### Special functions include:




2. Choose [Automatically Search] to identify car models automatically. After the car model is successfully identified, choose OK.

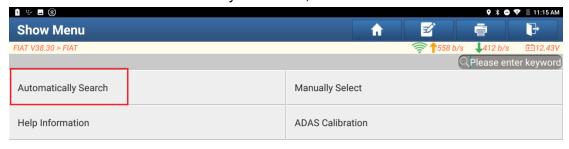

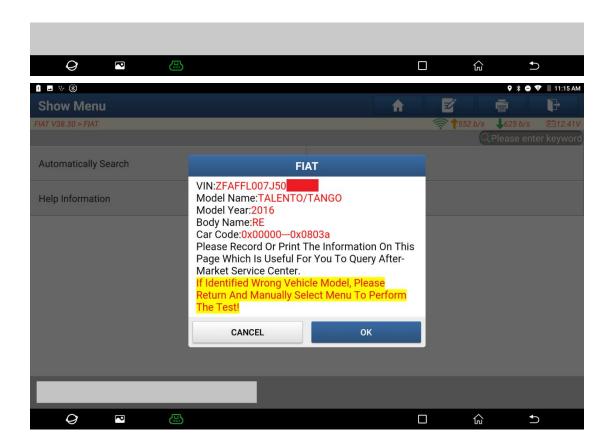


3. Choose [Yes] to unlock the SGW.

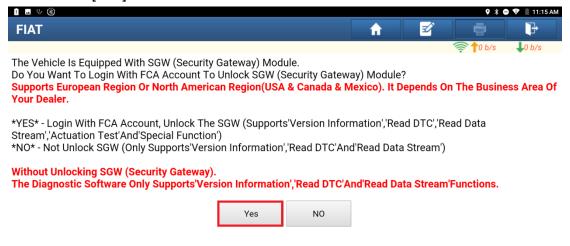





4. Choose [North America] for the region.

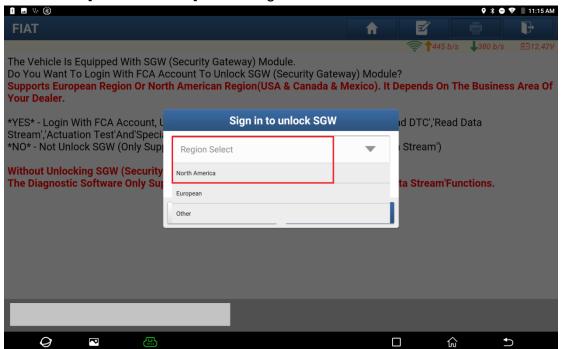


5. Input the login user name and password, and click OK.

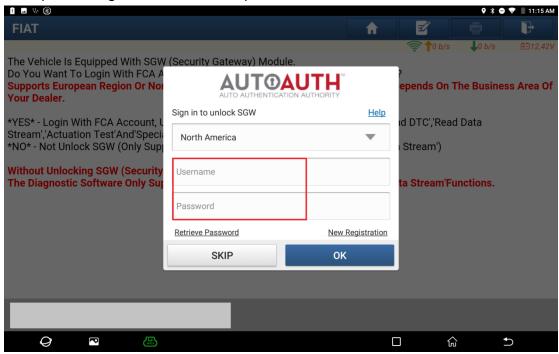


6. Unlocking is successful. Click OK.

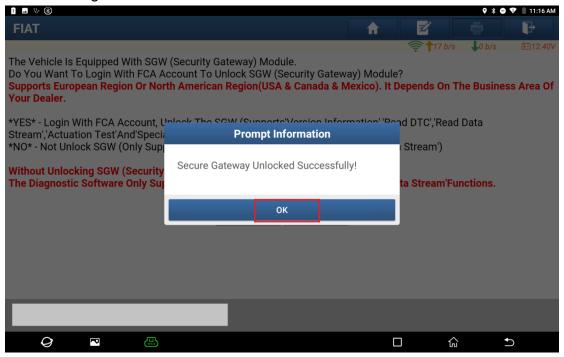


7. Click [Smart Detection] to scan the entire vehicle systems.

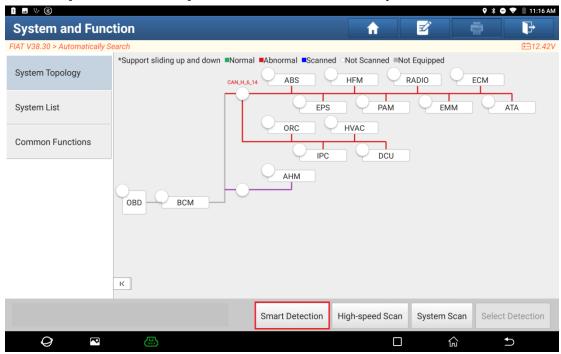


8. Click [ECM (Engine Control Module)] to access the system.

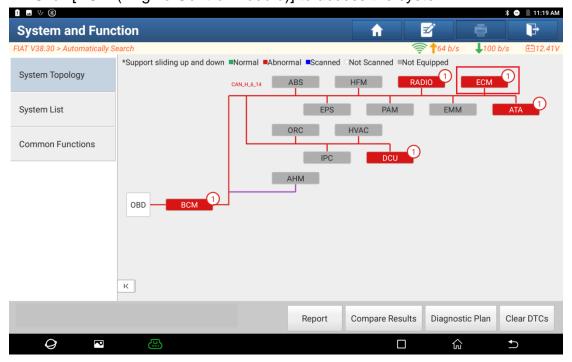

9. Click [Special Function] and click OK.

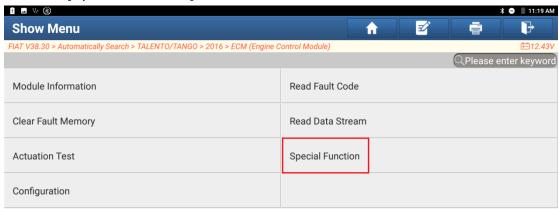

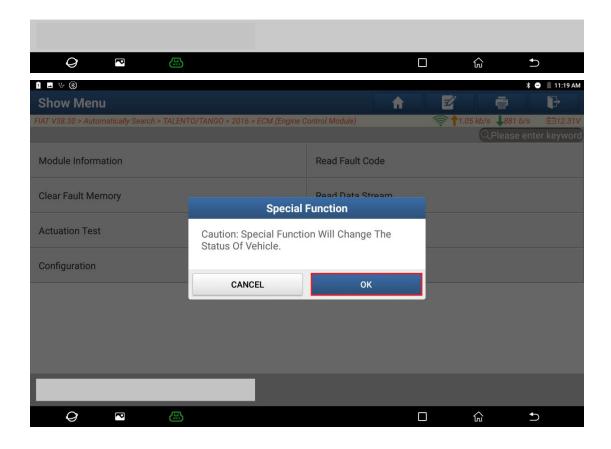



# 10. Choose [Misc Function].







# 11. Choose [Particulate Filter Regeneration].

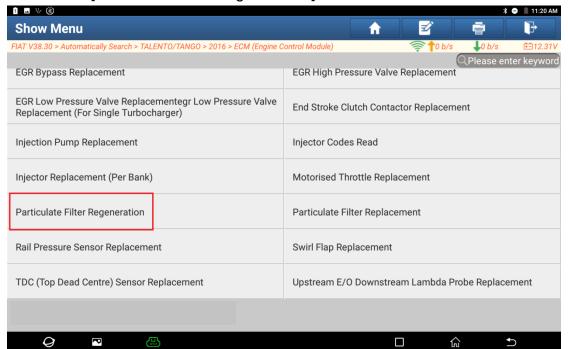

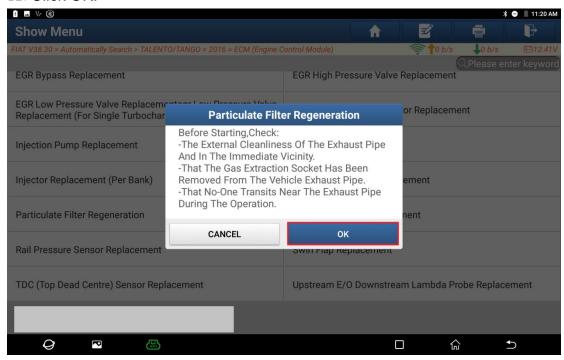



#### 13. Click OK.

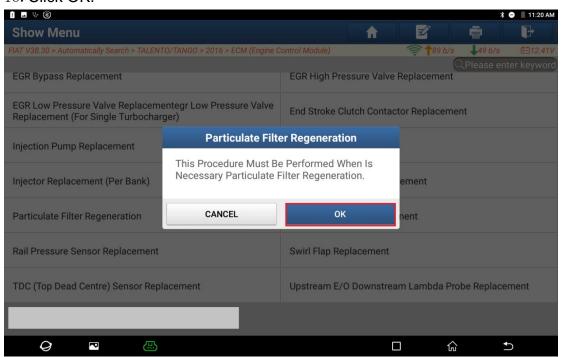

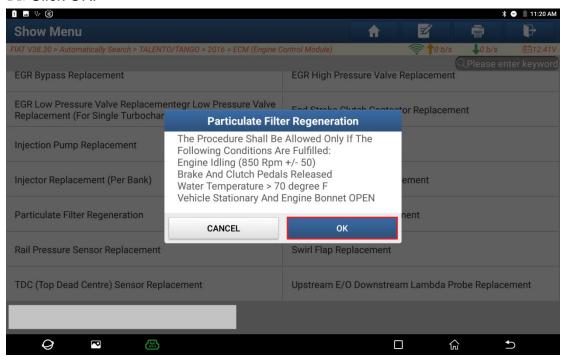



#### 15. Click OK.

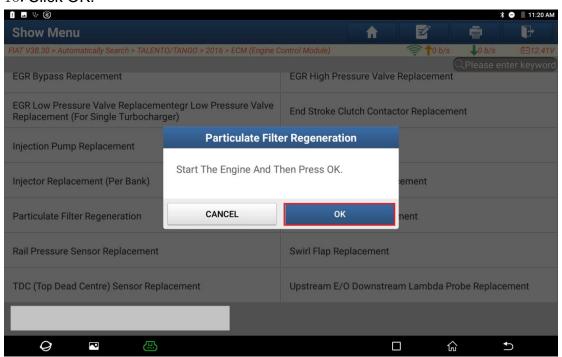

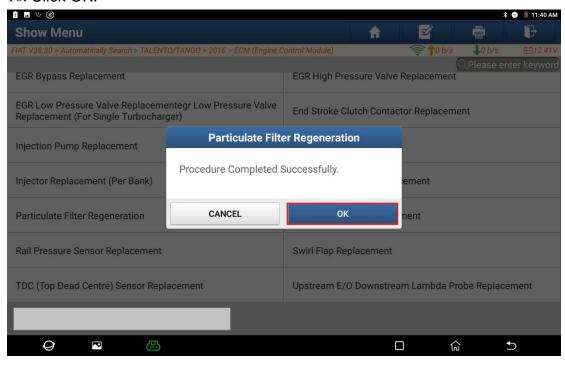



#### 17. Click OK.

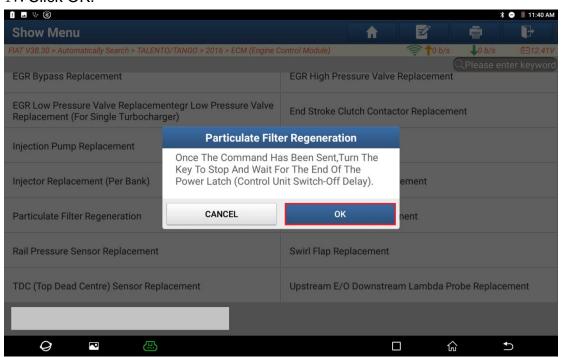

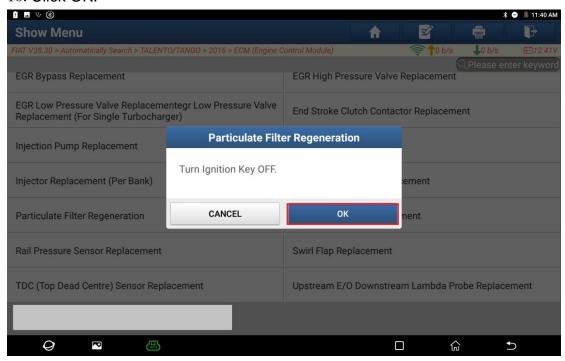


19. Wait for the countdown to end.

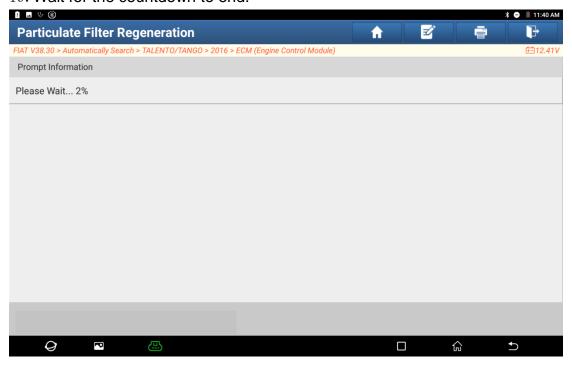

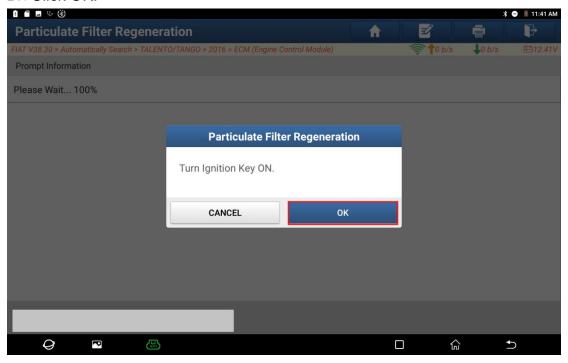

21. Click OK. Program execution is completed.

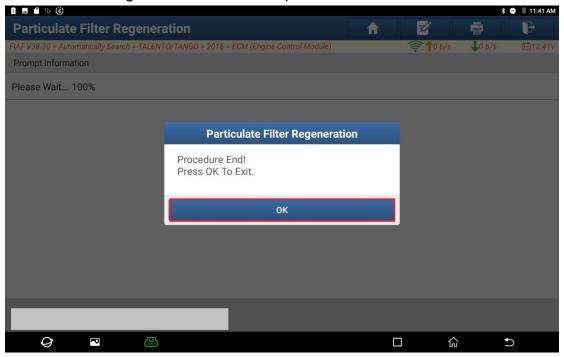

# **Statement:**

The content of this document is copyrighted by Shenzhen Launch Tech Co., Ltd., and no individual or organization may quote or reprint it without consent.