# Ford Mustang Brake System Pressure Bleeding


**Supported equipment:** Launch's full range of comprehensive diagnostic equipment

Current equipment: PAD 5


**Function description:** This program is used to perform service bleeding operations for the hydraulic control unit. If a component in the hydraulic control unit has been replaced with a new one, this program should be executed.


Tested model: Ford/2023/Mustang, VIN: 1FA6P8R04P\*\*\*\*\*\*

1. On a PAD 5, choose [Local Diagnose].

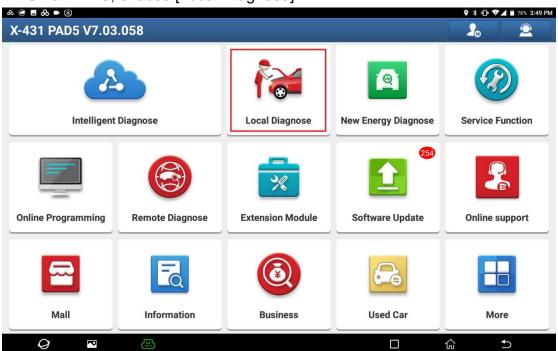

### 2. Choose [FORD] to test.

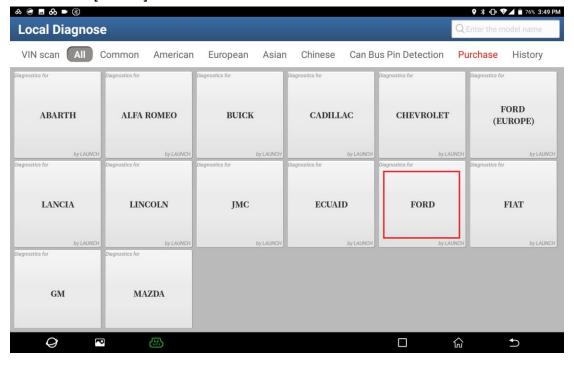

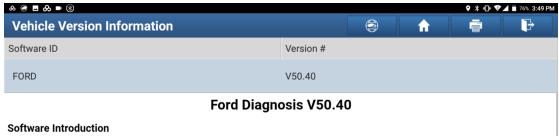


### ECU Coverage:

This Diagnostic Software Can Test For USA Ford ECUs, Including: Engine, Automatic Transmission, Anti-Lock Brake, Airbag, Air Conditioning, Dashboard, Anti-Theft, Cruise, Common Electronics, Seats, Light, etc.


- Reading ECUs
  Reading DTCs(Diagnostic trouble code)
  Clearing DTCs(Diagnostic trouble code)
  Reading Vehicle Running Data
  Vehicle Component Operation Test


- Programmable Module Installation
  ESP(Electronic Stability Program) Sensor Calibration
  PCM (Powertrain Control Module) or ICM (Instrument Control Module):
  \*Passive Anti-Theft Function (Program Additional Ignition Key, Ignition Key Code Erase And Program, Customer Spare Key Programming Enable/Disable, Parameter Reset,

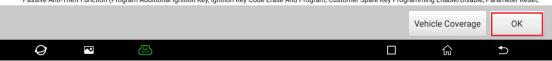


3. Choose [Automatically Search] to identify car models automatically.



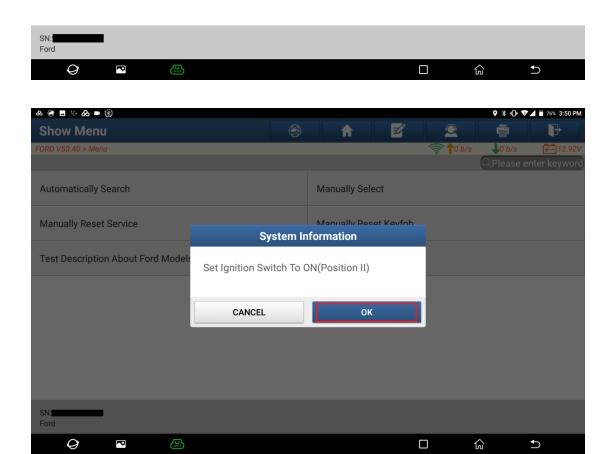


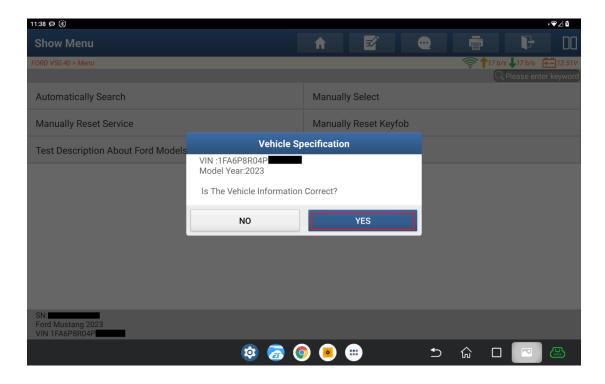


4. Click [High-speed Scan] to scan the entire vehicle systems.

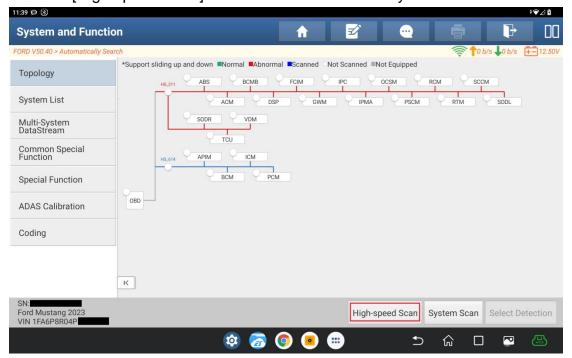

5. Click [ABS (Anti-Lock Brake System)] to access the system.

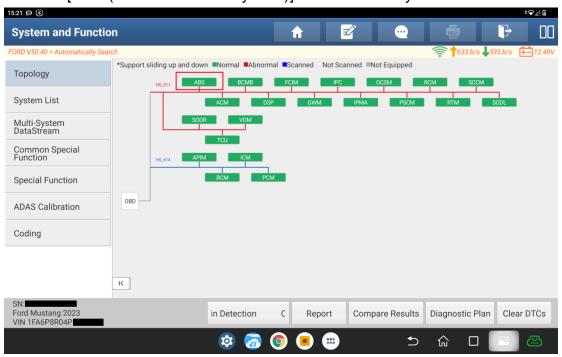

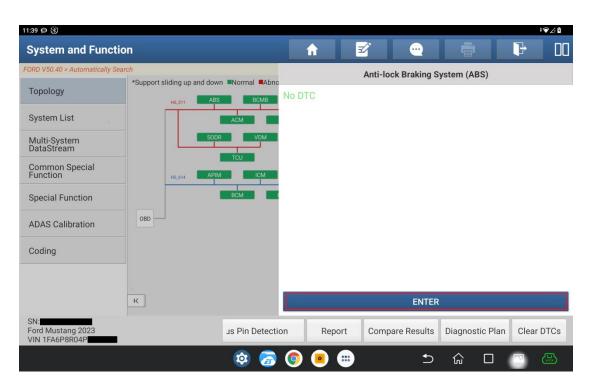

### 6. Click [Special Functions].






### 7. Click [Brake System Pressure Bleeding].







8. If a component in the hydraulic control unit has been replaced with a new one, perform this program.

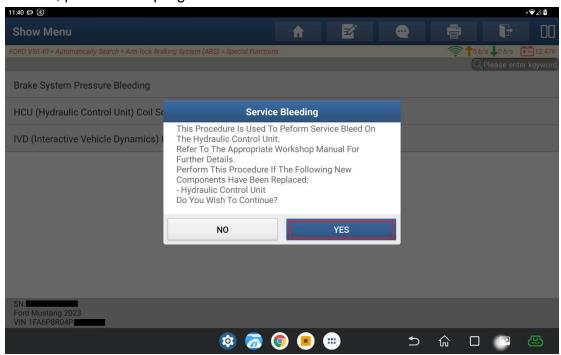


9. Follow the prompts to ensure that the initial conditions are met.

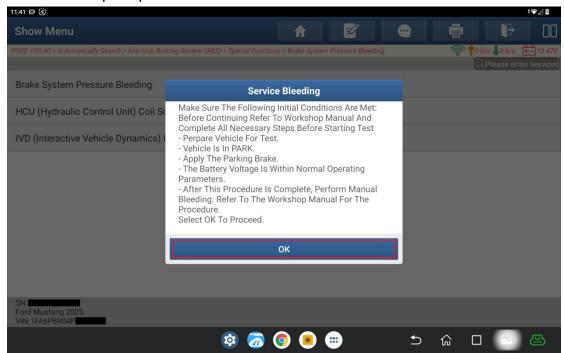



10. Turn the ignition switch to ON (position II).

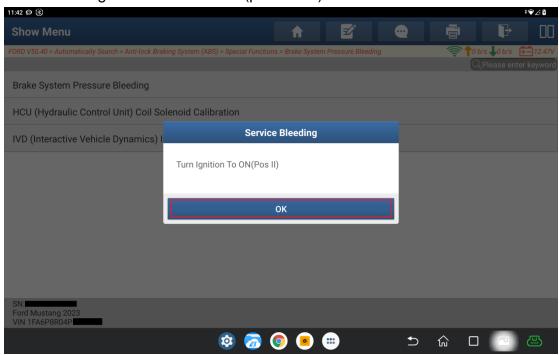


11. Follow the prompts to operate and repeat the following steps 4 times.

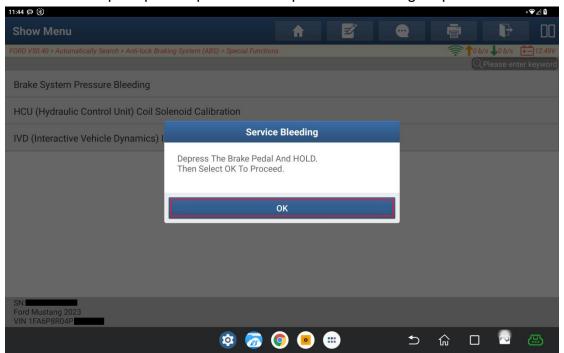

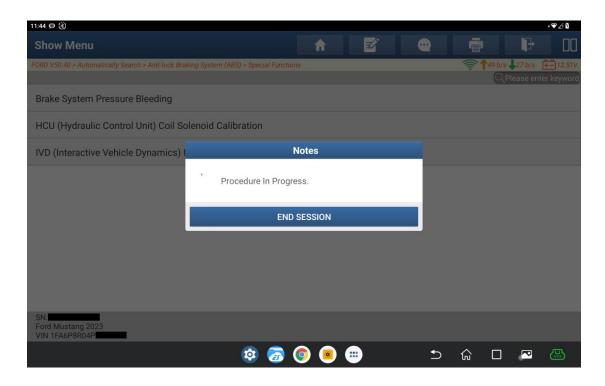


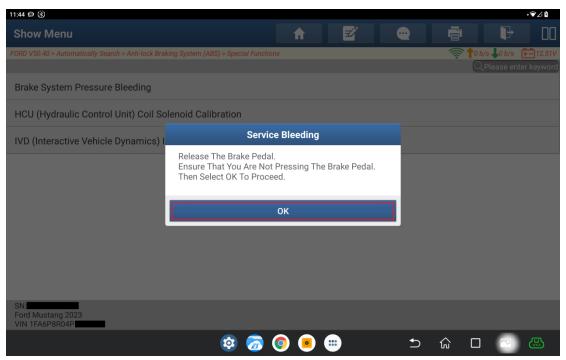

12. Turn the ignition switch to OFF (position 0).

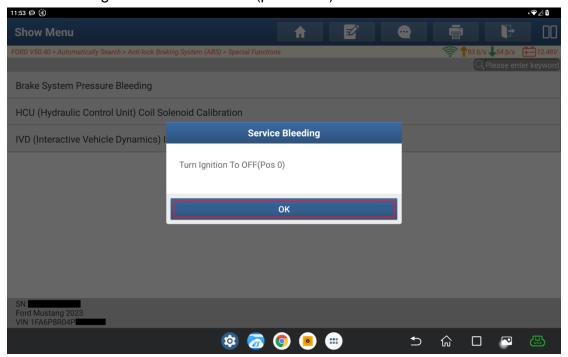

13. Program successful. Exit the program.

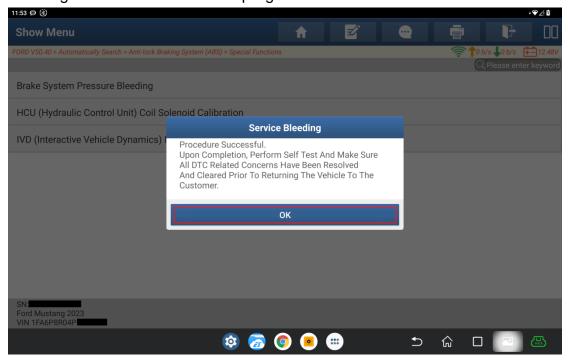

## **Statement:**

The content of this document is copyrighted by LAUNCH TECH CO., LTD., and no individual or organization may quote or reprint it without consent.